

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLACK+DECKER](#) /
- › [BLACK+DECKER TO1303SB 4-Slice Toaster Oven Instruction Manual](#)

BLACK+DECKER TO1303SB

BLACK+DECKER TO1303SB 4-Slice Toaster Oven Instruction Manual

Model: TO1303SB

Brand: BLACK+DECKER

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions before using this appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials that may

catch fire or melt.

- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

GETTING STARTED

Components

Your BLACK+DECKER TO1303SB Toaster Oven comes with the following components:

- Toaster Oven Unit
- Bake Pan
- Broil Rack
- Removable Crumb Tray

INCLUDES: BAKE PAN AND BROIL RACK



Image: The BLACK+DECKER TO1303SB Toaster Oven shown with its included bake pan and broil rack, highlighting the accessories

that come with the unit.

Before First Use

1. Remove all packing material, stickers, and plastic bands from the unit.
2. Wash the bake pan, broil rack, and crumb tray in warm, soapy water. Rinse and dry thoroughly.
3. Wipe the interior and exterior of the oven with a damp cloth. Dry thoroughly.
4. Place the toaster oven on a stable, level, heat-resistant surface, ensuring at least 4 inches of space on all sides for proper ventilation.
5. Plug the power cord into a standard electrical outlet.

OPERATING YOUR TOASTER OVEN

Controls Overview

Your toaster oven features three easy-to-use control knobs:

- **Top Knob:** Temperature/Function Selector (Min, 100-230°C / 200-450°F) and Function (Toast, Broil, Bake, Warm).
- **Middle Knob:** Toast Shade Selector (Light to Dark) and Function (Warm, Broil, Bake, Toast).
- **Bottom Knob:** Timer (0-30 minutes) with Stay-On function.



BAKE, BROIL, TOAST & KEEP WARM FUNCTIONS

Image: A detailed view of the three control knobs on the side of the toaster oven, indicating settings for temperature, toast shade, and timer, along with function icons for bake, broil, toast, and keep warm.

Functions

Toasting

The EvenToast Technology ensures consistent toasting results for up to 4 slices of bread.

1. Place the wire rack in the lower rack position.
2. Place up to 4 slices of bread directly on the wire rack.
3. Turn the top knob to the 'Toast' setting.
4. Turn the middle knob to select your desired toast shade (light to dark).
5. Turn the bottom knob to the desired toast time. The oven will begin toasting.
6. When toasting is complete, the timer will ding and the oven will turn off.



**FITS 9" PIZZA OR
4 BREAD SLICES**

Image: The toaster oven interior showing four slices of bread placed on the rack, demonstrating its capacity for toasting.

EVENTOAST TECHNOLOGY™

delivers delicious and even toast



4-SLICE TOASTER OVEN

Image: A graphic illustrating the EvenToast Technology, showing how heat is distributed evenly within the toaster oven for consistent browning of toast.

Baking

Use the bake function for casseroles, cookies, and other baked goods.

1. Place the bake pan with food on the wire rack. Position the rack in the desired slot (upper for browning, lower for general baking).
2. Turn the top knob to the 'Bake' setting and select the desired temperature.
3. Turn the bottom knob to the desired baking time. For longer baking, turn to 'Stay On'.
4. Monitor food during baking. When complete, turn the timer to 'Off' or unplug the unit.

Broiling

Ideal for browning the top of dishes or cooking thin cuts of meat.

1. Place the broil rack on top of the bake pan, then place food on the broil rack.
2. Position the rack in the upper slot for best broiling results.
3. Turn the top knob to the 'Broil' setting.
4. Turn the bottom knob to the desired broiling time. Broiling is typically done for shorter periods.

5. Always supervise food closely when broiling to prevent burning.

Keep Warm

This function is useful for keeping food warm after cooking without further browning or drying out.

1. Place cooked food in the bake pan or an oven-safe dish on the wire rack.
2. Turn the top knob to the 'Warm' setting.
3. Turn the bottom knob to the desired time or 'Stay On' for continuous warming.



Make a delicious, quick dinner using all four functions: Bake a chicken breast, broil vegetables, toast garlic bread and keep it all warm until you're ready to eat! All done in your toaster oven



The 4-slice toaster oven is perfect for making your favorite frozen snack—chicken nuggets, mozzarella sticks, egg rolls, mini quiches or whatever you're craving



Image: A collage showcasing different types of food that can be prepared in the toaster oven, including chicken, mozzarella sticks, egg rolls, and mini quiches, demonstrating its versatility.

CARE AND CLEANING

Proper care and cleaning will ensure the longevity and optimal performance of your toaster oven.

1. Always unplug the toaster oven from the electrical outlet and allow it to cool completely before cleaning.
2. **Removable Crumb Tray:** Slide out the crumb tray from the bottom front of the oven. Discard crumbs. Wipe the tray with a damp cloth and dry thoroughly. Reinsert the tray.



REMOVEABLE CRUMB TRAY FOR EASY CLEANING

Image: A hand demonstrating the removal of the crumb tray from the front of the toaster oven, illustrating the ease of cleaning this component.

3. **Wire Rack, Bake Pan, Broil Rack:** These accessories can be washed in warm, soapy water or placed in the dishwasher. Rinse and dry thoroughly.
4. **Interior:** Wipe the interior walls with a damp cloth or sponge. For stubborn stains, use a mild liquid cleanser. Do not use abrasive cleaners or metal scouring pads on the interior.
5. **Exterior:** Wipe the exterior surface with a damp cloth or sponge. Dry thoroughly. Avoid using abrasive cleaners or polishes that may scratch the finish.
6. Do not immerse the toaster oven unit in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your toaster oven, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a working electrical outlet.
Oven does not turn on.	Timer is not set.	Turn the timer knob to the desired cooking time or to the 'Stay On' position.
Food is not cooking evenly.	Food is placed incorrectly or oven needs preheating.	Ensure food is centered on the rack. For baking, preheat the oven for 5-10 minutes before placing food inside. Rotate food halfway through cooking if necessary.
Excessive smoke during operation.	Food residue or grease buildup.	Unplug the oven and allow it to cool. Clean the interior, crumb tray, and accessories thoroughly to remove any food particles or grease.
Toast is too light or too dark.	Toast shade setting is incorrect.	Adjust the middle knob (toast shade selector) to a lighter or darker setting as desired for future use.

SPECIFICATIONS

Key technical specifications for the BLACK+DECKER TO1303SB 4-Slice Toaster Oven:

Feature	Value
Brand	BLACK+DECKER
Model Name	TO1303SB
Product Dimensions (D x W x H)	8.8" x 14.5" x 10.8"
Item Weight	7.5 pounds
Power Source	Corded Electric
Control Type	Knob
Included Components	Bake Pan, Broil Rack, Crumb Tray
Capacity	4 Slices of Bread / 9" Pizza
Functions	Bake, Broil, Toast, Keep Warm

WARRANTY AND SUPPORT

BLACK+DECKER products are manufactured to meet high-quality standards. This product typically comes with a **two-year limited warranty** from the date of purchase, covering defects in material or workmanship.

For warranty claims, technical support, or general inquiries, please visit the official BLACK+DECKER website or contact their customer service department. Keep your proof of purchase for warranty validation.

You can find more information and support resources on the official [BLACK+DECKER Store on Amazon](#).