

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Farberware](#) /

› [Farberware Electric Rotisserie Mini Grill User Manual](#)

Farberware Electric Rotisserie Mini

Farberware Electric Rotisserie Mini Grill User Manual

Model: Electric Rotisserie Mini

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your Farberware Electric Rotisserie Mini Grill. Please read all instructions carefully before using the appliance to ensure optimal performance and safety.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

COMPONENTS AND FEATURES

Your Farberware Electric Rotisserie Mini Grill comes with several key components designed for versatile cooking. Familiarize yourself with each part before operation.



Figure 1: The complete Farberware Electric Rotisserie Mini Grill assembly, showcasing the main unit, grill grate, and rotisserie components including the spit rod and forks. This view highlights the overall compact design and the integrated stand.



Figure 2: A top-down view of the grill, illustrating the removable grill grate and the underlying heating element. This perspective is useful for understanding the cooking surface and heat distribution.



Figure 3: A side profile of the Farberware Electric Rotisserie Mini Grill, showing the main body and the integrated stand.

This view helps in understanding the appliance's footprint and height.



Figure 4: Another top view, providing a clearer look at the heating element's design and placement within the grill base.

This is crucial for understanding how heat is generated for grilling and rotisserie functions.

Included Components:

- **Main Unit:** The primary body of the grill containing the heating element and housing.
- **Grill Grate:** Removable cooking surface for direct grilling.
- **Bottom Tray:** Collects drippings during cooking.
- **Heating Element:** Provides the heat for cooking.
- **Power Cord:** Connects the appliance to an electrical outlet.
- **Rotisserie Motor:** Powers the rotation of the rotisserie spit.
- **Rotisserie Rod (Spit):** The central rod for holding food during rotisserie cooking.
- **Rotisserie Forks (2):** Secure food onto the rotisserie rod.
- **Arms to hold rod:** Supports for the rotisserie rod within the unit.
- **Stand:** The base structure that elevates the grill for optimal use.

SETUP AND ASSEMBLY

Before first use, ensure all packaging materials are removed and the appliance is assembled correctly.

1. Unpack all components from the box.
2. Place the main unit securely on a stable, heat-resistant surface. Ensure adequate clearance around the appliance for ventilation.
3. Insert the bottom tray into its designated slot beneath the heating element.
4. For grilling, place the grill grate directly over the heating element.
5. For rotisserie cooking, ensure the rotisserie motor is securely attached to its designated slot. Assemble the rotisserie rod with the forks, securing your food item, and then place the rod onto the support arms, engaging it with the motor.
6. Before plugging in, ensure the power switch (if present) is in the "OFF" position.

OPERATING INSTRUCTIONS

General Operation:

1. Ensure the appliance is properly assembled and placed on a stable surface.
2. Plug the power cord into a standard electrical outlet.
3. Preheat the grill for 5-10 minutes before placing food on it.
4. Always monitor food during cooking.
5. After cooking, unplug the appliance and allow it to cool completely before cleaning.

Using the Grill Function:

1. Place the grill grate over the heating element.
2. Turn on the appliance.
3. Allow the grill to preheat.
4. Place food directly on the grill grate.
5. Cook until desired doneness, turning food as needed.

Using the Rotisserie Function:

1. Prepare your food item (e.g., chicken, roast) and secure it firmly onto the rotisserie rod using the forks. Ensure the food is balanced to prevent uneven rotation.
2. Insert one end of the rotisserie rod into the motor drive socket and rest the other end on the opposing support arm.
3. Ensure the bottom tray is in place to catch drippings.
4. Turn on the appliance and activate the rotisserie motor.
5. Cook until the food reaches the appropriate internal temperature. Cooking times will vary based on food type and size.
6. Use heat-resistant gloves or tools to carefully remove the hot rotisserie rod and food after cooking.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance.

1. Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. Remove the grill grate, bottom tray, and rotisserie components.
3. Wash removable parts (grill grate, bottom tray, rotisserie rod, forks) in warm, soapy water. Rinse thoroughly and dry completely. These parts may also be dishwasher safe, refer to specific product labeling if available.
4. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit or power cord in water or any other liquid.
5. Do not use abrasive cleaners or scouring pads, as they may damage surfaces.
6. Ensure all parts are dry before reassembling or storing the appliance.

TROUBLESHOOTING

If you encounter issues with your Farberware Electric Rotisserie Mini Grill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; damaged cord/plug.	Ensure cord is securely plugged into a working outlet. Check household circuit breaker. Do not use if cord or plug is damaged; contact customer support.
Food not cooking evenly.	Uneven food placement on grill; rotisserie food not balanced.	Distribute food evenly on the grill grate. For rotisserie, ensure food is centered and tightly secured on the spit rod.
Excessive smoke.	Accumulated grease/food residue; high-fat food.	Clean the bottom tray and heating element area regularly. Trim excess fat from food before cooking. Ensure proper ventilation.
Rotisserie motor not turning.	Rod not properly engaged; motor malfunction; food too heavy.	Ensure the rotisserie rod is correctly seated in the motor drive. Check if the food item exceeds the appliance's weight capacity.

SPECIFICATIONS

Model: Electric Rotisserie Mini

Brand: Farberware

Item Weight: 12 pounds

Cooking Surface: Approximately 8" X 11" (as per product description)

First Available Date: October 5, 2013

ASIN: B00FNDKXJM

WARRANTY AND SUPPORT

Farberware products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Farberware website. For technical support, replacement parts, or service inquiries, please contact Farberware customer service through their official channels.

Please retain your purchase receipt as proof of purchase for any warranty claims.