

Croove FBA_733

Croove Portable Megaphone Bullhorn Instruction Manual

Model: FBA_733

1. INTRODUCTION

Thank you for choosing the Croove Portable Megaphone Bullhorn. This powerful and versatile device is designed for clear and effective voice projection over long distances, featuring a 30-watt output and an 800-yard voice range. It includes built-in siren and music functions, making it ideal for various applications such as coaching, event management, public speaking, and emergency signaling.



2. KEY FEATURES

- **Powerful 30-Watt Output:** Projects voice up to 800 yards for maximum reach.
- **Volume Control:** Adjustable volume slider for precise sound level management.
- **Built-in Siren:** Instant alert function for emergencies or attention-grabbing.
- **Built-in Music:** Features the classic "Ole Ole Ole" song for engaging crowds.
- **Lightweight & Portable:** Easy to carry with a foldable handle and convenient carrying strap.
- **Durable Construction:** Made from ABS Plastic for long-lasting use.



Figure 2: Key features including foldable handle and carrying strap.

3. SETUP

3.1 Battery Installation

The megaphone requires 4 'D' batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment at the base of the megaphone handle.
2. Press the Battery Cover Release button to open the compartment.
3. Insert 4 'D' batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.



COMPACT &
LIGHTWEIGHT



VOLUME
CONTROL



COVERS OVER
800 YARDS



EASY HAND
GRIP



SUPER POWERFUL
BULLHORN 30 WATTS



POWER ON/OFF SWITCH
WITH LED INDICATOR



BUILT-IN SIREN
AND MUSIC
FEATURES THE
CLASSIC "OLÉ OLÉ"

SIMPLE SETUP

place batteries,
click, speak!

Requires
4 'D'
Batteries
*not included



Figure 3: Battery installation for the megaphone.

4. OPERATION

The megaphone features intuitive controls for easy use. Refer to Figure 4 for control button locations.



Figure 4: Multi-function control panel.

4.1 Powering On/Off and Volume Control

1. To power on the megaphone, slide the **On/Off** switch to the 'On' position. A red power light will illuminate.
2. Adjust the voice volume using the **Volume Control** slider located below the buttons. Slide it up for louder volume and down for lower volume.
3. To power off, slide the **On/Off** switch to the 'Off' position.

4.2 Using the Siren and Music Functions

- **Siren:** Press and hold the **Siren** button to activate the built-in siren sound. Release the button to stop the siren.
- **Music:** Press the **Music** button to play the pre-recorded "Ole Ole Ole" song. Press it again to stop the music.

4.3 Voice Projection

Speak clearly into the microphone located at the rear of the megaphone. Ensure the volume is adjusted to your desired level for optimal projection.

Your browser does not support the video tag.

Video 1: Demonstrating the megaphone's use at a race track for clear communication.

5. MAINTENANCE

- **Cleaning:** Wipe the megaphone with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the megaphone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the megaphone will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or low volume	Batteries are low or incorrectly installed; Volume slider is too low; Power switch is off.	Replace batteries with fresh 'D' batteries, ensuring correct polarity. Adjust volume slider upwards. Ensure power switch is in the 'On' position. Check battery contacts for secure connection.
Siren or Music not working	Megaphone is not powered on; Button not pressed correctly.	Ensure the megaphone is powered on. Press the respective button firmly.

7. SPECIFICATIONS

Attribute	Detail
Brand Name	Croove
Model Name	FBA_733
Item Weight	1.2 Pounds
Item Dimensions (LxWxH)	6.3 x 10.08 x 6.42 inches
Material	ABS Plastic
Color	Red & White
Power Output	30 Watts
Voice Range	Up to 800 Yards

Attribute	Detail
Batteries Required	4 'D' batteries (not included)

8. WARRANTY INFORMATION

This Croove Portable Megaphone Bullhorn comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

9. SUPPORT

For further assistance, technical support, or warranty inquiries regarding your Croove Portable Megaphone Bullhorn, please visit the official Croove store on Amazon or contact their customer service directly. Refer to your purchase documentation for specific contact details.