



Manuals.plus /

- › Anker /
- › Anker USB Wired Vertical Mouse AK-98ANWVM-BA User Manual

**Anker AK-98ANWVM-BA**

# Anker USB Wired Vertical Mouse User Manual

Model: AK-98ANWVM-BA

## INTRODUCTION

---

This manual provides instructions for the Anker USB Wired Vertical Mouse. This ergonomic mouse is designed to reduce wrist and arm strain by promoting a natural "handshake" position, enhancing comfort during extended computer use.



*Image: The Anker USB Wired Vertical Mouse, showcasing its ergonomic design and black finish.*

## PACKAGE CONTENTS

---

Verify that all items are present in your package:

- 1 x Anker Vertical Ergonomic Optical Wired Mouse (with 4.9 ft / 1.5m USB cable)
- 1 x Instruction Manual

## PRODUCT OVERVIEW

---

Familiarize yourself with the buttons and features of your Anker Vertical Mouse:

ANKER

The World's  
**NO.1**  
Mobile Charging Brand



*Image: Diagram of the Anker Vertical Mouse highlighting its various buttons: DPI Switch Button, Previous Page Button, Next Page Button, Scroll Wheel, Left Button, and Right Button.*

1. **Left Button:** Standard left-click function.
2. **Right Button:** Standard right-click function.
3. **Scroll Wheel:** Used for scrolling up and down. Can also be pressed for middle-click functionality.
4. **DPI Switch Button:** Adjusts the mouse sensitivity (DPI).
5. **Previous Page Button:** Navigates back in web browsers or file explorers.
6. **Next Page Button:** Navigates forward in web browsers or file explorers.

## SETUP

Follow these steps to set up your Anker USB Wired Vertical Mouse:

1. **Connect the USB Cable:** Plug the USB connector of the mouse into an available USB port on your computer.
2. **Driver Installation:** The mouse is plug-and-play. Your operating system (Windows, Linux) will automatically detect and install the necessary drivers. No additional software installation is required.
3. **Ready for Use:** Once the drivers are installed, the mouse is ready for immediate use.

## OPERATING INSTRUCTIONS

Using your Anker Vertical Mouse is similar to a traditional mouse, with added ergonomic benefits and

specific button functions:

- **Basic Movement:** Grip the mouse in a natural "handshake" position. Move the mouse across your desk to control the cursor on the screen.
- **DPI Adjustment:** Press the **DPI Switch Button** (located near the top of the thumb rest) to cycle through the available DPI settings (1000 DPI and 1600 DPI). This changes the cursor speed and sensitivity. Select the DPI that best suits your preference and task.
- **Navigation Buttons:** Use the **Previous Page Button** and **Next Page Button** (located above the thumb rest) for quick navigation in web browsers, file explorers, and other applications that support these functions.
- **Scroll Wheel:** Rotate the scroll wheel to scroll through documents and web pages. Press the scroll wheel for middle-click functionality, often used to open links in new tabs.

## MAINTENANCE

---

To ensure the longevity and optimal performance of your mouse, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the mouse. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Sensor Care:** Keep the optical sensor on the underside of the mouse clean and free from dust or debris. Use a cotton swab or compressed air if necessary.
- **Cable Management:** Avoid sharp bends or kinks in the USB cable. Store the cable neatly when not in use to prevent damage.
- **Storage:** When not in use for extended periods, store the mouse in a clean, dry environment away from extreme temperatures.

## TROUBLESHOOTING

---

If you encounter issues with your Anker Vertical Mouse, refer to the following common problems and solutions:

Problem	Solution
Mouse cursor is not moving.	<ul style="list-style-type: none"> <li>◦ Ensure the USB cable is securely plugged into a working USB port.</li> <li>◦ Try plugging the mouse into a different USB port on your computer.</li> <li>◦ Check the optical sensor on the bottom of the mouse for obstructions or dirt.</li> <li>◦ Restart your computer.</li> </ul>
Mouse movement is erratic or jumpy.	<ul style="list-style-type: none"> <li>◦ Clean the optical sensor.</li> <li>◦ Use the mouse on a clean, non-reflective surface or a mouse pad.</li> <li>◦ Ensure the cable is not damaged or kinked.</li> </ul>
Buttons or scroll wheel are unresponsive.	<ul style="list-style-type: none"> <li>◦ Verify the USB connection.</li> <li>◦ Test the mouse on another computer if possible to rule out a software issue.</li> <li>◦ Ensure no debris is lodged around the buttons or scroll wheel.</li> </ul>
DPI button does not change sensitivity.	<ul style="list-style-type: none"> <li>◦ Ensure the mouse is properly connected and recognized by the system.</li> <li>◦ Press the button firmly.</li> </ul>

If the problem persists after trying these solutions, please contact Anker customer support.

## SPECIFICATIONS

Key technical specifications for the Anker USB Wired Vertical Mouse:

- **Model Number:** AK-98ANWVM-BA
- **Connectivity:** Wired USB
- **Movement Detection:** Optical
- **DPI Settings:** 1000 / 1600 DPI
- **Buttons:** 5 (Left, Right, Scroll Wheel, DPI Switch, Forward, Backward)
- **Cable Length:** 1.5 meters (4.9 feet)
- **Dimensions (LxWxH):** 120 x 62.8 x 74.8 mm (4.8 x 2.52 x 2.95 inches)
- **Weight:** Approximately 95 grams (3.36 ounces)
- **Operating System Compatibility:** Windows 10, Linux (and earlier versions of Windows)



*Image: Diagram showing the dimensions of the Anker Vertical Mouse: approximately 4.7 inches in length, 2.5 inches in width, and 2.94 inches in height.*

## **WARRANTY AND SUPPORT**

Anker provides an **18-month warranty** for this product, along with lifetime technical support. For warranty claims or technical assistance, please contact Anker customer service through their official website or the retailer where the product was purchased.

For more information, visit the official Anker website: [www.anker.com](http://www.anker.com)