

ALDES MOTUS 45 /120 23KW D125 /D125

ALDES MOTUS 45 /120 23KW D125 /D125 Aerator Instruction Manual

Your guide to safe and efficient use of your ALDES Aerator.

1. INTRODUCTION

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of your ALDES MOTUS 45 /120 23KW D125 /D125 aerator. Please read this manual thoroughly before using the product to ensure safe and optimal performance. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the power supply matches the voltage specified on the aerator's rating label.
- Do not operate the aerator with a damaged cord or plug.
- Keep hands, hair, and loose clothing away from moving parts.
- Do not immerse the aerator in water or other liquids.
- Unplug the aerator from the power outlet before cleaning or performing any maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking. If any items are missing or damaged, contact your retailer immediately.

- ALDES MOTUS 45 /120 23KW D125 /D125 Aerator unit
- Mounting hardware (screws, anchors)
- User Manual (this document)

4. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your aerator. If you are unsure about any step, consult a qualified professional.

4.1 Choosing a Location

Select a location that allows for optimal airflow and is free from obstructions. Ensure the mounting surface is stable and can support the weight of the aerator.

4.2 Mounting the Aerator

1. Mark the desired mounting points on the wall or window frame using the aerator as a template.
2. Drill pilot holes at the marked locations. Use appropriate drill bits for your wall material.
3. Insert wall anchors if necessary.
4. Secure the aerator to the mounting surface using the provided screws. Ensure it is level and firmly attached.



Figure 1: ALDES MOTUS 45 /120 23KW D125 /D125 Aerator unit. This image shows the compact design of the aerator, typically mounted on a wall or window frame for ventilation purposes.

4.3 Electrical Connection

Connect the aerator to a suitable power outlet. Ensure the connection is secure and complies with local electrical codes. If in doubt, consult a qualified electrician.

5. OPERATING INSTRUCTIONS

Your ALDES aerator is designed for simple operation.

- **Power On/Off:** Locate the power switch, usually on the side or front of the unit. Flip the switch to the 'ON' position to start the aerator and 'OFF' to stop it.
- **Airflow Adjustment:** If your model includes an airflow adjustment mechanism (e.g., a dial or slider),

rotate or slide it to increase or decrease the ventilation rate as needed.

- **Indicator Lights:** Observe any indicator lights. A green light typically signifies that the unit is operating correctly.

6. MAINTENANCE

Regular maintenance ensures the efficiency and extends the lifespan of your aerator.

6.1 Cleaning the Exterior

1. **Disconnect Power:** Always unplug the aerator before cleaning.
2. **Wipe Down:** Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
3. **Dry Thoroughly:** Ensure the unit is completely dry before reconnecting power.

6.2 Filter Cleaning/Replacement (if applicable)

Some aerator models include a filter to prevent dust and debris from entering the unit. Refer to your specific model's design for filter access.

1. **Access Filter:** Carefully open the cover or grille to access the filter.
2. **Clean Filter:** Gently remove the filter. Clean it with a soft brush or vacuum cleaner. If washable, rinse with lukewarm water and allow it to air dry completely.
3. **Replace Filter:** Insert the clean or new filter back into its position.
4. **Close Cover:** Securely close the cover or grille.

7. TROUBLESHOOTING

Before contacting customer support, try the following solutions for common issues:

Problem	Possible Cause	Solution
Aerator does not turn on.	No power supply. Power switch is off.	Check if the unit is plugged in securely. Ensure the power outlet is functional. Flip the power switch to 'ON'.
Low airflow.	Blocked intake/exhaust. Dirty filter.	Clear any obstructions from the vents. Clean or replace the filter (refer to Section 6.2).
Unusual noise.	Loose parts. Debris in fan.	Disconnect power and inspect for any loose components. Carefully remove any debris from the fan blades. If noise persists, contact support.

8. SPECIFICATIONS

- **Model:** ALDES MOTUS 45 /120 23KW D125 /D125
- **Manufacturer:** ALDES
- **Item Weight:** 1.2 Kilograms

- **ASIN:** B00FPF2UD0

9. WARRANTY AND SUPPORT

Your ALDES MOTUS 45 /120 23KW D125 /D125 aerator comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, spare parts, or warranty claims, please contact ALDES customer service through their official website or the contact information provided in your purchase documentation.

Online Resources: For additional information and FAQs, visit the official ALDES website:www.aldes.fr