

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm XQ1 Digital Camera User Manual

Fujifilm XQ1

Fujifilm XQ1 Digital Camera User Manual

Model: XQ1

1. INTRODUCTION

Thank you for purchasing the Fujifilm XQ1 Digital Camera. This manual provides detailed instructions on how to set up, operate, and maintain your camera to ensure optimal performance and longevity. Please read this manual thoroughly before using your camera and keep it in a safe place for future reference.



Figure 1.1: Front view of the Fujifilm XQ1 Digital Camera with lens retracted.

2. PACKAGE CONTENTS

Ensure all items are present in your camera package:

- Fujifilm XQ1 Digital Camera
- Rechargeable Li-ion Battery
- USB Cable
- AC Power Adapter
- Strap
- Instruction Manual (this document)

3. SETUP

3.1 Charging the Battery

1. Insert the supplied rechargeable battery into the camera.

2. Connect the camera to the AC power adapter using the USB cable.
3. Plug the AC power adapter into a wall outlet. The charging indicator will illuminate.
4. Charging is complete when the indicator light turns off.

Note: A fully discharged battery typically takes approximately 2.5 hours to charge.

3.2 Inserting a Memory Card

The Fujifilm XQ1 supports SD, SDHC, and SDXC memory cards.

1. Open the battery/card compartment cover on the bottom of the camera.
2. Insert the memory card into the slot with the contacts facing the correct direction until it clicks into place.
3. Close the compartment cover securely.



Figure 3.2: Side view showing the battery and memory card compartment.

3.3 Initial Settings

Upon first power-on, you will be prompted to set the date, time, and language. Follow the on-screen instructions using the camera's control dial and buttons.

4. OPERATING THE CAMERA

4.1 Camera Controls Overview

Familiarize yourself with the main controls of your Fujifilm XQ1.



Figure 4.1: Rear view of the camera, highlighting the 3.0-inch LCD and control buttons.

- **Shutter Button:** Press halfway to focus, fully to take a picture.
- **Zoom Lever:** Controls the optical zoom (4x, 25-100mm equivalent).
- **Mode Dial:** Selects shooting modes (P, S, A, M, SR+, Filter, Adv., C).
- **Control Ring:** Located around the lens, this ring can be customized for various functions like aperture, ISO, or zoom.
- **MENU/OK Button:** Accesses camera menus and confirms selections.
- **Directional Buttons:** Navigate menus and select options.
- **E-Fn Button:** Customizable function button for quick access to frequently used settings.
- **Wi-Fi Button:** Activates Wi-Fi for connecting to smart devices.



Figure 4.2: Top view of the camera, showing the mode dial, power button, and flash switch.

4.2 Taking Photographs

1. Turn the camera on by pressing the ON/OFF button.
2. Select your desired shooting mode using the Mode Dial (e.g., 'P' for Program Auto, 'SR+' for Scene Recognition Auto).
3. Frame your shot using the 3.0-inch LCD monitor. Use the zoom lever to adjust the focal length.
4. Press the shutter button halfway down to focus. The focus frame will turn green when focus is achieved.
5. Press the shutter button fully to take the picture.

4.3 Recording Videos

The XQ1 can record Full HD movies at 60 frames per second.

1. Turn the camera on.
2. Press the dedicated movie recording button (usually marked with a red dot) to start recording.
3. Press the movie recording button again to stop recording.

4.4 Wi-Fi Connectivity

The camera features built-in Wi-Fi for transferring images to smartphones, tablets, or computers.

1. Install the Fujifilm Camera Remote app on your smart device.
2. Press the Wi-Fi button on the camera.
3. Follow the on-screen instructions on both the camera and your smart device to establish a connection.

5. MAINTENANCE

5.1 Cleaning the Camera

- **Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, dampen the cloth slightly with water and then wipe dry.
- **Lens:** Use a blower brush to remove dust, then gently wipe with a lens cleaning cloth. Avoid touching the lens surface with your fingers.
- **LCD Monitor:** Wipe gently with a soft, dry cloth.

5.2 Battery Care

- Always use genuine Fujifilm batteries and chargers.
- Store batteries in a cool, dry place when not in use.
- Do not expose batteries to extreme temperatures or direct sunlight.

5.3 Storage

When storing the camera for extended periods, remove the battery and memory card. Store the camera in a dry, well-ventilated area, away from direct sunlight and high humidity.

6. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Camera does not turn on.	Battery is discharged. Charge the battery. Battery is inserted incorrectly. Reinsert the battery.
Images are blurry.	Camera shake. Hold the camera steady or use a tripod. Subject is out of focus. Ensure the camera focuses correctly before shooting. Lens is dirty. Clean the lens.
Memory card error.	Memory card is full. Delete some images or insert a new card. Memory card is damaged. Try a different memory card. Memory card is not formatted. Format the card in the camera (this will erase all data).
Flash does not fire.	Flash is set to OFF. Change flash mode. Battery is low. Charge the battery.

If the problem persists, please contact Fujifilm customer support.

7. SPECIFICATIONS

Key technical specifications for the Fujifilm XQ1 Digital Camera:

Feature	Detail
Sensor	12.0 MP 2/3" X-Trans II CMOS with Phase Detection
Processor	EXR Processor II
Lens	Fujinon 4x Optical Zoom (25-100mm equivalent)
Aperture	F1.8 (wide) - F4.9 (telephoto)
LCD Monitor	3.0-inch, 920K-dot TFT color LCD
Image Stabilization	Optical
ISO Sensitivity	Expanded ISO 100 - 12800
Video Recording	Full HD (1920 x 1080) at 60fps
Connectivity	Wi-Fi, HDMI (Type D Micro), USB
Storage Media	SD/SDHC/SDXC card
Dimensions (W x H x D)	Approx. 100 x 58.5 x 33.3 mm (3.9 x 2.3 x 1.3 in.)
Weight	Approx. 0.45 lbs (including battery and memory card)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Fujifilm XQ1 Digital Camera is covered by a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details. Keep

your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, service, or further inquiries, please visit the official Fujifilm website or contact their customer support department. Contact information can typically be found on the Fujifilm website or in your warranty documentation.