

Frigidaire RMW1132-RED

Frigidaire 1.1 cu. ft. 1000W Microwave User Manual

Model: RMW1132-RED

Brand: Frigidaire

1. IMPORTANT SAFETY INFORMATION

Read all instructions carefully before using this appliance to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- This appliance is equipped with a Child Lock Feature to prevent unintended operation. Refer to the "Operating Instructions" section for details.

2. PRODUCT OVERVIEW

The Frigidaire 1.1 cu. ft. 1000W Microwave is designed for quick and efficient food heating. It features a powerful 1000-watt output, 1-touch cooking menus, a digital kitchen timer, and a removable glass turntable for even cooking.

Key Features:

- 1.1 Cubic Foot Capacity
- 1000 Watts Cooking Power
- 10 Power Levels for versatile cooking
- Removable Glass Turntable for even heating and easy cleaning

- Electronic Touchpad with easy-to-read LED display
- Child Lock Feature for safety
- Pre-programmed Quick Cook Options (Popcorn, Potato, Pizza, Frozen Vegetable, Fresh Vegetable, Beverage, Meat, Reheat, Bread)

Product Views:

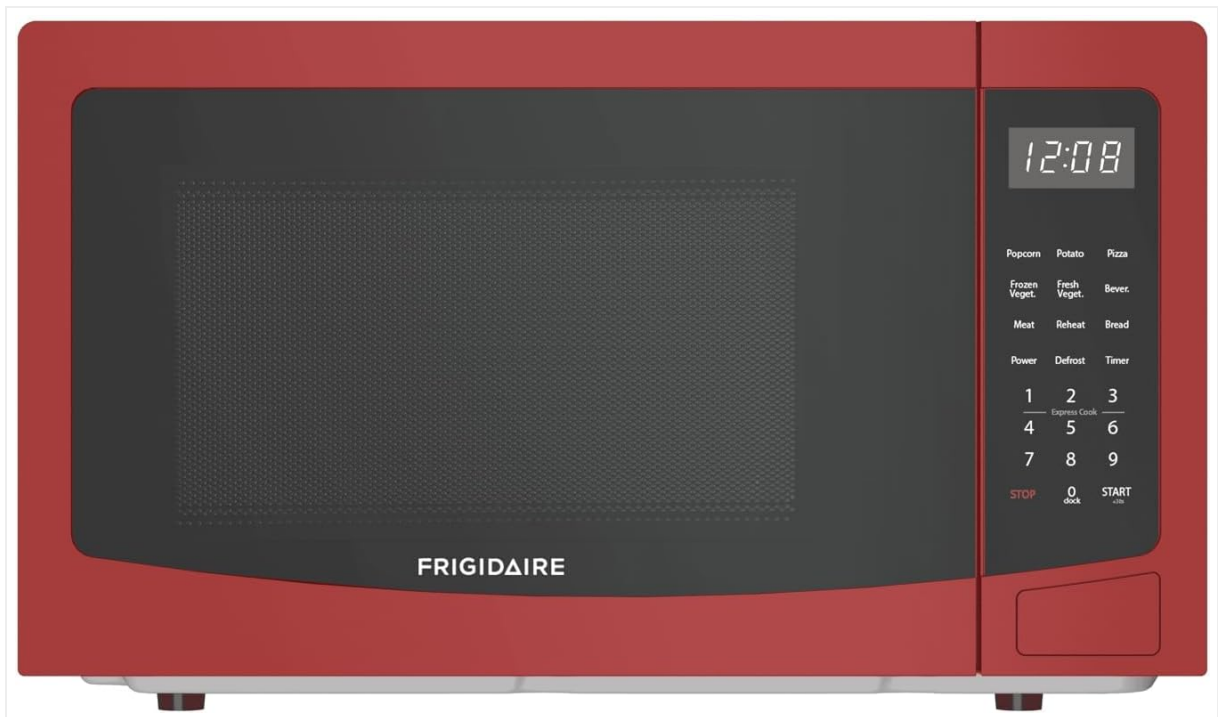


Figure 2.1: Front view of the Frigidaire 1.1 cu. ft. 1000W Microwave in red, showcasing its sleek design and digital control panel.



Figure 2.2: Angled view of the Frigidaire 1.1 cu. ft. 1000W Microwave, highlighting its compact yet spacious design suitable for countertops.

3. SETUP AND INSTALLATION

3.1 Placement:

- Place the microwave oven on a flat, stable surface that can support its weight (approximately 39 pounds) and the heaviest food item likely to be cooked in the oven.
- Ensure adequate ventilation. Allow at least 4 inches (10 cm) of space on the top, back, and sides for proper air circulation. Do not block air vents.
- Keep the microwave away from heat sources and water.

3.2 Electrical Requirements:

- The microwave requires a standard 120V, 60Hz AC outlet with a minimum 15-amp circuit.
- Do not use an extension cord. If the power cord is too short, have a qualified electrician install an outlet near the appliance.

3.3 Turntable Installation:

- Place the turntable ring inside the oven cavity.
- Place the glass turntable plate on top of the ring, ensuring it sits securely on the center hub.
- The turntable must be in place for all cooking operations.

4. OPERATING INSTRUCTIONS

4.1 Setting the Clock:

1. Press the "Clock" button.
2. Use the number pad to enter the current time (e.g., 1-2-3-0 for 12:30).
3. Press "Clock" again to confirm.

4.2 Basic Microwave Cooking:

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Enter the desired cooking time using the number pad (e.g., 1-0-0 for 1 minute).
4. To adjust power level (default is 100%): Press "Power" and then enter a number from 1 to 10 (10 for 100%, 1 for 10%).
5. Press "Start" to begin cooking.

4.3 Express Cook:

For quick 1-6 minute cooking at 100% power, simply press the corresponding number (1-6) on the keypad. The microwave will start immediately.

4.4 Pre-Programmed Quick Cook Options:

This microwave features convenient pre-programmed settings for common food items:

- **Popcorn:** For various bag sizes.
- **Potato:** For baking potatoes.
- **Pizza:** For reheating pizza slices.
- **Frozen Veg.:** For cooking frozen vegetables.
- **Fresh Veg.:** For cooking fresh vegetables.
- **Beverage:** For heating drinks.
- **Meat:** For cooking various meats.

- **Reheat:** For reheating leftovers.
- **Bread:** For warming bread.

To use: Press the desired quick cook button, then follow any on-screen prompts (e.g., enter quantity or weight) and press "Start".

4.5 Defrost Settings:

The microwave offers versatile defrost options:

- **Weight Defrost:** Allows you to defrost food based on its weight.
- **Speed Defrost:** Provides a quick defrost option for smaller items.

Refer to the control panel for specific instructions on using these defrost functions.

4.6 Child Lock Feature:

To activate the child lock, press and hold the "Stop" button for 3 seconds. The display will indicate that the lock is active. To deactivate, press and hold the "Stop" button again for 3 seconds.

5. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

5.1 Cleaning the Interior:

- Wipe the interior cavity with a damp cloth after each use to prevent food splatter from drying.
- For stubborn stains, place a bowl of water with a few lemon slices inside and microwave for 2-3 minutes. The steam will loosen the residue, making it easier to wipe clean.
- The glass turntable can be removed and washed with warm, soapy water or in a dishwasher. Ensure it is completely dry before placing it back in the oven.

5.2 Cleaning the Exterior:

- Clean the exterior surfaces with a soft, damp cloth and mild detergent.
- Avoid abrasive cleaners or scouring pads, as they can scratch the finish.
- Wipe the control panel gently with a damp cloth. Do not spray cleaners directly onto the panel.

6. TROUBLESHOOTING

If you experience issues with your microwave, consult the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Oven will not start	Door not closed properly; Power cord unplugged; Fuse blown or circuit breaker tripped.	Ensure door is firmly closed; Check if power cord is securely plugged in; Check household fuse/circuit breaker.
Food not heating	Incorrect cooking time/power level set; Door not closed properly.	Adjust cooking time/power level; Ensure door is firmly closed.
Turntable not rotating	Turntable not properly seated; Debris under turntable.	Ensure turntable and ring are correctly positioned; Clean under the turntable.

Problem	Possible Cause	Solution
Oven light not working	Bulb burnt out.	Contact qualified service personnel for bulb replacement.

7. SPECIFICATIONS

Specification	Detail
Brand Name	Frigidaire
Model Info	RMW1112-RED
Part Number	EMW1132-RED
Item Weight	39 pounds
Product Dimensions (D x W x H)	14.47 x 20.08 x 11.99 inches
Energy Use / Wattage	1000 Watts
Capacity	1.1 Cubic Feet
Installation Type	Countertop
Form Factor	Stand Alone
Special Features	Child Safety Lock
Oven Cooking Mode	Microwave Radiation
Color	Red
Voltage	120 Volts
Material Type	Steel
Inner Material Type	Steel
Included Components	Microwave

8. SUPPORT AND WARRANTY

For detailed information regarding your product's warranty, troubleshooting beyond this manual, or to contact customer support, please refer to the official user manual PDF or the manufacturer's website.

Official User Manual (PDF): [Download Here](#)

For further assistance, please visit the [Frigidaire Store on Amazon](#) or their official website.