

[Manuals.plus](#) /

› [Alpine Corporation](#) /

› Alpine Corporation WIN730 5-Tier Outdoor Rock Waterfall Fountain with LED Lights User Manual

Alpine Corporation WIN730

Alpine Corporation WIN730 5-Tier Outdoor Rock Waterfall Fountain with LED Lights User Manual

Model: WIN730 | Brand: Alpine Corporation

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient setup, operation, and maintenance of your Alpine Corporation WIN730 5-Tier Outdoor Rock Waterfall Fountain. Please read all instructions carefully before assembly and use to ensure proper function and longevity of your product.

SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, or injury, please observe the following safety precautions:

- Always disconnect the fountain from the power outlet before handling, cleaning, or performing any maintenance.
- Ensure the power cord is placed where it cannot be walked on, tripped over, or otherwise damaged.
- Do not operate the fountain if the cord or plug is damaged.
- Do not operate the fountain if it has been dropped or damaged in any manner.
- Do not immerse the pump or electrical plug in water.
- Use only fresh water in the fountain. Do not use other liquids.
- Ensure the fountain is placed on a level, stable surface to prevent tipping.
- Keep children and pets away from the fountain during operation.
- This product is designed for outdoor use.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Fountain Unit (5-tier rock design)
- Water Pump with Power Cord
- LED Light Assembly (pre-installed or separate)

SETUP

1. Unpacking and Placement

Carefully remove all components from the packaging. Place the fountain unit on a firm, level surface in your desired outdoor location. Ensure the location is near a suitable outdoor electrical outlet and that the power cord can reach without tension.





Image: The Alpine Corporation WIN730 fountain positioned outdoors amidst greenery, showcasing its natural rock-like appearance and tiered water flow.

2. **Pump Installation**

Locate the water pump. Connect the pump's tubing to the water outlet tube inside the fountain. Ensure a secure connection to prevent leaks. Place the pump at the bottom of the fountain's reservoir, ensuring it is fully submerged when the fountain is filled with water.

3. **LED Light Connection (if applicable)**

If your LED lights are not pre-installed, connect them according to the diagrams provided in the separate light assembly instructions. Ensure all connections are watertight.



Image: The Alpine Corporation WIN730 fountain at dusk, with its integrated LED lights illuminating the water as it flows down the tiers, creating a serene nighttime ambiance.

4. **Filling the Fountain**

Fill the fountain's reservoir with clean water. Ensure the water level is sufficient to completely submerge the pump. Do not overfill, as this may cause splashing outside the fountain.

OPERATING INSTRUCTIONS

1. **Powering On**

Once the fountain is assembled and filled with water, plug the power cord into a grounded outdoor electrical outlet. The pump will begin circulating water, and the LED lights will illuminate.



waterfall fountain

*Garden water fountain is the perfect addition to your outdoor décor. Interior pump keeps the water flowing — **just plug it in!***

Image: A detailed view of the water cascading down the rock tiers of the Alpine Corporation WIN730 fountain, illustrating the relaxing water flow feature.

2. **Adjusting Water Flow**

Some pumps may have an adjustable flow rate switch. If available, adjust the switch to achieve your desired water flow. Refer to the pump's specific instructions for details.

3. **Powering Off**

To turn off the fountain, simply unplug the power cord from the electrical outlet.

Product Demonstration Video

Your browser does not support the video tag.

Video: An official product video from Alpine Corporation demonstrating the "Rainforest Rock Tiered Fountain with LED Lights" in operation, highlighting its features and water flow.

MAINTENANCE

• **Regular Water Level Check**

Check the water level daily, especially in warm weather, as water evaporates. Refill as needed to ensure the pump remains fully submerged. Running the pump dry can cause damage.

• **Cleaning the Fountain**

Clean the fountain regularly to prevent algae buildup and mineral deposits. Disconnect power, drain the water, and use a soft brush and mild soap to clean surfaces. Rinse thoroughly. For stubborn stains, a fountain cleaner designed for water features may be used.

• **Pump Cleaning**

Periodically clean the pump to ensure optimal performance. Disconnect the pump from the fountain and disassemble it according to the pump's instructions. Remove any debris, hair, or mineral buildup from the impeller and housing. Rinse and reassemble.

• **Winterization**

Before the first frost, disconnect the fountain from power, drain all water, and clean the unit. Store the pump indoors in a frost-free location. Cover the fountain or store it indoors to protect it from freezing temperatures and harsh winter conditions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pump not operating	Not plugged in; circuit breaker tripped; low water level; clogged pump impeller.	Check power connection; reset breaker; add water to submerge pump; clean pump impeller.
Water flow is weak	Low water level; clogged pump or tubing; kinked tubing; pump flow rate set too low.	Add water; clean pump and tubing; straighten tubing; adjust pump flow rate.
Excessive splashing	Water level too high; pump flow rate too high; uneven surface.	Reduce water level; adjust pump flow rate; ensure fountain is on a level surface.
LED lights not working	Loose connection; damaged lights; power issue.	Check all light connections; inspect for damage (replace if necessary); verify power supply.

SPECIFICATIONS

Model: WIN730
Brand: Alpine Corporation
Dimensions (L x W x H): 33" x 24" x 52"
Material: Polystone with Fiberglass
Item Weight: 101 Pounds
Power Source: Corded Electric
Special Feature: Durable, LED Lights
UPC: 821559435255

relaxing water flow

*Water trickles from each tier to mimic the sounds of a real waterfall, **adding peaceful ambiance to your outdoor setting***



Image: A visual representation of the Alpine Corporation WIN730 fountain with its key dimensions (33"L x 24"W x 52"H) clearly marked for reference.

WARRANTY AND SUPPORT

This Alpine Corporation product comes with a **one-year manufacturer's support** from the date of purchase. For warranty claims, technical assistance, or replacement parts, please contact Alpine Corporation customer service. For further assistance, please visit the official Alpine Corporation website or refer to the contact information provided with your purchase documentation.

Note: Proposition 65 Warning applies to this product.

© 2024 Alpine Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question