

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [instax](#) /
- › [FUJIFILM Instax Mini 90 Neo Classic Instant Film Camera User Manual](#)


instax Instax Mini 90 Neo Classic Black

FUJIFILM Instax Mini 90 Neo Classic Instant Film Camera

Model: Instax Mini 90 Neo Classic Black

INTRODUCTION

The FUJIFILM Instax Mini 90 Neo Classic is an advanced instant film camera designed to offer creative photographic capabilities. It incorporates features reminiscent of traditional analog cameras, such as bulb and double exposure modes, alongside modern functionalities like macro mode and a high-performance flash. This camera is suitable for a wide range of photographers seeking to capture moments with instant prints.

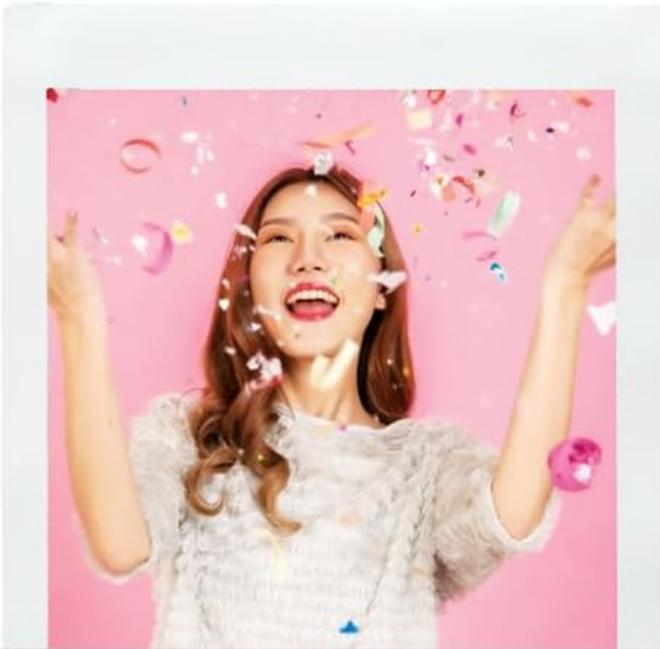

WHAT'S IN THE BOX

Upon unboxing your FUJIFILM Instax Mini 90 Neo Classic, please ensure all the following components are present:

- FUJIFILM Instax Mini 90 Neo Classic Instant Film Camera
- 1 x Lithium Metal Battery (included)

SETUP

1. Charging the Battery

The camera operates on a rechargeable Lithium Metal battery. Before first use, or if the battery indicator is low, fully charge the battery using the provided charger (if included, otherwise use a compatible charger). The battery is typically located in a compartment on the side or bottom of the camera.

2. Loading Instax Mini Film

To load film, open the film compartment door located on the back of the camera. Align the yellow mark on the film pack with the yellow mark inside the camera's film compartment. Gently insert the film pack and close the door. Do not open the film compartment door until all 10 exposures have been used, as this will expose and ruin the remaining film.

This Instax Device Uses
Requis par ce dispositif Instax

instax[®] mini

Film

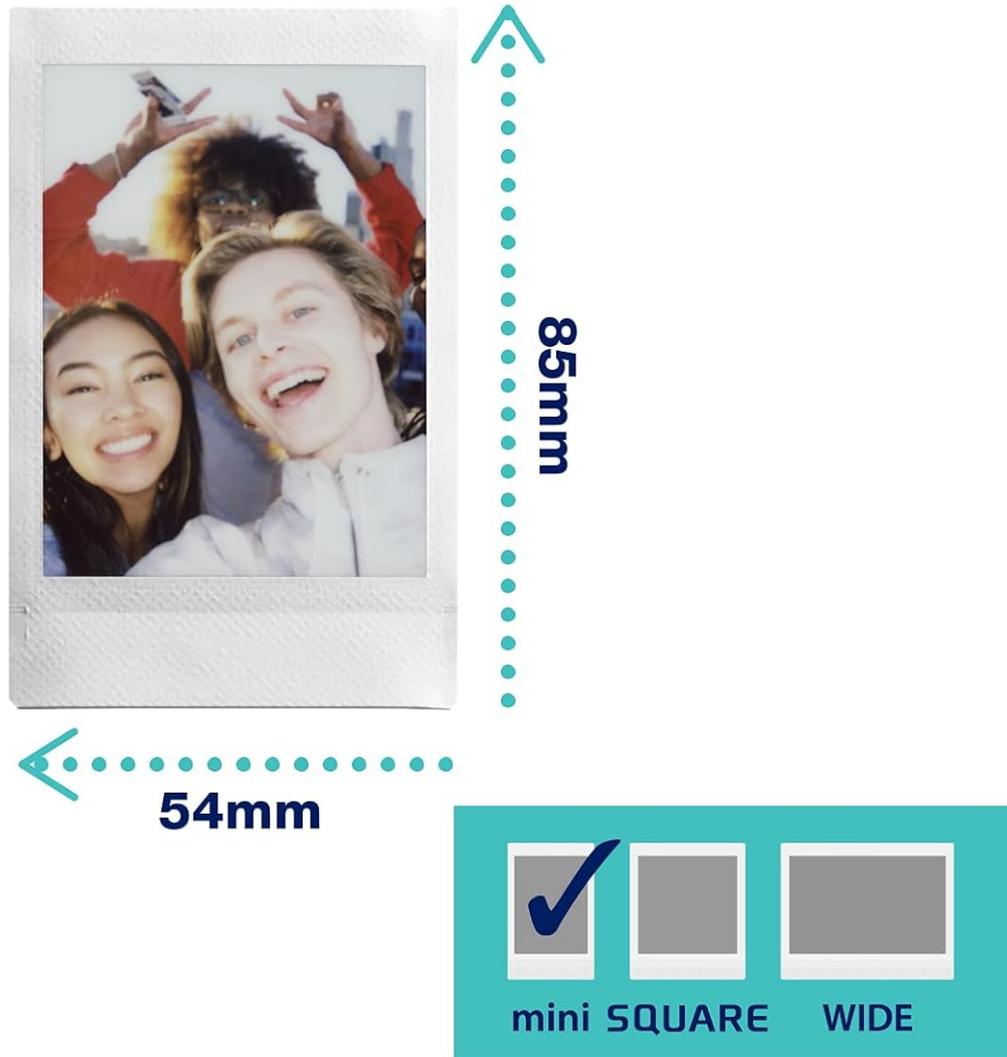


Figure 2: Instax Mini film dimensions. Ensure you use the correct film type for this camera.

OPERATING THE CAMERA

Powering On/Off

To power on the camera, rotate the lens ring to the 'ON' position. To power off, rotate it back to 'OFF'.

Basic Photography

The camera automatically detects ambient brightness and adjusts flash and shutter speed for optimal photo quality. Frame your shot using the viewfinder and press the shutter button to take a picture. The instant print will eject from the top of the camera.

Video 1: A demonstration of the Fujifilm Instax Mini 90 camera in operation, showcasing its features and ease of use.

Advanced Features

- **Double Exposure Mode:** Allows two images to be captured on a single film sheet by pressing the shutter twice. This creates unique artistic effects.
- **Bulb Mode:** The shutter remains open for up to 10 seconds while the shutter button is depressed, enabling the capture of light trails or low-light scenes.
- **Macro Mode:** For close-up photography, allowing subjects as close as 30 to 60 centimeters to be in focus. Activate this mode for detailed shots of small objects.
- **High Performance Flash:** The integrated flash provides appropriate illumination for various lighting conditions.



Figure 3: The Instax Mini 90 camera is ideal for capturing candid moments and creating instant memories.

MAINTENANCE

To ensure the longevity and optimal performance of your Instax Mini 90 Neo Classic camera, follow these maintenance guidelines:

- Keep the camera clean by wiping it with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Protect the lens from dust and scratches. Use a lens cap or store the camera in a protective case when not in use.
- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Handle film packs carefully and store them according to their instructions to prevent damage and ensure proper development.

TROUBLESHOOTING

Common Issues and Solutions:

- **No Power:** Ensure the battery is fully charged and correctly inserted.
- **Film Not Ejecting:** Check if the film pack is properly loaded and if there are any remaining exposures. Ensure the film compartment door is securely closed.
- **Poor Photo Quality (Too Dark/Light):** The camera has automatic exposure. Ensure the flash is not obstructed and that you are within the recommended shooting distance for the selected mode (e.g., Macro mode for close-ups).
- **Blank Photos:** This often indicates that the film has been exposed to light before being used. Ensure the film compartment is only opened when replacing an empty film pack.

For more detailed troubleshooting, refer to the official user manual linked in the support section.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.61 x 2.25 x 4.5 inches
Item Weight	10.4 ounces (0.65 Pounds)
Model Name	Instax Mini 90 Neo Classic Black
Batteries	1 Lithium Metal battery (included)
Special Feature	Auto Exposure
Film Format Type	6x8 (Instax Mini)
Exposure Control Type	Automatic
Shutter Release	Programmed Electronic Shutter Release, 1.8 - 1/400 Sec Shutter Speeds
Lens	Move In or Out Type Lens, 2 Components, 2 Elements, f=60 mm, F=12.7

WARRANTY AND SUPPORT

For comprehensive support and detailed information, please refer to the official user manual:

[Download User Manual \(PDF\)](#)

Information regarding specific warranty terms and conditions for the FUJIFILM Instax Mini 90 Neo Classic camera can typically be found within the full user manual or on the official Fujifilm website. Please retain your proof of purchase for warranty claims.

