

[Manuals.plus](#) /

› [Simon Rack](#) /

› Simon Rack Shoe Rack Model 2VV109202105013 Instruction Manual

Simon Rack 2VV109202105013

Simon Rack Shoe Rack Model 2VV109202105013 Instruction Manual

Model: 2VV109202105013

1. INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and troubleshooting of your Simon Rack metal shoe rack, model 2VV109202105013. Please read these instructions carefully before assembly and use to ensure proper function and longevity of the product.

The Simon Rack shoe rack is designed for organizing footwear in domestic environments. It features a durable metal construction with a white and violet epoxy polyester paint finish.



Image of the Simon Rack shoe rack, showcasing its white and violet finish and compact design. This image illustrates the assembled product.

2. SETUP AND ASSEMBLY

The Simon Rack shoe rack requires assembly. Please ensure all components are present before beginning. Refer to the separate assembly diagram and hardware pack included with your purchase for detailed step-by-step instructions.

2.1 Unpacking

- Carefully remove all parts from the packaging.
- Check the contents against the parts list provided in the assembly diagram.
- Keep packaging materials away from children.

2.2 Assembly Steps

Follow the numbered steps in the provided assembly diagram. Typically, assembly involves:

1. Attaching the side panels to the base.
2. Securing the shoe compartments/shelves.
3. Attaching the top panel.
4. Ensuring all screws and fasteners are tightened securely, but do not overtighten.

2.3 Placement

This shoe rack is designed for free-standing installation. Choose a stable, level surface for placement. Avoid placing it in areas with excessive moisture or direct sunlight to prevent damage to the finish.

3. OPERATING INSTRUCTIONS

The Simon Rack shoe rack is designed for the organized storage of footwear. Its portable design allows for flexible placement within your home.

3.1 Storing Footwear

- Open the compartments to place your shoes.
- Distribute the weight of the footwear evenly across the compartments to maintain stability.
- Avoid overloading the compartments beyond their intended capacity.

3.2 Moving the Shoe Rack

Due to its portable nature, the shoe rack can be moved. When relocating, ensure it is empty or that the contents are secured to prevent items from falling. Lift the unit from its base rather than pulling on the top or sides.

4. MAINTENANCE AND CARE

Regular maintenance will help preserve the appearance and functionality of your Simon Rack shoe rack.

4.1 Cleaning

- Wipe surfaces with a soft, damp cloth.
- For stubborn marks, use a mild soap solution and then wipe dry immediately.
- Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the epoxy polyester paint finish.

4.2 General Care

- Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- Protect the unit from excessive moisture to prevent rust, especially if placed in areas like bathrooms or entryways where wet shoes might be stored.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your shoe rack.

5.1 Instability

- **Issue:** The shoe rack feels wobbly or unstable.
- **Solution:** Ensure the unit is placed on a flat, level surface. Check all assembly screws and fasteners to confirm they are securely tightened. Uneven weight distribution of shoes can also cause instability; try to balance the load.

5.2 Difficulty Opening/Closing Compartments

- **Issue:** Shoe compartments are stiff or difficult to operate.
- **Solution:** Check for any obstructions, such as shoes being too large or misplaced. Ensure the rack is not warped or damaged. A small amount of silicone spray on hinges (if applicable) might help, but avoid getting it on painted surfaces.

6. SPECIFICATIONS

Model Number	2VV109202105013
Brand	Simon Rack
Material	Metal (Alloy Steel frame)
Color	White and Violet
Dimensions (D x W x H)	13 cm x 50 cm x 103 cm
Weight	8.15 kg
Installation Type	Free-standing
Special Feature	Portable
Finish	Painted (Epoxy Polyester)
Assembly Required	Yes

7. WARRANTY INFORMATION

The Simon Rack shoe rack comes with a ten-year warranty from the date of purchase. This warranty covers any defects in material and workmanship.

Important Note:

- This warranty is valid only if the shoe rack is used exclusively for domestic purposes.
- Damage resulting from improper assembly, misuse, neglect, accidents, or commercial use is not covered under this warranty.
- Keep your proof of purchase for warranty claims.

8. CUSTOMER SUPPORT

If you have any questions regarding the assembly, operation, or maintenance of your Simon Rack shoe rack, or if you encounter any issues not covered in this manual, please contact your retailer or the manufacturer directly. For further assistance, please refer to the contact information provided with your purchase documentation or visit the official Simon Rack website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00FRAYZH2>

More documents and user manuals: <https://manuals.plus/>