

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Crosley Furniture](#) /

› [Crosley Furniture Parsons Pantry Storage Cabinet \(CF3100-WH\) Instruction Manual](#)

Crosley Furniture CF3100-WH

Crosley Furniture Parsons Pantry Storage Cabinet (CF3100-WH) Instruction Manual

Model: Parsons (CF3100-WH)

[Safety Information](#)

[Package Contents](#)
[Troubleshooting](#)

[Assembly Instructions](#)
[Specifications](#)
[Support](#)

[Usage](#)

[Maintenance](#)

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Crosley Furniture Parsons Pantry Storage Cabinet. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

The Parsons Pantry Storage Cabinet is designed to offer versatile storage solutions for various rooms, including kitchens, dining areas, and laundry rooms. It features adjustable shelving and a full-extension drawer to accommodate diverse storage needs.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in injury or damage to the product.

- Always assemble the unit on a soft, clean surface to prevent scratches.
- Ensure all hardware is securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload shelves. The weight limit for each adjustable shelf is 15 pounds.
- For stability, it is recommended to secure the cabinet to a wall using appropriate anti-tip hardware (not included).
- Keep small parts and packaging materials away from children and pets.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm (Proposition 65 warning).

PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present. If any components are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

While a detailed parts list is typically included in the physical manual, expect the following main components:

- Top Cabinet Section (panels, doors, shelves)
- Middle Drawer Section (drawer box, glides, drawer front)
- Bottom Cabinet Section (panels, doors, shelf)
- Base/Feet
- Hardware (screws, cam locks, dowels, handles, magnetic closures, shelf pins)





Figure 1: Overall Dimensions and Internal Measurements. This diagram illustrates the cabinet's total height (71.5 inches), width (33 inches), and depth (19 inches), along with internal shelf and drawer dimensions.

ASSEMBLY INSTRUCTIONS

Assembly is required for this product. It is recommended to have two people for assembly. Gather all tools required (e.g., Phillips head screwdriver, hammer) before starting.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent damage. Refer to the parts list (usually included in the physical manual) to identify each piece.
2. **Assemble the Base:** Attach the base components to the bottom panel of the lower cabinet section according to the provided diagrams.
3. **Construct Lower Cabinet:** Connect the side panels, back panel, and bottom panel of the lower cabinet. Secure with cam locks, screws, and dowels as indicated in the instructions.
4. **Install Lower Cabinet Shelf:** Insert the adjustable shelf pins into the desired holes within the lower cabinet. Place the adjustable shelf onto the pins.
5. **Assemble Drawer:** Construct the drawer box using the drawer sides, front, and back. Slide the drawer bottom into the designated grooves. Attach the drawer glides to the drawer box and the cabinet frame.
6. **Construct Upper Cabinet:** Similar to the lower cabinet, assemble the side panels, back panel, and top panel of the upper cabinet.
7. **Install Upper Cabinet Shelves:** Insert the adjustable shelf pins into the desired holes within the upper cabinet. Place the two adjustable shelves onto the pins.
8. **Attach Doors:** Mount the doors to both the upper and lower cabinet sections using the provided hinges. Adjust hinges as necessary to ensure proper alignment and closure.
9. **Install Handles/Knobs:** Attach the decorative handles or knobs to the drawer front and cabinet doors.
10. **Final Placement and Securing:** Carefully move the assembled cabinet to its desired location. For enhanced stability and safety, especially in homes with children, it is strongly recommended to secure the cabinet to a wall using anti-tip hardware.





Figure 2: Fully assembled Parsons Pantry Cabinet, front view. This image shows the cabinet with its upper and lower double doors closed, and the central drawer also closed, highlighting its complete appearance.

Overall Dimensions: 33" W x 71.5" H x 19" D

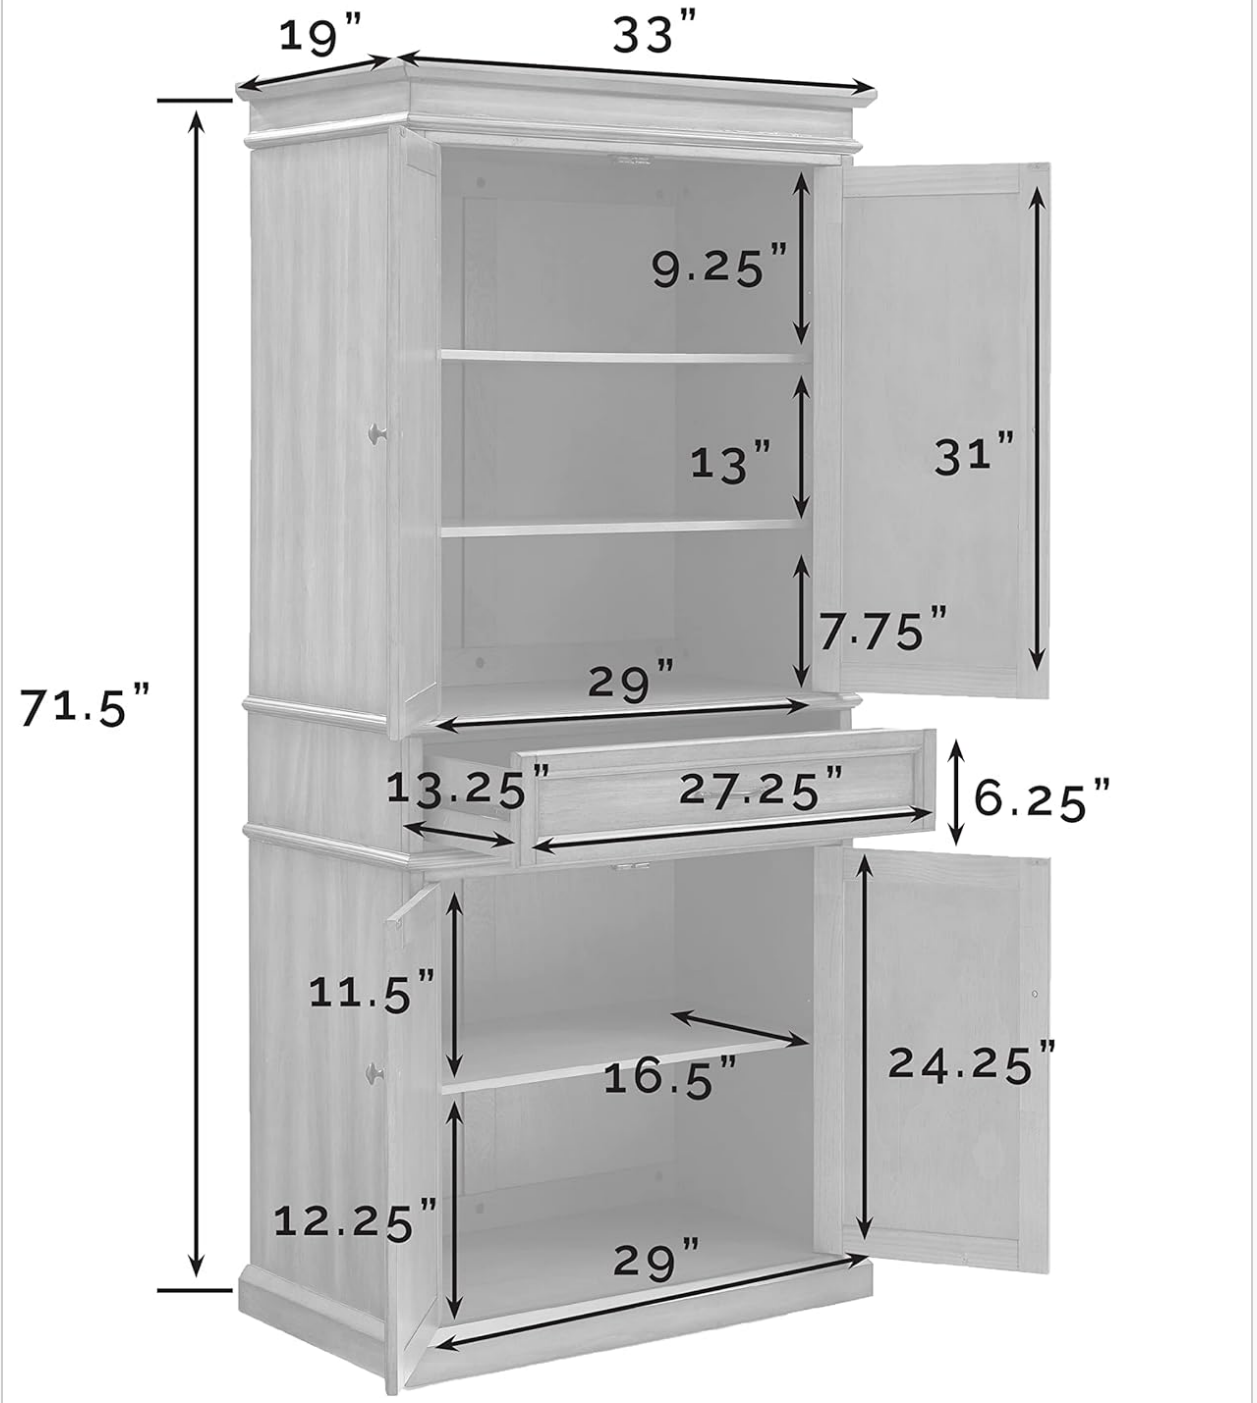


Figure 3: Parsons Pantry Cabinet with doors and drawer open. This view reveals the interior storage capacity, including adjustable shelves in both upper and lower compartments and the full-extension central drawer.

OPERATING INSTRUCTIONS

Adjusting Shelves

The upper cabinet features two adjustable shelves, and the lower cabinet has one adjustable shelf. To adjust a shelf:

1. Empty the shelf of all contents.

2. Carefully lift the shelf and remove the four shelf pins supporting it.
3. Re-insert the shelf pins into the desired set of holes at the new height. Ensure all four pins are securely in place and level.
4. Place the shelf back onto the pins. Gently test its stability before placing items on it.

Note: Each adjustable shelf has a weight limit of 15 pounds. Distribute weight evenly to prevent bowing or damage.

Using the Drawer

The central drawer operates on full-extension ball-bearing glides, allowing for smooth opening and closing and full access to its contents. To open, gently pull the handle. To close, push the drawer until it is fully seated.

Caution: Avoid placing excessively heavy items in the drawer to ensure smooth operation and prevent damage to the glides or drawer bottom.



Figure 4: Key features of the Parsons Pantry Cabinet. This image highlights the quality of the metal hardware, the smooth operation of the full-extension drawer, and the flexibility offered by the adjustable shelves.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the wood finish.
- **Spills:** Immediately wipe up any spills to prevent moisture damage or staining.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as needed to maintain structural integrity.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the finish.
- **Humidity:** Maintain a consistent humidity level in the room to prevent wood from expanding or contracting, which can lead to cracks or warping.

TROUBLESHOOTING

Common Issues and Solutions

- **Issue:** Cabinet feels wobbly or unstable.
Solution: Ensure all cam locks, screws, and dowels are fully tightened. Verify the cabinet is on a level surface. If necessary, use shims under the base. Consider securing the cabinet to a wall with anti-tip hardware.
- **Issue:** Doors do not align or close properly.
Solution: Check hinge attachments to ensure they are securely fastened. Most hinges allow for minor adjustments; refer to the specific hinge instructions if available. Ensure the cabinet itself is level.
- **Issue:** Drawer does not slide smoothly.
Solution: Check that the drawer glides are correctly installed and aligned. Ensure no obstructions are in the glide tracks. Avoid overloading the drawer.
- **Issue:** Strong odor from the cabinet.
Solution: New furniture can sometimes emit odors from manufacturing processes. Allow the cabinet to air out in a well-ventilated area for several days or weeks. Ensure good air circulation in the room where it is placed.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Crosley Furniture
Model Name	Parsons
Item Model Number	CF3100-WH
Color	White
Product Dimensions (D x W x H)	19" x 33" x 72"
Item Weight	129.7 Pounds
Frame Material	Wood
Top Material Type	Mahogany
Finish Type	Wood

Number of Adjustable Shelves	3 (Two in upper cabinet, one in lower cabinet)
Adjustable Shelf Weight Limit	15 Pounds per shelf
Drawer Glides	Full-extension ball-bearing glides
Assembly Required	Yes
Care Instructions	Wipe with Damp Cloth

WARRANTY AND CUSTOMER SUPPORT

For warranty information, missing parts, or assembly assistance, please contact Crosley Furniture customer support. Details are typically provided in the packaging or on the manufacturer's official website.

You may also refer to the [User Manual \(PDF\)](#) for additional details.

For general inquiries or to explore other products, visit the [Crosley Furniture Store](#).