

MANGROOMER ULTIMATE PRO

MANGROOMER Ultimate Pro Back Shaver Instruction Manual

Model: ULTIMATE PRO

1. PRODUCT OVERVIEW

The MANGROOMER Ultimate Pro Back Shaver is designed for efficient and comfortable back hair removal. Its patented design allows users to reach all areas of the back with ease. This model features two interchangeable shaving heads, a shock absorber flex neck, an extendable handle, and a Power Burst button for thicker hair.

Key Features:

- **Two Interchangeable Attachment Shaving Heads:** Includes a 1.8-inch ultra-wide back groomer blade for large areas and longer hairs, and a foil body groomer bi-directional head for maintenance and a smooth finish.
- **Shock Absorber Multi-Functional Flex Necks:** Both attachment heads feature flex necks that contour to the back for optimal blade-to-skin contact.
- **Extreme Reach Extendable Ergonomic Rubberized Handle:** The handle locks at any desired length with the PRO XL Extension Lock Button.
- **Power Hinge Easy Push Lock Button:** Allows the shaver to be locked at various angles for versatile use.
- **Power Burst Button:** Provides extra power for shaving through thick and coarse hair.
- **Advanced Quick Charge Battery:** Enables fast recharging with a Charge Light Indicator (red for charging, green for full).

2. SAFETY INFORMATION

Please read all safety instructions before using the MANGROOMER Ultimate Pro Back Shaver. Failure to follow these instructions may result in injury or damage to the product.

- Always unplug the shaver before cleaning or performing maintenance.
- Never use the shaver while it is plugged into the power source and charging.
- To clean, rinse the shaving heads with water and wipe the body clean.
- Dispose of batteries in accordance with local regulations.
- Keep the shaver away from extreme temperatures.
- Avoid exposing batteries to damage or extreme temperatures.

- Keep out of reach of children.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the shaver. The initial charge may take 8-12 hours. Subsequent charges from depleted to full typically take 6-8 hours. The Charge Light Indicator will be red while charging and turn green when fully charged.

Video: Official MANGROOMER video demonstrating the Ultimate Pro Back Shaver's features, including charging and operation.



Image: Close-up of the shaver's body showing the charge indicator light. Red indicates charging, green indicates fully charged.

3.2 Attaching/Changing Shaving Heads

The shaver comes with two interchangeable heads: the ultra-wide back groomer blade and the foil body groomer. To change heads:

1. Ensure the shaver is turned off.
2. Gently twist the currently attached head counter-clockwise and pull it off.
3. Align the desired head with the shaver body and twist clockwise until it clicks securely into place.



Image: The two interchangeable shaving heads: the wide back groomer and the foil body groomer.

3.3 Adjusting the Handle

The ergonomic handle can be extended and locked at various angles for optimal reach.

- **Extendable Handle:** To extend the handle, locate the PRO XL Extension Lock Button and slide it to unlock, then pull the handle to your desired length. Slide the button back to lock.
- **Power Hinge:** To adjust the angle of the shaver head, press the Power Hinge Easy Push Lock Button and adjust the handle to the desired angle (up to 135 degrees). Release the button to lock the angle.

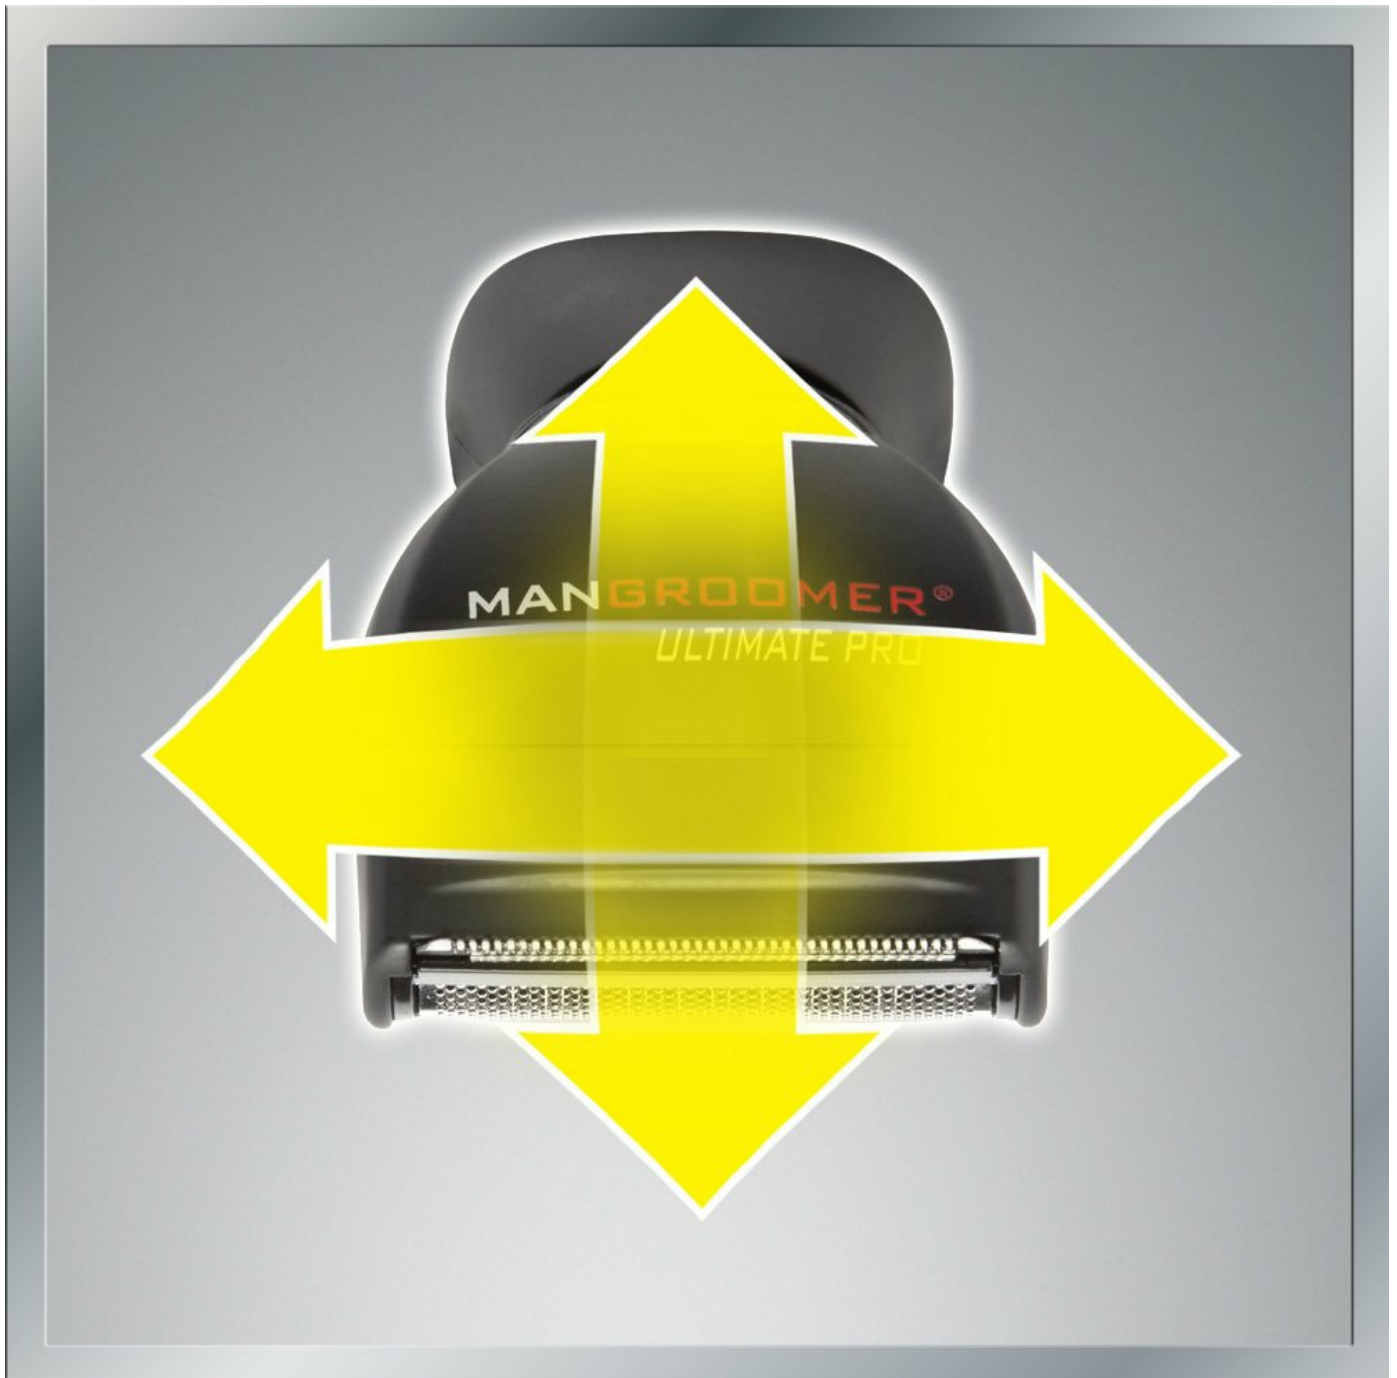 


Image: The MANGROOMER Ultimate Pro handle shown at various extended and angled positions.

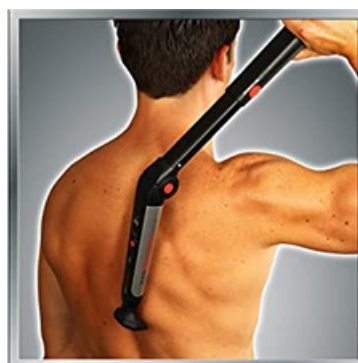 


Image: Diagram illustrating the extreme reach extendable handle feature.



Image: Diagram showing the shaver's patented 135-degree opening for ergonomic reach.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Press the power button located on the handle to turn the shaver on or off.

4.2 Using the Power Burst Button

For areas with extra thick or coarse hair, press the red Power Burst button to activate a higher power setting. This provides additional cutting strength for a smoother shave.



Image: Close-up of the Power Burst button on the shaver handle.

Video: A user demonstrating the MANGROOMER Ultimate Pro Back Shaver, highlighting its effectiveness for hard-to-reach areas.

4.3 Shaving Technique

For best results, use the shaver on dry skin. Extend the handle and adjust the angle as needed to comfortably reach all areas of your back. Apply light pressure and move the shaver in smooth, even strokes against the direction of hair growth. The flex necks on the shaving heads will adapt to your body's contours.

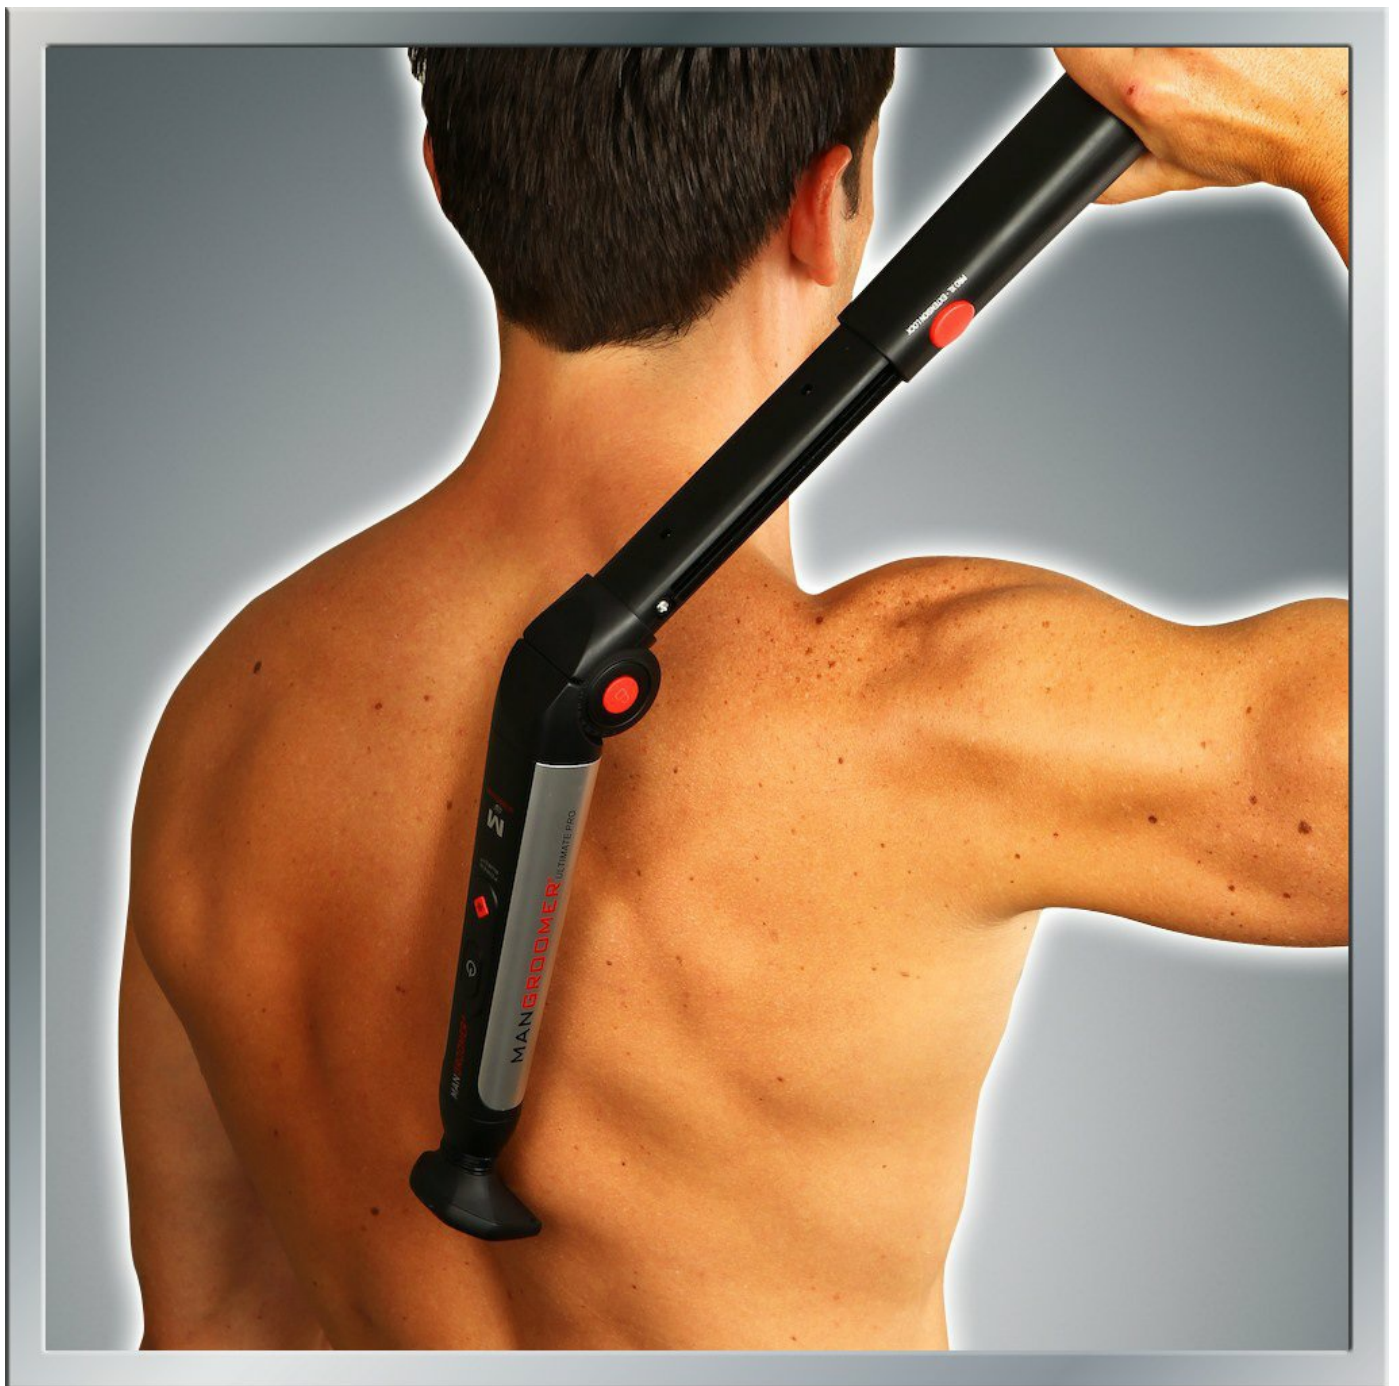 


Image: A man demonstrating the use of the MANGROOMER Ultimate Pro Back Shaver on his upper back.

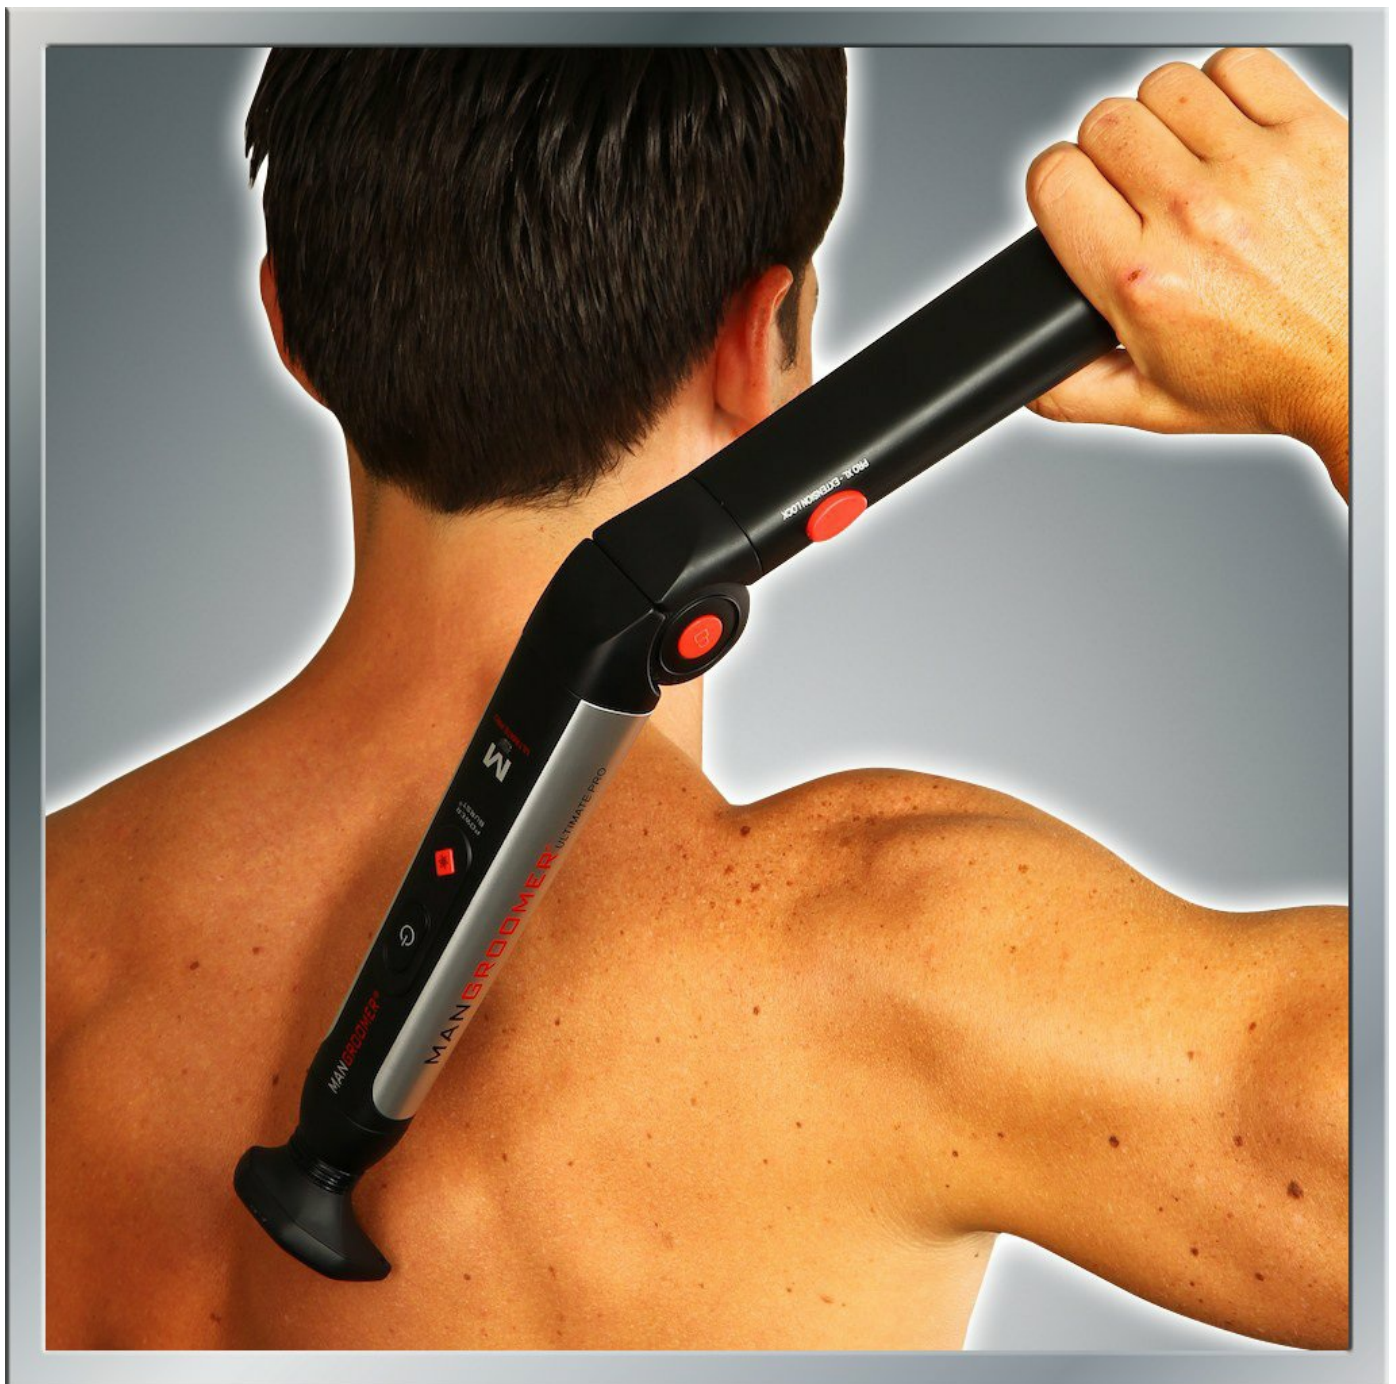 


Image: A man demonstrating the use of the MANGROOMER Ultimate Pro Back Shaver on his lower back.

5. MAINTENANCE

5.1 Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. Turn off and unplug the shaver.
2. Remove the shaving head by twisting it counter-clockwise.
3. Rinse the shaving head under running water to remove hair clippings.
4. Use the provided cleaning brush to remove any stubborn hair from the blades and foil.
5. Wipe the shaver body with a clean, damp cloth. Do not submerge the body in water.
6. Allow all parts to air dry completely before reattaching the head and storing.



Image: Close-up of the foil head, illustrating its trimming and shaving capabilities.

5.2 Blade Replacement

For continued optimal performance, replace shaving blades as needed. Replacement blades are available from MANGROOMER.

6. TROUBLESHOOTING

- **Shaver not turning on:** Ensure the shaver is fully charged. The shaver will not operate while plugged into the power source. Unplug it before attempting to turn it on.
- **Poor shaving performance:** Clean the shaving heads thoroughly. If performance does not improve, consider replacing the shaving blades.
- **Irritation after shaving:** Ensure you are using the correct shaving head for your skin type and hair length. Shave on dry skin and apply light pressure.
- **Handle not locking:** Check that the PRO XL Extension Lock Button or Power Hinge Easy Push Lock Button is fully engaged after adjustment.

7. SPECIFICATIONS

Feature	Detail
Model Name	ULTIMATE PRO
Item Model Number	ULTIMATE PRO
Manufacturer Part Number	301-6
UPC / GTIN	853496003105
Product Dimensions	11 x 3 x 2 inches
Item Weight	1 Pound
Color	Black and Red
Blade Material	Stainless Steel
Head Type	Foil

Number of Blades	2
Power Source	Battery Powered
Battery Type	2 AA batteries required (included), Rechargeable
Battery Average Life	12 Hours
Additional Features	Adjustable Handle, Rechargeable, Interchangeable Trimmer Heads, Ergonomic Design, Lighted, Fast Charging, Portable, Slip Resistant, Cordless

8. WARRANTY & SUPPORT

8.1 Product Warranty

The MANGROOMER Ultimate Pro Back Shaver comes with a **2-Year Warranty** from the manufacturer, Mangroomer (Marut Enterprises, LLC). Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any questions, technical assistance, or warranty inquiries, please contact MANGROOMER customer support. Contact information can typically be found on the official MANGROOMER website or within the product packaging.

Video: A comparison video showcasing the MANGROOMER Ultimate Pro alongside another model, highlighting design and feature differences.