

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Oral-B](#) /

› [Oral-B Stages Power Kids Electric Toothbrush DB4.510.K Disney Cars User Manual](#)

Oral-B DB4.510.K

Oral-B Stages Power Kids Electric Toothbrush DB4.510.K Disney Cars User Manual

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Oral-B Stages Power Kids Electric Toothbrush, model DB4.510.K. Designed for children, this battery-operated toothbrush features a Disney Cars theme and an integrated timer to encourage proper brushing habits. Please read these instructions carefully before first use and retain them for future reference.

SAFETY INFORMATION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not immerse the handle in water.
- Do not modify or repair the product. This may result in fire, electric shock, or injury. Consult your dealer for repairs.
- Replace brush head every 3 months or sooner if brush head becomes worn.
- Do not use on children under 3 years of age.

PRODUCT OVERVIEW

The Oral-B Stages Power Kids Electric Toothbrush is designed to make brushing fun and effective for children. It features a small, oscillating brush head and a comfortable handle.



Image: The Oral-B Stages Power Kids Electric Toothbrush, showing the handle, brush head, and two AA batteries.

SETUP

1. **Battery Installation:** To install or replace batteries, twist the bottom cap of the toothbrush handle counter-clockwise and pull it off. Insert two AA batteries, ensuring correct polarity (+/-). Replace the cap and twist clockwise to secure.
2. **Attaching the Brush Head:** Align the brush head with the shaft on the toothbrush handle and push it down firmly until it clicks into place.



Image: The Oral-B Stages Power Kids Electric Toothbrush handle with two AA batteries, illustrating the battery requirement.

OPERATING INSTRUCTIONS

1. **Wet the Brush Head:** Rinse the brush head under water.
2. **Apply Toothpaste:** Apply a pea-sized amount of toothpaste to the brush head.
3. **Turn On:** Press the power button on the handle to turn on the toothbrush.
4. **Brushing Technique:** Guide the brush head slowly from tooth to tooth, allowing the oscillating bristles to clean each surface. Do not scrub.
5. **Timer Function:** The toothbrush features a 2-minute timer to help children brush for the dentist-recommended time. The timer will signal when the 2 minutes are complete.
6. **Turn Off:** After brushing, press the power button again to turn off the toothbrush.



Image: A child demonstrating the use of an Oral-B Stages Power Kids Electric Toothbrush for effective dental cleaning.

MAINTENANCE

- **Cleaning the Brush Head:** After each use, rinse the brush head thoroughly under running water with the handle switched on. Turn off and remove the brush head, then rinse both the brush head and the handle separately.
- **Cleaning the Handle:** Wipe the handle with a damp cloth. Do not immerse the handle in water.
- **Replacing the Brush Head:** Dentists recommend replacing your brush head every 3 months, or sooner if the bristles become splayed or worn. To remove, pull the brush head straight off the handle. To attach a new one, push it down firmly until it clicks.
- **Battery Replacement:** When the toothbrush performance diminishes, replace the two AA batteries as described in the Setup section. Dispose of used batteries responsibly.

TROUBLESHOOTING

- **Toothbrush does not turn on:** Ensure batteries are correctly installed with the correct polarity. Replace with fresh AA batteries if necessary.
- **Weak brushing performance:** This indicates low battery power. Replace the two AA batteries.
- **Brush head feels loose:** Ensure the brush head is pushed down firmly onto the handle shaft until it clicks into place. If it remains loose, the brush head or handle may be damaged and require replacement.

SPECIFICATIONS

Feature	Detail
Model Number	DB4.510.K (Stages Power)
Power Source	2 x AA Batteries (Alimenté par pile)
Age Range	Child (Enfant)
Dimensions (L x W x H)	25 x 6 x 4 cm
Weight	150 grams
Included Components	Replacement brush head (Tête de brosse de rechange)
Handle Material	Plastic (Plastique)
Operating Mode	Automatic (Automatisch)

WARRANTY

This Oral-B product is covered by a manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included in the product packaging or visit the official Oral-B website. Keep your proof of purchase for warranty claims.

SUPPORT

For further assistance, product information, or to report any issues not covered in this manual, please contact Oral-B customer service. Contact details can typically be found on the product packaging or on the official Oral-B website for your region.

Online Resources: Visit www.oralb.com for additional product information and support.