

Ikea NOT

IKEA NOT Floor/Reading Lamp User Manual

Model: NOT (603.246.76)

1. INTRODUCTION

The IKEA NOT Floor/Reading Lamp provides versatile lighting for your home. It features two light sources: an uplighter for general room illumination and an adjustable reading lamp for focused light. Both lamps can be operated independently, allowing you to customize your lighting environment.



Figure 1: IKEA NOT Floor/Reading Lamp (Model 603.246.76)

This image displays the assembled IKEA NOT floor lamp in black, positioned next to a tall green potted plant. The lamp features a large, upward-facing shade for ambient lighting and a smaller, adjustable shade on a flexible arm for reading or task lighting. The base is round and black, with the power cord visible on the floor.

2. SAFETY INFORMATION

- Always disconnect the lamp from the power supply before cleaning or changing bulbs.
- Do not use bulbs with wattage exceeding the maximum specified on the lamp.
- Ensure the lamp is placed on a stable, level surface to prevent tipping.
- Keep the lamp away from water and moisture.
- Do not attempt to modify the lamp's electrical components. Refer servicing to qualified personnel.
- This lamp is for indoor use only.

3. PACKAGE CONTENTS

Upon opening the package, verify that all components are present and undamaged. The IKEA NOT lamp typically includes:

- Lamp base

- Main pole sections (usually 3-4 parts)
- Uplighter lamp head with shade
- Reading lamp arm with lamp head and shade
- Power cord with switch
- Assembly hardware (e.g., screws, plastic fixings)
- *Note: Light bulbs are not included and must be purchased separately.*

4. SETUP AND ASSEMBLY

Assembly of the IKEA NOT lamp is straightforward and requires no special tools. Follow these steps:

1. **Attach the Base:** Connect the lowest pole section to the lamp base. Ensure it is securely tightened.
2. **Assemble the Pole:** Screw the remaining pole sections together, ensuring the power cord runs freely through the center. The reading lamp arm is typically pre-attached to one of the upper pole sections.
3. **Secure Lamp Heads:** Attach the uplighter lamp head to the top of the assembled pole. Secure the shades onto both the uplighter and reading lamp heads using the provided plastic fixings or screws.
4. **Install Bulbs:**
 - For the **uplighter (main lamp)**, use an E27 base bulb. An opal bulb is recommended for uniform light diffusion.
 - For the **reading lamp**, the bulb type can vary. While some product descriptions mention E14, user experiences often indicate a GU10 base. Please check the socket directly on your reading lamp to confirm the correct bulb type before purchase.

Important: Do not exceed the maximum wattage indicated on the lamp sockets.

5. **Cable Management:** Use the integrated clips along the pole to secure the power cord, ensuring it is tidy and does not pose a tripping hazard.
6. **Connect to Power:** Plug the lamp into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

The IKEA NOT lamp features independent switches for each light source, allowing for flexible control:

- **Uplighter:** The main uplighter lamp is controlled by a push-button switch located on the lamp pole. Press once to turn on, press again to turn off.
- **Reading Lamp:** The adjustable reading lamp has its own push-button switch, typically located on the flexible arm or near its base. Press to turn on/off.
- **Adjusting the Reading Lamp:** The flexible arm allows you to direct the light from the reading lamp precisely where needed. Gently bend the arm to adjust its position.

6. MAINTENANCE

To ensure the longevity and optimal performance of your lamp, follow these simple maintenance guidelines:

- **Cleaning:** Disconnect the lamp from the power supply. Wipe the lamp and shades with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Do not use abrasive cleaners or solvents.

- **Bulb Replacement:** Always ensure the lamp is unplugged and the bulb has cooled down before attempting to replace it. Follow the bulb type and wattage recommendations.
- **Inspection:** Periodically check the power cord and plug for any signs of damage. If damage is found, discontinue use and seek professional repair.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Not plugged in. Power outlet is not working. Bulb is faulty or loose. Switch is faulty.	Ensure the lamp is securely plugged into a working outlet. Test the outlet with another appliance. Check if the bulb is screwed in tightly. Replace the bulb if necessary. If the switch is faulty, contact customer support.
Light is flickering.	Loose bulb connection. Incompatible bulb type. Faulty bulb.	Tighten the bulb. Ensure the correct bulb type (E27/GU10 or E14) is used. Replace the bulb.
Lamp is unstable.	Base not properly attached. Lamp placed on an uneven surface.	Re-check all pole connections and ensure the base is securely fastened. Move the lamp to a flat, stable surface.

8. SPECIFICATIONS

Brand:	IKEA
Model Number:	NOT (603.246.76)
Color:	Black
Dimensions (approx.):	29 cm (depth) x 13 cm (width) x 37 cm (height) <i>(Note: These dimensions may refer to packaging or a specific component; actual assembled height is typical for a floor lamp.)</i>
Weight:	4.25 kg
Voltage:	230 Volts (AC)
Max. Power (Uplighter):	230 Watts (Max. bulb wattage for E27 socket)
Bulb Base (Uplighter):	E27
Bulb Base (Reading Lamp):	Varies (commonly GU10 or E14 - check socket)
Material:	Plastic (shades), Metal (pole/base)

Switch Type:	Push-button
Energy Efficiency:	Compatible with bulbs A++ to D

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to your purchase receipt or contact IKEA customer service directly. You can find contact details on the official IKEA website or in the documentation provided with your purchase.

Online Resources: For additional product information, assembly guides, and FAQs, visit the official [IKEA website](#).