

## Fagor FA-950SLTX

# Fagor FA-950SLTX 5-Burner Gas Cooktop Instruction Manual

Model: FA-950SLTX

## 1. INTRODUCTION

---

Thank you for choosing the Fagor FA-950SLTX 5-Burner Gas Cooktop. This manual provides essential information for the safe installation, operation, and maintenance of your appliance. Please read these instructions thoroughly before using the cooktop and retain them for future reference.

## 2. IMPORTANT SAFETY INFORMATION

---

**WARNING:** If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS:**
  - a. Do not try to light any appliance.
  - b. Do not touch any electrical switch; do not use any phone in your building.
  - c. Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - d. If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency, or the gas supplier.
- Ensure adequate ventilation in the kitchen area during operation.
- Keep children away from the appliance during operation and when it is cooling down.
- Never use the appliance as a space heater.

## 3. PRODUCT OVERVIEW

---

The Fagor FA-950SLTX is a 34-inch gas cooktop designed for built-in installation, featuring a durable stainless steel surface and five powerful burners. It is equipped with a universal ignition system and a flame failure safety device for enhanced safety.



**Figure 3.1:** Top view of the Fagor FA-950SLTX 5-Burner Gas Cooktop. This image shows the stainless steel surface, five gas burners with continuous grates, and control knobs located at the front.

## Key Features:

- **5 Gas Burners:** Provides versatile cooking options.
- **Interlocking Continuous Grates:** Allows for easy movement of cookware across burners.
- **Automatic Re-ignition:** Automatically re-lights a burner if the flame accidentally extinguishes.
- **Powerful Sealed Burners:** Designed for efficient cooking and easy cleaning.
- **Triple Crown Burner (16,000 BTU/h):** A high-power burner for rapid heating and large cookware.
- **Universal Ignition:** Ensures reliable ignition for all burners.
- **Flame Failure Safety Device:** Automatically cuts off gas supply if the flame is extinguished.
- **Metallic Knobs:** Durable and easy to operate controls.
- **LPG Conversion Kit Included:** Allows for conversion to Liquid Propane Gas if needed.

## 4. SETUP AND INSTALLATION

---

Installation of this gas cooktop must be performed by a qualified technician in accordance with local codes and regulations. Ensure the installation area meets the required dimensions and ventilation standards.

### 4.1 Unpacking

- Carefully remove all packaging materials from the cooktop.
- Inspect the appliance for any shipping damage. Report any damage immediately to the carrier and your dealer.
- Ensure all components listed in the packing list are present.

### 4.2 Location Requirements

- The cooktop is designed for built-in installation into a countertop.
- Ensure sufficient clearance from combustible materials above and around the cooktop.
- Provide adequate ventilation as per local building codes.

### 4.3 Gas and Electrical Connections

- The cooktop operates on natural gas or can be converted to LPG using the included conversion kit.
- Electrical connection: 120 Volts. This is required for the electronic ignition system.
- All gas and electrical connections must comply with local codes and be performed by a licensed professional.
- Perform a leak test on all gas connections after installation.

### 4.4 Dimensions and Cutout

The overall product dimensions are approximately 20.07 inches (D) x 33.86 inches (W) x 2.15 inches (H). Refer to the detailed installation template for precise countertop cutout dimensions.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Before First Use

- Remove any protective films or stickers from the cooktop surface and grates.
- Clean the cooktop surface with a damp cloth and mild detergent.
- Ensure all burner caps and grates are correctly positioned.

### 5.2 Lighting a Burner

1. Place cookware on the desired burner grate.
2. Push down and turn the corresponding control knob counter-clockwise to the "HIGH" position. You will hear a clicking sound as the electronic ignition sparks.
3. Once the flame ignites, continue to hold the knob down for a few seconds to allow the flame failure safety device to engage.
4. Release the knob and adjust the flame to the desired cooking intensity by turning the knob between "HIGH" and "LOW" settings.
5. If the burner does not light within 15 seconds, turn the knob to the "OFF" position, wait one minute, and try again.

### 5.3 Flame Adjustment

- The flame should be stable and blue, with a visible inner cone.
- Adjust the flame size to match the bottom of your cookware. A flame that extends beyond the cookware can waste energy and pose a safety risk.
- For simmering, turn the knob to the lowest setting. If simmering is difficult to achieve, ensure the burner caps are clean and correctly seated.

### 5.4 Turning Off a Burner

To turn off a burner, simply turn the control knob clockwise to the "OFF" position. Ensure the flame is completely extinguished.

## 6. CARE AND MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Fagor gas cooktop.

### 6.1 Daily Cleaning

- Allow the cooktop to cool completely before cleaning.
- Wipe the stainless steel surface with a soft cloth and mild soapy water or a specialized stainless steel cleaner. Avoid abrasive cleaners or scouring pads.
- Clean spills immediately to prevent staining.

### 6.2 Burner and Grate Cleaning

- Remove the continuous grates and burner caps. These can be washed in warm soapy water. For stubborn stains, a non-abrasive scrub brush can be used.
- Ensure burner ports are clear of food debris. Use a small brush or toothpick if necessary.
- Dry all parts thoroughly before reassembling. Incorrectly placed burner caps can affect flame performance.
- The sealed burners are designed to prevent spills from entering the internal components, simplifying cleanup.

### 6.3 Control Knobs

The metallic control knobs can be pulled off for cleaning. Wash them with warm soapy water, dry thoroughly, and reattach.

## 7. TROUBLESHOOTING

Before contacting service, please review the following common issues and solutions:

| Problem                                       | Possible Cause                                                                                                                         | Solution                                                                                                                                                                                                          |
|-----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Burner does not light or sparks continuously. | No gas supply.<br>Power outage or electrical issue.<br>Burner cap or base is wet or improperly seated.<br>Igniter is dirty or damaged. | Check if the main gas valve is open.<br>Verify power supply to the cooktop.<br>Ensure burner caps and bases are dry and correctly positioned.<br>Clean the igniter with a dry cloth. If damaged, contact service. |
| Gas smell without a flame.                    | Gas leak.<br>Burner knob left in "ON" position without ignition.                                                                       | <b>Immediately follow "WHAT TO DO IF YOU SMELL GAS" instructions in Section 2.</b><br>Ensure all control knobs are in the "OFF" position.                                                                         |
| Flame is uneven, yellow, or too high/low.     | Burner ports are clogged.<br>Burner cap is not seated correctly.<br>Incorrect gas type or pressure.                                    | Clean burner ports with a small brush.<br>Re-seat the burner cap properly.<br>Contact a qualified technician to verify gas type and pressure settings.                                                            |
| Cooktop surface scratches easily.             | Use of abrasive cleaning materials.<br>Rough handling of cookware.                                                                     | Use only soft cloths and non-abrasive cleaners for stainless steel.<br>Lift cookware rather than sliding it across the surface.                                                                                   |

## 8. SPECIFICATIONS

| Feature                        | Detail                                                |
|--------------------------------|-------------------------------------------------------|
| Model Number                   | FA-950SLTX                                            |
| Brand                          | Fagor                                                 |
| Installation Type              | Built-In                                              |
| Fuel Type                      | Gas (Natural Gas, LPG convertible)                    |
| Number of Burners              | 5                                                     |
| Triple Crown Burner Output     | 16,000 BTU/h                                          |
| Ignition System Type           | Electronic, Universal Ignition, Automatic Re-ignition |
| Control Type                   | Knob                                                  |
| Material                       | Stainless Steel                                       |
| Color                          | Stainless Steel                                       |
| Voltage                        | 120 Volts                                             |
| Product Dimensions (D x W x H) | 20.07" x 33.86" x 2.15"                               |
| Item Weight                    | 44 Pounds                                             |
| UPC                            | 735186002851                                          |

## 9. WARRANTY AND SUPPORT

### 9.1 Manufacturer's Warranty

This Fagor cooktop is covered by a **1-year Parts & Labor warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal household use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage resulting from improper installation, misuse, abuse, accident, or unauthorized repairs. For full warranty terms and conditions, please refer to the documentation included with your product or contact Fagor customer service.

### 9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or to schedule service, please contact Fagor customer support. Have your model number (FA-950SLTX) and serial number ready when you call.

*Contact information for Fagor customer support can typically be found on the manufacturer's website or in the packaging materials.*

