

[Manuals.plus](#) /

› [Profi Cook](#) /

› ProfiCook PC-MWG 1045 H Microwave Oven User Manual

Profi Cook MWG1045H

ProfiCook PC-MWG 1045 H Microwave Oven User Manual

Model: MWG1045H

Brand: Profi Cook

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Do not use the appliance for other than intended household use.
- This appliance is intended for household use only.
- Do not attempt to service or repair this appliance yourself. Contact qualified service personnel for examination, repair, or adjustment.
- Ensure the appliance is placed on a stable, level surface.
- Do not block any ventilation openings.
- Do not heat sealed containers in the microwave, as they may explode.
- Regularly inspect the appliance for any signs of damage.

PRODUCT OVERVIEW

The ProfiCook PC-MWG 1045 H is a versatile 3-in-1 appliance combining microwave, grill, and convection oven functions. It features a 23-liter capacity and a powerful 1400W output, designed for efficient cooking and heating.



Image: Front view of the ProfiCook PC-MWG 1045 H microwave oven, showcasing its sleek black design with a silver handle and control panel on the right.

Key Features:

- 3-in-1 functionality: Microwave, Grill, and Convection.
- 23 Liters capacity.
- 900 Watts Microwave power.
- 1950 Watts Grill power.
- 1950 Watts Convection power.
- Electronic control panel.
- Stainless steel interior.

SETUP AND INSTALLATION

Unpacking:

Carefully remove the microwave oven and all packing materials from the carton. Check for any damage such as dents or a broken door. Do not install if the appliance is damaged. Retain the carton and packing materials for future use or proper disposal.

Placement:


- Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it.
- Ensure adequate ventilation. Leave a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side for proper airflow.
- Do not place the oven near heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.
- Keep the oven away from strong magnetic fields.

Electrical Connection:

Plug the appliance into a properly installed and grounded wall outlet. Ensure the voltage and frequency of your power supply match the specifications on the appliance's rating label (230V, 50Hz).

OPERATING INSTRUCTIONS

The control panel of the ProfiCook PC-MWG 1045 H allows for easy selection of various cooking modes and settings. Familiarize yourself with the buttons and the rotary dial.

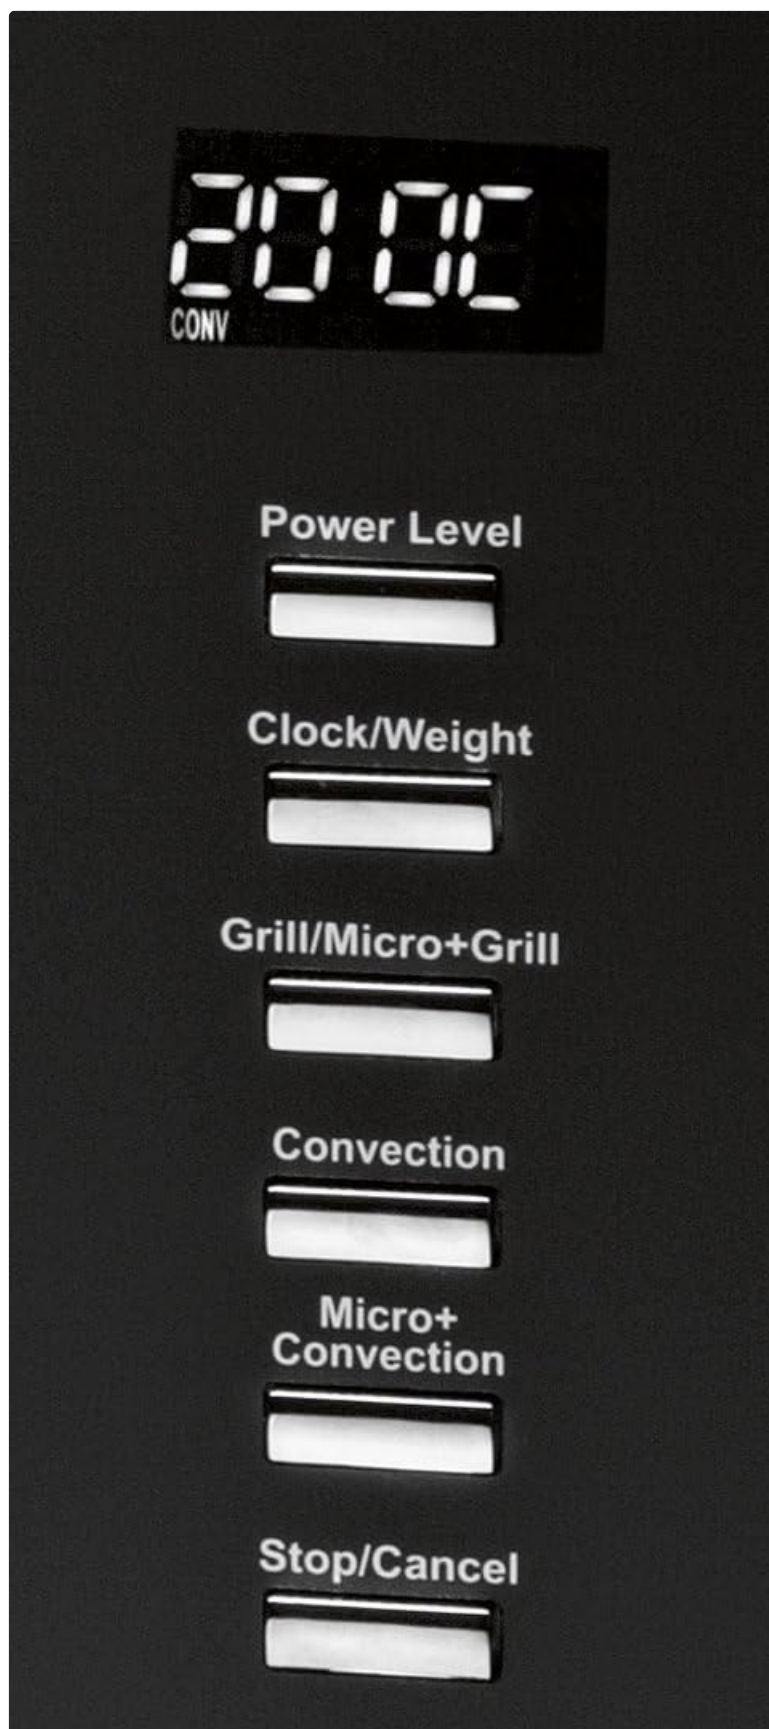

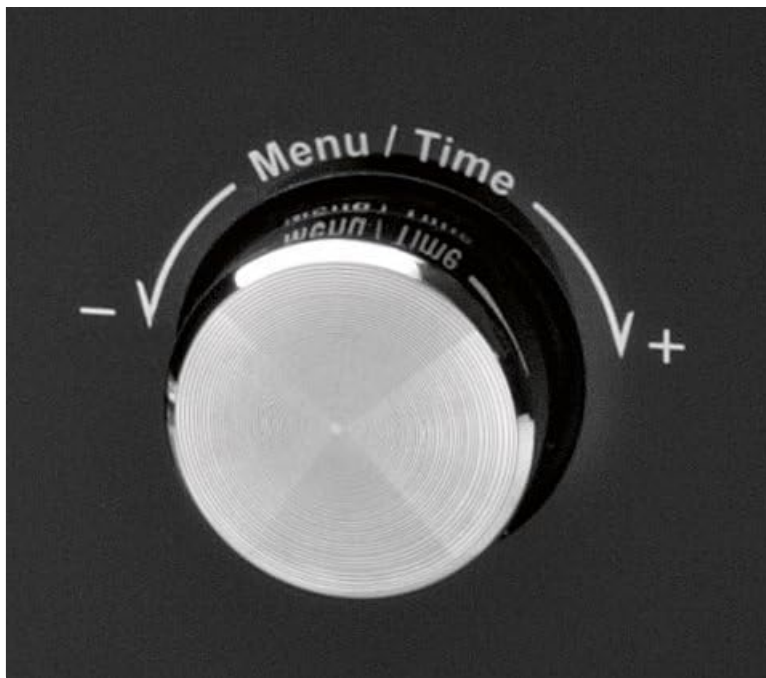


Image: Close-up view of the control panel of the ProfiCook PC-MWG 1045 H, showing the digital display, function buttons (Power Level, Clock/Weight, Grill/Micro+Grill, Convection, Micro+Convection, Stop/Cancel), and the Menu/Time rotary dial.

Control Panel Overview:

- **Digital Display:** Shows time, power level, and cooking indicators.
- **Power Level Button:** Selects microwave power levels.
- **Clock/Weight Button:** Sets the clock or input weight for defrosting.
- **Grill/Micro+Grill Button:** Activates grill function or combined microwave and grill cooking.
- **Convection Button:** Activates convection oven function.
- **Micro+Convection Button:** Activates combined microwave and convection cooking.
- **Stop/Cancel Button:** Stops cooking, clears settings, or cancels a program.
- **Menu/Time Rotary Dial:** Adjusts cooking time, weight, or selects menu options.

Basic Microwave Operation:

1. Place food in a microwave-safe container on the turntable.
2. Close the door securely.
3. Press the **Power Level** button repeatedly to select the desired power level (e.g., P100 for 100% power).
4. Turn the **Menu/Time** dial to set the cooking time.
5. Press the **Start** button (often integrated with the dial or a separate button, refer to specific model for exact start button).

Grill Function:

The grill function is ideal for browning and crisping food. Use the metal rack provided for best results.

1. Place food on the grill rack.
2. Press the **Grill/Micro+Grill** button once for grill mode.
3. Turn the **Menu/Time** dial to set the grilling time.
4. Press **Start**.

Convection Function:

The convection function allows the oven to operate like a traditional oven, circulating hot air for even cooking and baking.

1. Press the **Convection** button.
2. Turn the **Menu/Time** dial to set the desired temperature.
3. Press **Convection** again to confirm temperature.
4. Turn the **Menu/Time** dial to set the cooking time.
5. Press **Start**.

Combined Cooking (Micro+Grill / Micro+Convection):

These modes combine microwave power with grill or convection heat for faster and more versatile cooking.

- **Micro+Grill:** Press **Grill/Micro+Grill** multiple times to select the desired combination mode (e.g., C-1, C-2). Set time and start.
- **Micro+Convection:** Press **Micro+Convection** multiple times to select the desired combination mode. Set temperature, then time, and start.

MAINTENANCE AND CLEANING

Regular cleaning of your microwave oven will ensure its longevity and hygienic operation. Always unplug the appliance before cleaning.

Interior Cleaning:

- Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent.
- Remove the glass turntable and wash it in warm, soapy water or in a dishwasher.
- Clean the roller ring and oven floor regularly to prevent excessive noise.
- Do not use abrasive cleaners or metal scouring pads on any part of the oven.

Exterior Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the control panel gently with a soft, damp cloth. Avoid excessive moisture.
- Ensure the ventilation openings are free from dust and debris.

TROUBLESHOOTING

If you encounter issues with your ProfiCook PC-MWG 1045 H, refer to the following common problems and their solutions:

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker.
Oven not heating.	Door not closed properly; Incorrect cooking time/power set.	Ensure door is fully latched; Verify cooking settings.
Turntable makes noise.	Roller ring or oven floor is dirty; Turntable not positioned correctly.	Clean roller ring and oven floor; Re-position turntable correctly on the roller ring.
Food is unevenly cooked.	Insufficient stirring/turning; Food not covered properly; Incorrect power level.	Stir or turn food during cooking; Cover food with microwave-safe lid or plastic wrap; Adjust power level.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	MWG1045H
Brand	Profi Cook
Type	3-in-1 Microwave, Grill, Convection Oven
Capacity	23 Liters
Microwave Power	900 Watts
Grill Power	1950 Watts
Convection Power	1950 Watts
Total Power (Max)	1400 Watts (Input Power)
Voltage	230 Volts
Frequency	50 Hz
Dimensions (W x D x H)	48 cm x 42 cm x 28 cm (approx.)
Weight	17.7 kg
Material	Stainless Steel (Interior)

WARRANTY AND SUPPORT

Profi Cook products are manufactured to high quality standards. This appliance comes with a standard manufacturer's warranty against defects in materials and workmanship under normal household use.

For warranty claims, technical support, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official Profi Cook website. Please have your model number (MWG1045H) and proof of purchase ready when contacting support.

© 2024 Profi Cook. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question