

[Manuals.plus](#) /

› [Sonoro](#) /

› Sonoro SO 2100-100 Portable CD Player User Manual

Sonoro SO-2100-100

Sonoro SO 2100-100 Portable CD Player User Manual

MODEL: SO-2100-100

1. Introduction

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Sonoro SO 2100-100 Portable CD Player. This device combines a CD player with Bluetooth connectivity and a radio tuner, offering versatile audio playback options in a compact design.

Please read this manual carefully before using the device to ensure proper operation and to maximize its lifespan.



Figure 1: Front and side view of the Sonoro SO 2100-100 Portable CD Player. The device features a sleek black finish with a brushed aluminum front panel, an LCD display, and clearly labeled control buttons.

2. Setup

2.1 Unpacking

Carefully remove the Sonoro SO 2100-100 from its packaging. Retain the packaging materials for future transport or storage.

2.2 Power Connection

Connect the provided power adapter to the DC IN port on the rear of the unit and then plug it into a standard wall outlet. Ensure the power supply matches the voltage requirements of your region.



Figure 2: Rear view of the Sonoro SO 2100-100, displaying various connection ports including the antenna input, AUX IN, headphone jack, USB port, and DC power input. The clock battery compartment is also visible.

2.3 Antenna Connection

For optimal radio reception, connect the included FM/DAB antenna to the designated antenna input on the rear of the unit. Extend the antenna fully and position it for the best signal.

2.4 Initial Power On

Press the **Power** button (usually located on the front panel) to turn on the device. The LCD display will illuminate.

3. Operating Instructions

3.1 Front Panel Controls



Figure 3: Close-up of the Sonoro SO 2100-100 front panel, highlighting the LCD display, CD slot, and control buttons for playback.

- **Power Button:** Turns the unit on or off.
- **Play/Pause Button:** Starts or pauses CD/Bluetooth/USB playback.
- **Skip/Tune Buttons (*Previous/Next*):** Skips tracks on CD/Bluetooth/USB or tunes radio frequencies.
- **Menu Button:** Accesses system settings and mode-specific options.
- **Mode Button:** Switches between CD, Bluetooth, Radio (FM/DAB), and AUX input modes.
- **Volume Knob:** Adjusts the audio output level.

3.2 CD Playback

1. Press the **Mode** button to select CD mode.
2. Gently insert a CD into the disc slot on the front panel with the label side facing up. The unit will automatically load the disc.
3. Playback should begin automatically. If not, press the **Play/Pause** button.
4. Use the **Skip/Tune** buttons to navigate between tracks.

3.3 Bluetooth Operation

1. Press the **Mode** button to select Bluetooth mode. The display will show "Pairing" or "Bluetooth".
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "Sonoro SO 2100-100" (or similar name) from the list of devices.
4. Once paired, you can stream audio from your device to the Sonoro unit. Control playback (play, pause, skip) either from your device or using the unit's controls.

3.4 Radio Operation (FM/DAB)

1. Press the **Mode** button to select FM or DAB radio mode.
2. In FM mode, use the **Skip/Tune** buttons to manually tune to a station or press and hold to auto-scan for the next available station.
3. In DAB mode, the unit will typically perform an initial scan to find available digital stations. Use the **Skip/Tune** buttons to browse the station list.
4. To save a preset station, refer to the specific instructions in the full manual (not provided in detail here).

3.5 Auxiliary Input (AUX IN)

1. Connect an external audio device (e.g., MP3 player) to the **AUX IN** port on the rear of the unit using a 3.5mm audio cable.
2. Press the **Mode** button to select AUX IN mode.
3. Audio from the connected device will now play through the Sonoro unit. Control playback from the external device.

3.6 USB Playback

1. Insert a USB flash drive containing audio files into the USB port on the rear of the unit.
2. Press the **Mode** button to select USB mode.
3. The unit will begin playing audio files sequentially. Note that folder navigation may not be supported; files are typically played in the order they appear on the drive.

4. Maintenance

4.1 Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. For stubborn marks, slightly dampen the cloth with water. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

4.2 CD Care

Handle CDs by their edges. Keep them clean and free of dust, fingerprints, and scratches. Store CDs in their cases when not in use.

4.3 General Care

Avoid exposing the unit to extreme temperatures, direct sunlight, high humidity, or dusty environments. Ensure adequate ventilation around the unit.

5. Troubleshooting

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet faulty.	Ensure power cable is securely connected. Try a different power outlet.
No sound	Volume too low; Mute activated; Incorrect source selected.	Increase volume. Check if unit is muted. Press Mode to select correct input source.
CD not playing	CD inserted incorrectly; CD dirty or scratched; Unit in wrong mode.	Re-insert CD correctly. Clean or replace CD. Ensure CD mode is selected.
Bluetooth not connecting	Device not in pairing mode; Bluetooth disabled on external device; Too far from unit.	Ensure unit is in Bluetooth pairing mode. Enable Bluetooth on your device. Move device closer to the unit.
Poor radio reception	Antenna not connected or positioned poorly; Interference.	Connect and adjust antenna position. Move unit away from other electronic devices.

6. Specifications

Feature	Detail
Brand	Sonoro
Model	SO-2100-100
Connectivity Technology	Bluetooth, USB, AUX
Media Type Supported	CD
Radio Tuner	FM, DAB
Color	Black
Product Weight	3.25 kg (7.16 lbs)
Power Source	AC Power Adapter

Feature	Detail
Batteries	2 Lithium-metal batteries (included, likely for clock/memory)
Manufacturer	Sonoro Spain
Model Year	2014

7. Warranty and Support

7.1 Manufacturer's Warranty

The Sonoro SO 2100-100 comes with a manufacturer's warranty of 2 years from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact your retailer or the official Sonoro customer support. Refer to the Sonoro website or product packaging for contact information.

© 2024 Sonoro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00G3U4SRM>

More documents and user manuals: **<https://manuals.plus/>**