

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [hansgrohe](#) /
- › [hansgrohe Raindance Select S 125 Hand Shower User Manual](#)

hansgrohe 26530400

hansgrohe Raindance Select S 125 Hand Shower User Manual

Model: 26530400

INTRODUCTION

This manual provides detailed instructions for the hansgrohe Raindance Select S 125 hand shower. It covers essential information regarding its features, proper installation, daily operation, routine maintenance, and technical specifications. Please read this manual thoroughly before installation and use to ensure safe and efficient operation of your hand shower.



The hansgrohe Raindance Select S 125 hand shower, featuring a white and chrome finish.

PRODUCT FEATURES


- **3 Spray Modes:** Easily switch between RainAir, Rain, and WhirlAir spray modes with the touch of a button.
- **Generous Shower Head:** The 125 mm large shower head provides a broad and comfortable water flow.
- **QuickClean Technology:** Flexible silicone nozzles allow for easy removal of limescale deposits by simply rubbing them with your finger.
- **Durable Construction:** High-quality materials ensure long-lasting performance.
- **High Pressure Compatibility:** Designed for use with high-pressure water systems.

SETUP AND INSTALLATION

The hansgrohe Raindance Select S 125 hand shower is designed for straightforward installation. It connects to standard shower hoses with a G 1/2 thread.

1. Ensure your water supply is turned off before beginning installation.
2. Unscrew your existing hand shower from the shower hose.
3. Check that the rubber washer is correctly seated in the new hand shower's connection.
4. Screw the hansgrohe Raindance Select S 125 hand shower onto your shower hose by hand until it is snug. Avoid overtightening.

5. Turn on the water supply and check for any leaks. If leaks occur, tighten slightly more or re-seat the washer.

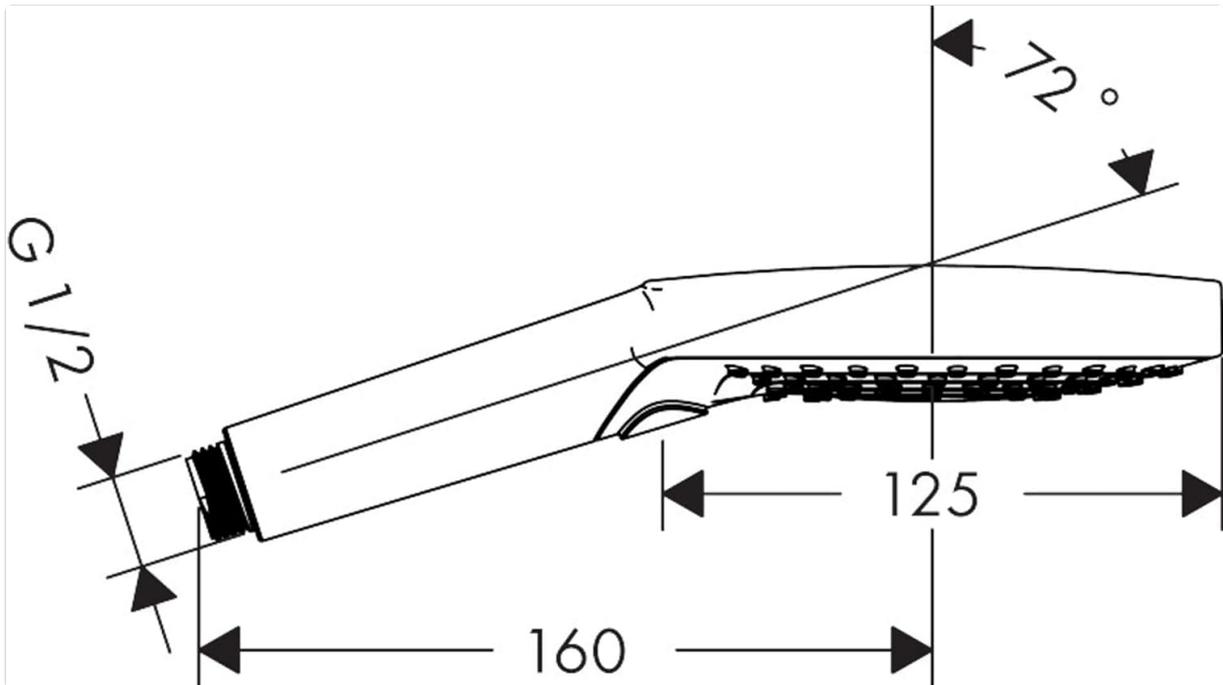

Technical drawing illustrating the dimensions and G 1/2 connection point of the hand shower.

OPERATING INSTRUCTIONS

Your hansgrohe Raindance Select S 125 hand shower offers three distinct spray modes for a personalized shower experience.

Changing Spray Modes

To switch between the different spray modes, simply press the 'Select' button located on the shower head handle. Each press will cycle through the available modes:


- **RainAir:** A soft, voluminous rain spray enriched with air, providing a gentle and relaxing sensation.
- **Rain:** A powerful, invigorating rain spray, ideal for rinsing shampoo and a refreshing start to the day.
- **WhirlAir:** A concentrated, rotating massage spray, perfect for targeting specific areas and relieving tension.

Your browser does not support the video tag.

Official hansgrohe video demonstrating the three spray modes (RainAir, Rain, WhirlAir) and the QuickClean function of the Raindance Select S 125 hand shower.

Water Flow Rate

The water flow rate varies depending on the selected spray mode and water pressure. The diagram below illustrates typical flow rates for each mode.

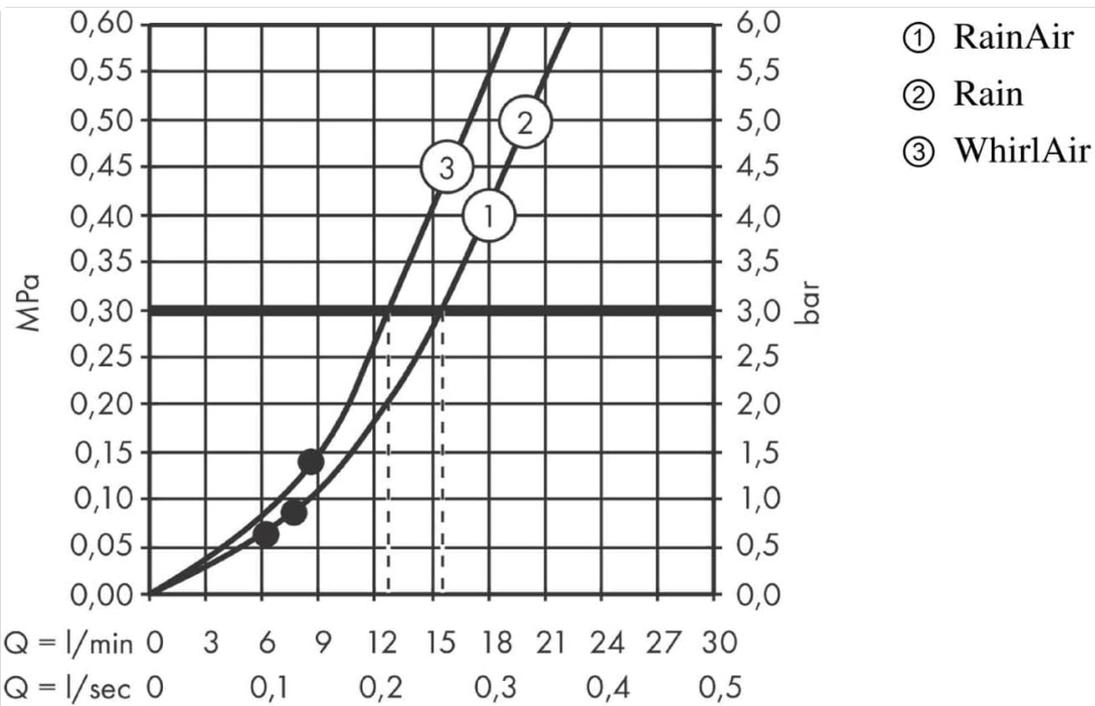

Die Verbrauchswerte wurden praxisnah mit den dazugehörigen Armaturen (Thermostat/Mischer/Unterputzventil) gemessen.

Flow rate diagram showing water consumption (Q) in liters per minute (l/min) and liters per second (l/sec) against pressure (MPa/bar) for RainAir (1), Rain (2), and WhirlAir (3) spray modes.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your hansgrohe hand shower. The integrated QuickClean technology makes limescale removal simple.

QuickClean Function

The flexible silicone nozzles on the spray face are designed to prevent limescale buildup. To clean them:

1. After each use, or as needed, gently rub your fingers across the silicone nozzles on the spray face.
2. This action dislodges any accumulated limescale, ensuring an even spray pattern.



Demonstration of the QuickClean feature, showing how to remove limescale from the silicone nozzles.

General Cleaning

For general cleaning of the hand shower's surface:

- Use only mild cleaning agents specifically designed for bathroom fixtures.
- Apply the cleaner to a soft cloth, then wipe the shower surface.
- Rinse thoroughly with clean water and dry with a soft cloth to prevent water spots.
- Avoid abrasive cleaners, scouring pads, or cleaners containing harsh chemicals like hydrochloric acid, formic acid, chlorine bleach, or acetic acid, as these can damage the finish.

TROUBLESHOOTING

If you encounter issues with your hand shower, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Reduced water flow	Limescale buildup in nozzles or filter screen.	Clean nozzles using QuickClean. Check and clean the filter screen at the hose connection.
Leaking at hose connection	Loose connection or damaged washer.	Tighten the hose connection. Replace the rubber washer if it is worn or damaged.
Spray modes not changing	Debris or limescale affecting the Select button mechanism.	Rinse the shower head thoroughly. If the issue persists, contact customer support.

SPECIFICATIONS

Specification	Detail
Brand	hansgrohe
Model Number	26530400
Style	3 spray modes (RainAir, Rain, WhirlAir)
Shape	Round
Material	Silicone (nozzles), Chrome (finish)
Finish Type	Chrome
Installation Type	Handheld (G 1/2 connection)
Color	White/Chrome
Product Dimensions	4.92"L x 1.97"W (125 mm diameter)
Number of Settings	3
Efficiency	Water saving
Item Weight	9.2 ounces
Hose Length (Included Components)	120 Millimeters (referring to the shower head size, not hose length)

WARRANTY AND SUPPORT

Your hansgrohe Raindance Select S 125 hand shower comes with a **5-year warranty**, covering manufacturing defects under normal use and service.

For warranty claims, technical assistance, or further inquiries, please visit the official hansgrohe website or contact their customer support directly. Ensure you have your product model number (26530400) and proof of purchase available.

