



[Manuals.plus](#) /

> [Sax](#) /

> Sax Origa-Mini Accordion Book, Assorted Designs (Pack of 72) - Instruction Manual

**Sax 1429435**

# Sax Origa-Mini Accordion Book Kit Instruction Manual

Brand: Sax | Model: 1429435

## INTRODUCTION

---

The Sax Origa-Mini Accordion Book Kit provides all necessary components for creating unique zigzag standing books. This kit is designed for paper craft and bookmaking enthusiasts, offering a creative outlet for individuals to design and personalize their own miniature books.

Key features of this kit include:

- Miniature accordion books are fun to create.
- Children can reflect their unique personality through these books.
- The kit contains everything needed to get started.
- Finished products can be used for writing, drawing, doodling, or displaying.




*Image: An overview of the Sax Origa-Mini Accordion Book Kit components, including chipboard covers, accordion pages, and stacks of colorful origami paper squares.*

## **WHAT'S IN THE BOX**

---

Upon opening your Sax Origa-Mini Accordion Book Kit, you will find the following components:

- Origa-Mini Accordion Book Kit Chipboard Covers
- White Accordion Fold Sheets
- 360 Sheets of Washi Origami Paper (12 Sheets Each of 30 Different Japanese Print Patterns)
- Easy-to-Follow Instructions

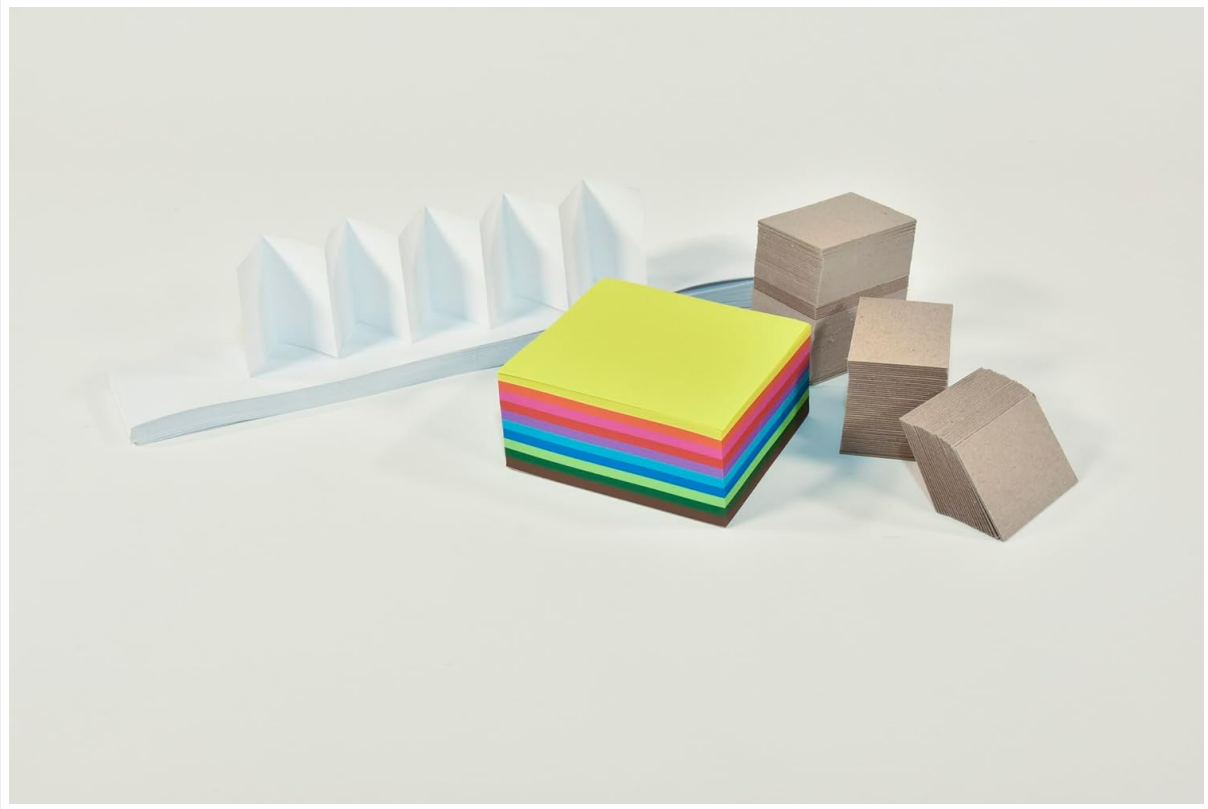

*Image: A closer view of the kit's contents, showing stacks of chipboard covers, white accordion-fold paper, and a colorful stack of origami paper squares.*

## SETUP

Before beginning your bookmaking project, ensure you have a clean, flat work surface. Organize all the kit components for easy access.

1. **Unpack Components:** Carefully remove all items from the kit packaging.
2. **Identify Parts:** Separate the chipboard covers, accordion fold sheets, and origami paper squares into distinct piles.
3. **Review Instructions:** Read through the included "Easy-to-Follow Instructions" to familiarize yourself with the book assembly process. These instructions will provide specific guidance on how to prepare and combine the materials.

## OPERATING INSTRUCTIONS (ASSEMBLY)

Follow these general steps to assemble your Origa-Mini Accordion Books. Refer to the detailed instructions included in your kit for precise guidance on adhesive application and folding techniques.

1. **Prepare Covers:** Select two chipboard covers for one book. These will form the front and back of your accordion book. You may decorate these covers before or after attaching the accordion pages.
2. **Attach Accordion Pages:** Take one white accordion fold sheet. Apply adhesive (not included in kit, typically glue stick or craft glue) to one end of the accordion sheet and carefully attach it to the inside of one chipboard cover. Ensure it is aligned straight.
3. **Complete Book Structure:** Apply adhesive to the other end of the accordion sheet and attach it to the inside of the second chipboard cover. Press firmly to ensure a secure bond. Allow adequate drying time.
4. **Decorate and Personalize:** Once the basic book structure is complete, use the provided origami paper squares to decorate the covers or the accordion pages. These squares can be folded, cut, or glued to create unique designs. You can also use other art supplies (not included) like markers, crayons, or paint to further

personalize your book.

5. **Utilize Pages:** The accordion pages can be used for writing, drawing, doodling, or attaching small photos and mementos. The zigzag fold allows the book to stand upright for display.

## MAINTENANCE

---

To ensure the longevity of your finished accordion books:

- **Storage:** Store finished books in a dry, cool place away from direct sunlight to prevent fading or damage to paper and adhesives.
- **Handling:** Handle books gently, especially when expanding or collapsing the accordion pages, to avoid tearing or creasing.
- **Cleaning:** If necessary, gently wipe covers with a dry, soft cloth. Avoid using liquids or abrasive cleaners.

## TROUBLESHOOTING

---

If you encounter any issues during the assembly process, consider the following:

- **Adhesive Not Holding:** Ensure you are using an appropriate craft adhesive for paper and chipboard. Apply an even layer and allow sufficient drying time, possibly applying pressure during drying.
- **Accordion Pages Not Folding Evenly:** Double-check that the accordion sheets are aligned correctly when attaching to the covers. Gentle creasing along existing folds can help maintain uniformity.
- **Covers Warping:** Excessive moisture from adhesives can cause chipboard to warp. Use a minimal amount of adhesive necessary for a strong bond and allow it to dry under a flat, heavy object if warping occurs.

## SPECIFICATIONS

---

Feature	Detail
Product Name	Sax Origa-Mini Accordion Book Kit
Model Number	1429435
Package Dimensions	10.94 x 4.65 x 2.68 inches
Item Weight	0.01 ounces
Manufacturer	School Specialty
Date First Available	November 8, 2013
Kit Yield	Makes a total of 72 books
Origami Paper Size	4 x 4 inches

## WARRANTY INFORMATION

---

Specific warranty information for the Sax Origa-Mini Accordion Book Kit is not explicitly provided. For details regarding returns or product satisfaction, please refer to the retailer's return policy where the product was purchased. For purchases made on Amazon, a 30-day refund/replacement policy is typically available.

## SUPPORT

---

For further assistance or inquiries regarding your Sax Origa-Mini Accordion Book Kit, please contact the

manufacturer, School Specialty, or visit the official Sax brand store online.

- **Manufacturer:** School Specialty
- **Sax Brand Store:** [Visit the Sax Store on Amazon](#)
- **General Amazon Support:** For order-related issues, please contact Amazon Customer Service.