

[manuals.plus](#) /

- › [QuietWarmth](#) /
- › [QuietWarmth THERMST-D Non-Programmable Thermostat User Manual](#)

## **QuietWarmth THERMST-D**

# **QuietWarmth THERMST-D Non-Programmable Thermostat User Manual**

For 120V or 240V Radiant Heat Systems

## **1. INTRODUCTION**

---

The QuietWarmth THERMST-D Non-Programmable Thermostat is designed to provide reliable control for 120V or 240V electric radiant floor heating systems. This thermostat offers flexible temperature management, allowing you to configure it for control based on floor temperature, room temperature, or a combination of room temperature with a floor temperature limit. It features a built-in Ground Fault Circuit Interrupter (GFCI) for enhanced safety and a clear, backlit display for easy monitoring and operation. A floor sensor is included to ensure accurate temperature readings and optimal comfort.



Figure 1: Front view of the THERMST-D Thermostat.

## 2. SAFETY INFORMATION

---

Please read all instructions carefully before installation and operation. Failure to follow these instructions may result in electric shock, fire, or property damage.

- **WARNING:** To reduce the risk of electric shock, do not connect this device to a circuit with any phase operating down more than 150 volts to ground.
- Installation must be performed by a qualified electrician in accordance with local and national electrical codes.
- The thermostat requires connection to a dedicated 20 Amp circuit.
- The resistive load connected to the thermostat must not exceed 15 Amps.
- Electric radiant floor heating systems are required by the National Electrical Code to be protected by a

Ground Fault Circuit Interrupter (GFCI). This thermostat has a built-in GFCI.

- Always turn off power at the circuit breaker before installing or servicing the thermostat.



Figure 2: Side view of the thermostat with safety warning label.

### 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- QuietWarmth THERMST-D Non-Programmable Thermostat
- Floor Sensor

### 4. PRODUCT OVERVIEW

#### 4.1 Key Features

- Non-Programmable operation for radiant floor heat systems.
- Compatible with both 120V and 240V heating systems.
- Integrated Ground Fault Circuit Interrupter (GFCI) for safety.
- Clear, backlit LED display for easy reading.

- Includes a floor sensor for precise temperature control.
- Configurable for floor temperature, room temperature, or room temperature with a floor temperature limit.
- Seven-day energy log to monitor power consumption.
- Supports multiple QuietWarmth mats: up to 120 sq ft for 120V systems, or 240 sq ft for 240V systems.

## 4.2 Components

The thermostat consists of a front display unit with control buttons and a back plate for electrical connections.

- **Front Panel:** Features a digital display showing time and temperature, along with 'Up', 'OK', and 'Down' buttons for navigation and setting adjustments.
- **Back Panel:** Contains wiring terminals for power input (L1, L2) and load output, as well as a connection point for the floor sensor.



Figure 3: Back view of the thermostat with wiring terminals.



Figure 4: Included floor sensor.

## 5. SETUP AND INSTALLATION

---

Installation should only be performed by a qualified electrician.

### 5.1 Mounting

- The thermostat is designed for wall mounting.
- Ensure the mounting location is free from direct sunlight, drafts, or other heat sources that could affect temperature readings.

### 5.2 Wiring

Before wiring, ensure power is OFF at the circuit breaker.

1. Connect the thermostat to a dedicated 20 Amp circuit.
2. Identify the Line (power supply) and Load (heating mat) wires.
3. Connect the Line wires to the L1(L) and L2(N) terminals on the thermostat's back panel.
4. Connect the Load wires from the heating mat to the 'Load' terminals on the thermostat.
5. Ensure proper grounding according to local electrical codes.
6. The thermostat is dual-voltage; it can be used with either 120V or 240V heating mats, but not simultaneously. Verify your heating mat's voltage matches the power supply.

### 5.3 Floor Sensor Placement

The floor sensor is crucial for accurate floor temperature control.

- Place the sensor next to the long edge of the QuietWarmth heating mat.
- Ensure the sensor is positioned in the heated area and not near any unheated zones or external heat sources.
- Route the sensor wire carefully to avoid damage during installation of flooring materials.



Figure 5: Example of radiant heat film installation under floating floors.

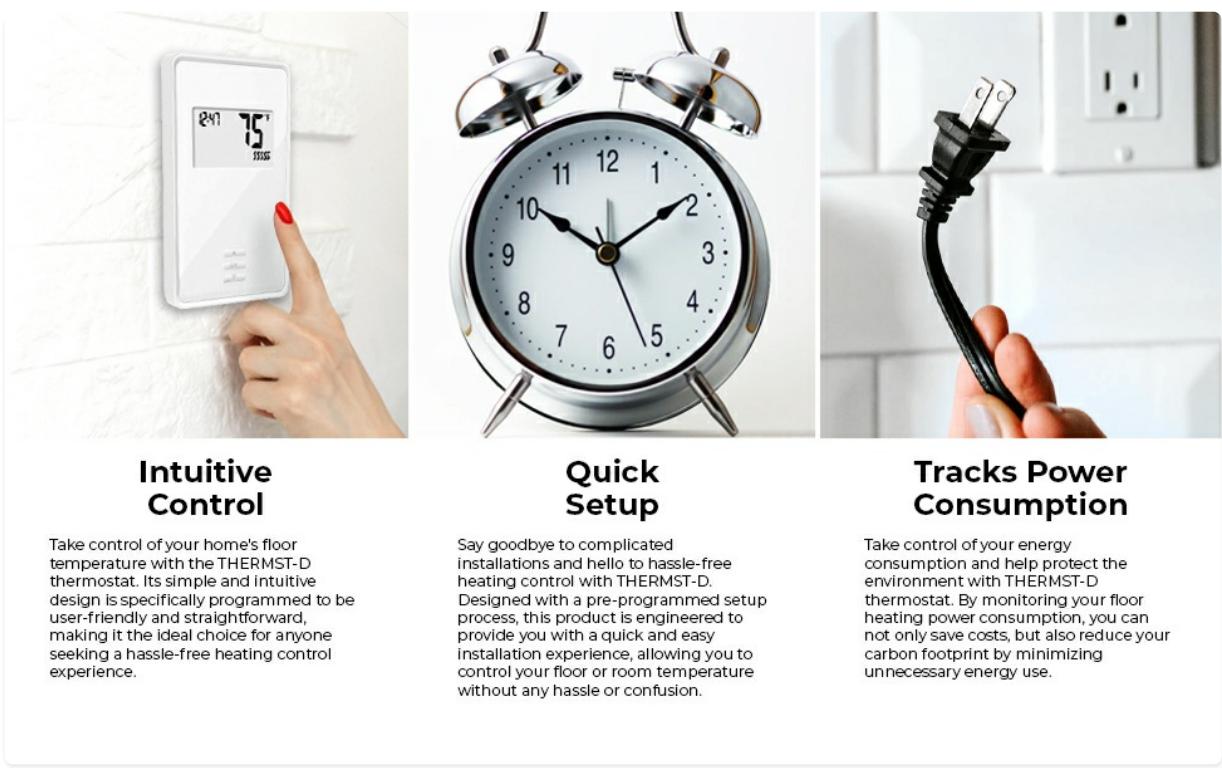


Figure 6: Example of radiant heat film installation under tile and glued floors.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On

After installation, restore power at the circuit breaker. The thermostat display will illuminate.

### 6.2 Setting Temperature

- Use the **Up** and **Down** buttons to adjust the desired temperature.
- Press the **OK** button to confirm your selection.

## 6.3 Control Modes

The thermostat can be configured to operate in one of three control modes:

- **Floor Temperature Control:** The thermostat maintains the floor at the set temperature using the floor sensor.
- **Room Temperature Control:** The thermostat maintains the room air temperature at the set point.
- **Room Temperature Control with Floor Limit:** The thermostat primarily controls room air temperature but prevents the floor temperature from exceeding a specified maximum limit, protecting sensitive flooring materials.

Refer to the full installation guide for instructions on how to select and configure these control modes.

## 6.4 Energy Log

The thermostat features a seven-day energy log, allowing you to monitor the power consumption of your radiant heating system. Consult the detailed manual for accessing and interpreting this data.

## 7. MAINTENANCE

### 7.1 GFCI Testing

For continued safety, the built-in GFCI should be tested monthly.

1. Press the **TEST** button located on the bottom of the thermostat.
2. The GFCI should trip, cutting power to the heating system and indicating a fault.
3. Press the **RESET** button to restore power.
4. If the GFCI does not trip or reset correctly, discontinue use and contact a qualified electrician.



Figure 7: Bottom of the thermostat with GFCI test button.

### 7.2 Cleaning

Wipe the thermostat's exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 8. TROUBLESHOOTING

---

If you encounter issues with your QuietWarmth THERMST-D thermostat, refer to the following common problems and solutions:

- **No Display/No Power:**

- Check the circuit breaker for the dedicated circuit and ensure it is in the ON position.
- Verify all wiring connections are secure and correct.

- **Heating System Not Activating:**

- Ensure the thermostat is set to a temperature higher than the current room or floor temperature.
- Check if the GFCI has tripped (press the RESET button if it has).
- Confirm the correct control mode is selected (floor, room, or room with limit).

- **GFCI Trips Frequently:**

- This indicates a ground fault. Immediately turn off power at the circuit breaker.
- Inspect the heating mat and wiring for any damage or moisture.
- Ensure the total resistive load does not exceed 15 Amps.
- Contact a qualified electrician for diagnosis and repair.

- **Inaccurate Temperature Readings:**

- Verify the floor sensor is correctly installed and not damaged.
- Ensure the thermostat is not exposed to drafts, direct sunlight, or other external heat sources.

For issues not covered here, please contact QuietWarmth customer support or a qualified electrician.

## 9. SPECIFICATIONS

---

Specification	Detail
Brand	QuietWarmth
Model Name	QuietWarmth Non-Programmable Thermostat
Part Number	THERMST-D
Product Dimensions	3"D x 4"W x 6"H
Item Weight	11.4 ounces
Color	White
Material	Plastic
Voltage	120 Volts, 240 Volts
Max Resistive Load	15 Amps
Power Source	Hardwired

Controller Type	Push Button
Temperature Control Type	Manual
Display Type	LED (Backlit)
Connectivity Technology	Wired
Special Feature	Energy Usage Tracking, Built-in GFCI
Mounting Type	Wall Mount
Specification Met	UL
UPC	696087109103

## 10. WARRANTY AND SUPPORT

### 10.1 Warranty Information


The QuietWarmth THERMST-D Non-Programmable Thermostat comes with a 3-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.


### 10.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact QuietWarmth customer support. Refer to the product packaging or the manufacturer's website for current contact information.


© 2024 QuietWarmth. All rights reserved.

## Related Documents - THERMST-D

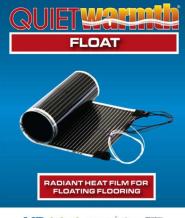 <b>QUIETwarmth</b> <b>TILE</b> <b>RADIANT HEAT FILM FOR TRADITIONAL TILE OR GLUED FLOORING</b>  <b>MPglobal</b>	<p><a href="#">QuietWarmth Tile Radiant Heat Film Installation Guide</a></p> <p>Comprehensive installation manual for QuietWarmth Tile Radiant Heat Film, detailing setup, electrical connections, and flooring integration for tile and glued surfaces. Learn how to install your radiant floor heating system safely and effectively.</p>
 <b>QUIETwarmth</b> <b>FLOAT</b> <b>RADIANT HEAT FILM FOR FLOATING FLOORING</b>  <b>MPglobal</b>	<p><a href="#">QuietWarmth Float Radiant Heat Film Installation Guide</a></p> <p>Comprehensive installation manual for QuietWarmth Float radiant heat film, detailing planning, electrical setup, subfloor preparation, mat installation, testing, and troubleshooting for comfortable, efficient floor warming.</p>

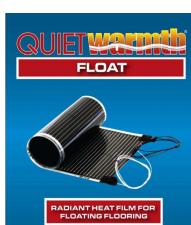 <p>MPglobal</p>	<p><a href="#">QuietWarmth Tile Radiant Heat Film Installation Guide</a></p> <p>Comprehensive installation manual for QuietWarmth Tile Radiant Heat Film, detailing setup, electrical connections, and flooring integration for tile and glued surfaces. Learn how to install your radiant floor heating system safely and effectively.</p>
 <p>MPglobal</p>	<p><a href="#">MP Global Products Radiant Heat Film Limited Warranty and Registration</a></p> <p>This document outlines the limited warranty for MP Global Products' Radiant Heat Film used under floating or tile floors. It details the warranty period, coverage, exclusions, and the process for making a claim. It also includes a system checklist and warranty registration form for homeowners to complete after installation.</p>
 <p>USER MANUAL</p>	<p><a href="#">THERMAEGH Smart Thermostat User Manual and Google Home Integration Guide   MP Global</a></p> <p>Comprehensive user manual for the MP Global THERMAEGH smart thermostat, covering installation, operation, settings, troubleshooting, and integration with Google Home. Includes warranty information.</p>
 <p>MPglobal</p>	<p><a href="#">QuietWarmth Float Radiant Heat Film Installation Guide</a></p> <p>Comprehensive installation manual for QuietWarmth Float radiant heat film, detailing planning, electrical setup, subfloor preparation, mat installation, testing, and troubleshooting for comfortable, efficient floor warming.</p>

## Documents - QuietWarmth – THERMST-D

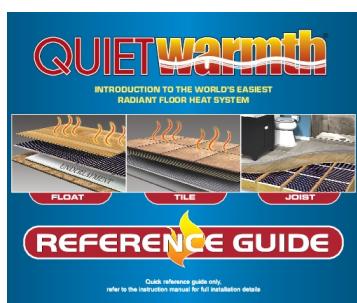

### [\[pdf\] User Manual Reference Guide Guide](#)

REFERENCE GUIDE 13 часов назад — Quick reference guide only refer to the instruction manual for full installation details Page 2 Thin Flexible Easy Safe Conductive 71892913 lowes productdocuments 9aca4311 ca15 420c a6d0 51313b171ccf |||

### INTRODUCTION TO THE WORLD'S EASIEST RADIANT FLOOR HEAT SYSTEM

REFERENCE GUIDE Quick reference guide ... H Enhanced Security Smart

Home/WiFi Programmable THERMAEGH Smart Home/Wifi Programmable

**THERMopro THERMST-D** Programmable Non-Programmable 7 THERMOSTATS

Multiple QuietWarmth mats can be powered by...

lang:en score:54 filesize: 8.17 M page\_count: 20 document date: 2024-08-12



## [\[pdf\] Installation Guide Instructions](#)

GFCI Thermostats Radiant Heat Panels 71870972 lowes productdocuments 1117f116 3259 4fc8 9b5b 16c7fc83ccd1 |||

Gentle Heat for Your Feet Radiant Heat Panels FOR CLICK-TOGETHER TILE

FLOORS Thinner than a credit card 120V - 120 square feet 240V - 240 square feet

Programmable Thermostat THERMopro Non-programmable **THERMST-D**

Programmable SmartTouch WiFi THERMoproTouch Now available 1 CUT TWO MATS OUT OF 2 ONE ...

lang:en score:21 filesize: 1.63 M page\_count: 2 document date: 2024-04-23