

Babycakes CP-94LV

Babycakes CP-94LV Cake Pop Maker

Instruction Manual

INTRODUCTION

Thank you for purchasing the Babycakes CP-94LV Cake Pop Maker. This appliance is designed to create delicious cake pops quickly and easily. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep these instructions for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance operates at 100 Volts. Ensure your power supply matches this requirement.

PARTS IDENTIFICATION

Familiarize yourself with the components of your Babycakes Cake Pop Maker:

- **Lid:** Top cover of the appliance.
- **Baking Plates:** Non-stick surfaces with 12 indentations for cake pops.
- **Handle:** For opening and closing the lid.
- **Power Indicator Light:** Illuminates when the unit is powered on and preheating.
- **Cord Wrap:** Located on the bottom for convenient storage.
- **Accessories:** May include a batter injector or decorating tools (check packaging).



Image: The Babycakes CP-94LV Cake Pop Maker shown open, revealing the two non-stick baking plates, each with twelve circular indentations for forming cake pops. The purple exterior of the appliance is visible.



Image: The Babycakes CP-94LV Cake Pop Maker is shown open, with a clear plastic batter injector and a white decorating tool placed on the lower baking plate. These accessories are typically used for filling the molds and decorating the finished cake pops.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove the cake pop maker and all accessories from the packaging.
2. **Clean:** Wipe the baking plates with a damp cloth or sponge. Do not immerse the appliance in water. Dry thoroughly.
3. **Placement:** Place the appliance on a stable, heat-resistant surface near an electrical outlet. Ensure there is adequate ventilation around the unit.
4. **Preheat:** Close the lid and plug the power cord into a 100-Volt AC electrical outlet. The power indicator light will illuminate, signaling that the unit is preheating. Allow approximately 5-8 minutes for the appliance to reach its optimal baking temperature. The indicator light may turn off once preheated, or remain on depending on the model.

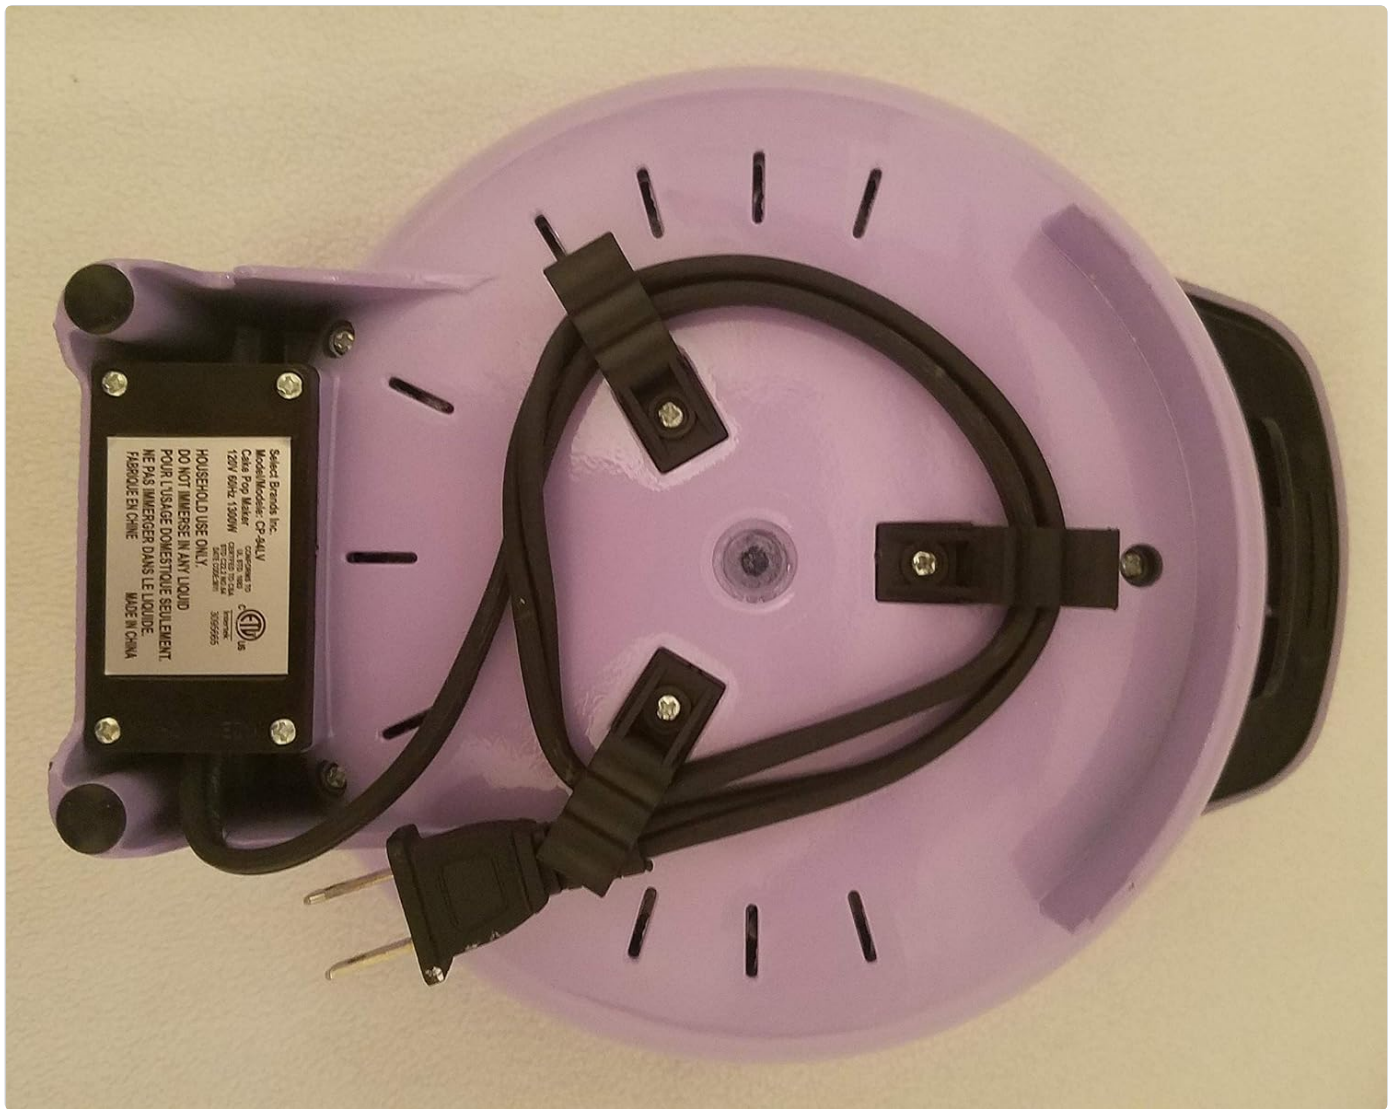


Image: The underside of the Babycakes CP-94LV Cake Pop Maker, displaying the integrated cord wrap for tidy storage and the product label with electrical specifications and manufacturing details.

OPERATING INSTRUCTIONS

1. **Prepare Batter:** Prepare your favorite cake pop batter according to your recipe. The batter should be thin enough to pour or inject easily.
2. **Lightly Grease (Optional):** Although the baking plates are non-stick, you may lightly grease them with a small amount of cooking spray or oil for extra assurance, especially for the first batch.
3. **Fill Molds:** Once the unit is preheated, carefully open the lid. Fill each cake pop mold approximately two-thirds full with batter. Avoid overfilling, as the batter will expand during baking. A batter injector (if included) can help with precise filling.
4. **Bake:** Close the lid. Bake for approximately 4-6 minutes. Baking time may vary depending on the recipe and desired doneness. The cake pops should be golden brown and cooked through.
5. **Check Doneness:** Carefully open the lid and check the cake pops. If they are not fully cooked, close the lid and continue baking for another minute or two.
6. **Remove Cake Pops:** Using a non-metallic utensil (such as a wooden skewer or silicone spatula), carefully remove the cooked cake pops from the molds. Do not use metal utensils, as they can damage the non-stick coating.
7. **Repeat:** Close the lid to maintain heat for the next batch. Repeat the process until all batter is used.
8. **Cool:** Allow cake pops to cool on a wire rack before decorating.

9. **Finish:** Unplug the appliance from the wall outlet when finished baking.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your cake pop maker.

1. **Unplug and Cool:** Always unplug the appliance from the electrical outlet and allow it to cool completely before cleaning.
2. **Clean Baking Plates:** Wipe the non-stick baking plates with a damp cloth or sponge. For stubborn residue, use a small amount of mild dish soap. Avoid abrasive cleaners or scouring pads, as these can damage the non-stick coating.
3. **Clean Exterior:** Wipe the exterior of the appliance with a damp cloth.
4. **Do Not Immerse:** Never immerse the cake pop maker in water or any other liquid.
5. **Storage:** Once clean and dry, store the appliance in a cool, dry place. The cord wrap on the bottom can be used to neatly store the power cord.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working 100-Volt outlet. Check the circuit breaker.
Cake pops are sticking to the plates.	Plates not properly greased; batter too sticky; plates not fully preheated.	Lightly grease plates before each use. Ensure the unit is fully preheated. Adjust batter consistency if necessary.
Cake pops are not cooking evenly.	Uneven batter distribution; lid not fully closed.	Ensure molds are filled evenly. Close the lid completely during baking.
Smoke or unusual odor during first use.	Protective oils burning off.	This is normal for the first use. Ensure good ventilation. If smoke persists, unplug and contact customer support.

SPECIFICATIONS

- **Model:** CP-94LV
- **Capacity:** 12 Cake Pops
- **Voltage:** 100 Volts
- **Brand:** Babycakes
- **Part Number:** 7539759787
- **GTIN/UPC:** 655772008497

WARRANTY AND SUPPORT

This Babycakes CP-94LV Cake Pop Maker comes with **alimited warranty**. For specific details regarding warranty coverage, duration, and how to obtain service, please refer to the warranty card included with your product packaging or visit the official Babycakes website. For customer support, product inquiries, or to report issues, please contact the

manufacturer directly through their official channels.

© 2026 Babycakes. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question