

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [LELO](#) /

› LELO Hula Beads Model 7529 Instruction Manual

LELO 7529

LELO Hula Beads Instruction Manual

Model: 7529

INTRODUCTION

The LELO Hula Beads are a remote-controlled device designed for internal use, featuring simultaneous rotation and vibration. This manual provides essential information for the safe and effective use, maintenance, and care of your device.

WHAT'S INCLUDED

HULA Beads™

remote-controlled pleasure beads



+ 2 X AAA BATTERIES
for the remote

MANUAL

how to use guide



MOISTURIZER SACHET

water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING CORD

USB cable



SATIN POUCH

for storage



WARRANTY CARD

verifies product authenticity

Image: Package contents of LELO Hula Beads.

Your LELO Hula Beads package should contain the following items:

- LELO Hula Beads device
- Wireless Remote Control
- USB Charging Cable
- Water-based Lubricant Sachet (5 ml / 0.17 fl. oz.)
- Satin Storage Pouch
- 2 x AAA Batteries (for the remote)
- Warranty Card
- Instruction Manual

PRODUCT OVERVIEW

**DUAL MOTION FOR UNIQUE
AND INTENSE INTERNAL
STIMULATION**

**② TARGETED MOVEMENT FOR
YOUR EROGENOUS ZONES**



**③ SENSEMOTION™ TECHNOLOGY
FOR A HANDS-FREE
EXPERIENCE**

Image: LELO Hula Beads device and remote control features.

The LELO Hula Beads feature a unique dual-motion design, combining rotation and vibration for internal stimulation. The device is controlled wirelessly via a remote utilizing SenseMotion™ technology, allowing for intuitive intensity adjustments.

FEATURES

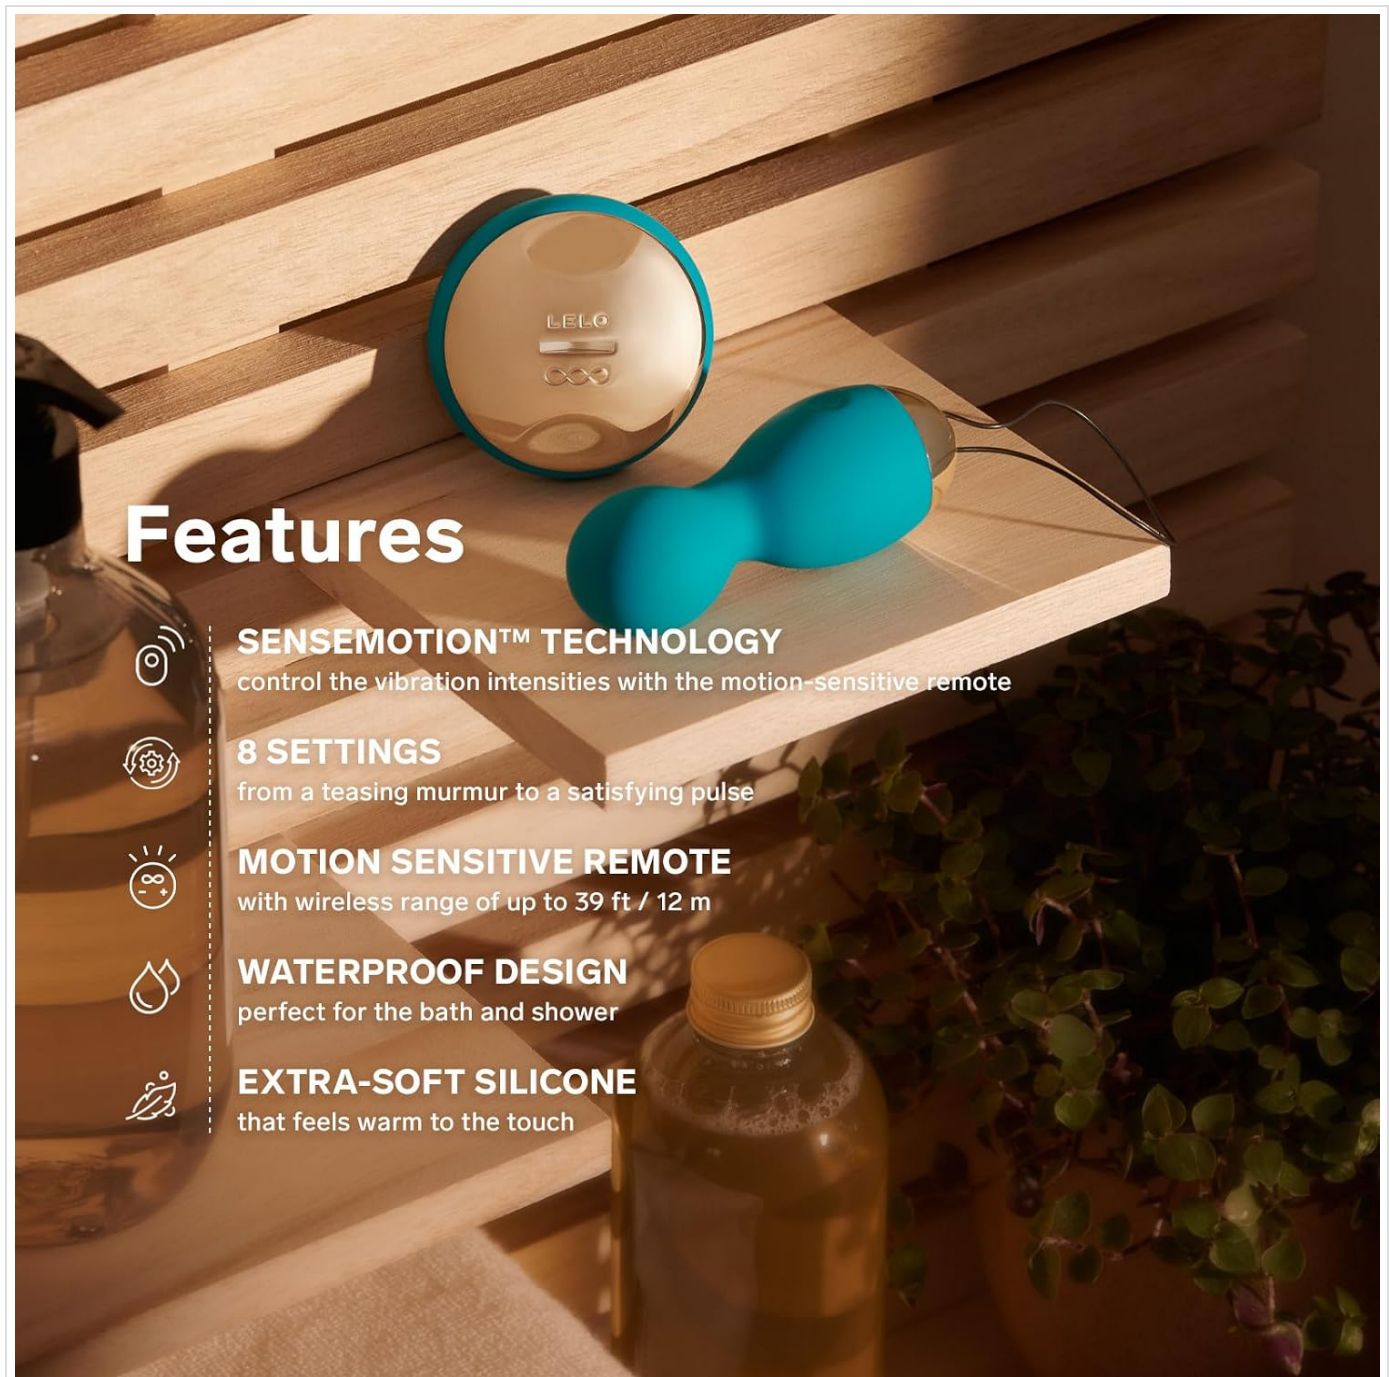


Image: Key features of the LELO Hula Beads.

- **Dual Motion:** Combines twisting and vibrating actions for comprehensive internal sensations.
- **SenseMotion™ Technology:** Allows for hands-free control where vibrations are adjusted by the movement of the remote.
- **8 Stimulation Patterns:** Offers a variety of intensities and rhythms.
- **Wireless Remote Control:** Operates with a range of up to 12 meters (39 ft).
- **Rechargeable:** Provides approximately 2 hours of use per charge.
- **Waterproof Design:** Suitable for use in baths and showers.
- **Extra-Soft Silicone:** Made from body-safe, smooth silicone material.

SETUP

Initial Charging

Before first use, fully charge your LELO Hula Beads for 2 hours using the provided USB charging cable. Connect the

cable to the charging port on the device and a USB power source. The LED lights on the device will indicate the battery level during charging.

Remote Control Batteries

The wireless remote control requires 2 AAA batteries. Insert them into the remote according to the polarity indicators.

OPERATING INSTRUCTIONS



Image: LELO Hula Beads operating instructions.

1. **Preparation:** For comfortable insertion, apply a small amount of water-based lubricant to the tip of the Hula Beads. Insert the device gently, similar to a tampon, ensuring the extraction cord remains outside the body for easy removal.
2. **Turning On:** Press the central button on the massager to turn it on. The LED lights will blink to indicate the current battery level.
3. **Activating Remote Control:** To use the device with the remote, press the '+' button on the remote. The massager

will lower its vibrations and enter SenseMotion mode 1, where vibrations are controlled by the remote's movement.

- 4. **Adjusting Intensity:** Use the '+' or '-' buttons on the remote to increase or decrease the vibration intensity.
- 5. **Switching Patterns:** Press the mode button (often indicated by a circular icon) on the remote to cycle through the 8 available stimulation patterns.
- 6. **Turning Off:** Press and hold the central button on the massager until it turns off.

MAINTENANCE

Cleaning

Always clean your LELO Hula Beads thoroughly before and after each use. Use LELO Premium Cleaning Spray for optimal hygiene. If the cleaning spray is not available, wash the device with lukewarm water and a mild, antibacterial soap. Rinse thoroughly and pat dry with a lint-free cloth.

Storage

Store your LELO Hula Beads in the provided satin pouch in a clean, dry place, away from direct sunlight and extreme temperatures. Ensure the device is fully charged before storing for extended periods.

TROUBLESHOOTING

- **Device does not turn on:** Ensure the device is fully charged. Connect it to the USB charging cable and allow it to charge for the recommended time.
- **Remote control is unresponsive:** Check if the AAA batteries in the remote are correctly inserted and have sufficient power. Replace them if necessary. Ensure the remote is within the 12-meter operating range of the device.
- **Weak vibrations:** The device may require charging. Ensure it is fully charged before use.
- **Difficulty with insertion:** Always use a water-based lubricant for easier and more comfortable insertion.

SPECIFICATIONS

Brand	LELO
Model Name	HULA BEADS
Item Model Number	7529
Color	Black
Material	Silicone
Product Dimensions	3.86 x 1.5 x 1.46 inches
Weight	2.35 ounces
Batteries	1 Lithium Polymer battery (device), 2 AAA batteries (remote)
Waterproof	Yes

WARRANTY AND SUPPORT

Your LELO Hula Beads come with a **1-year LELO warranty**, covering manufacturing defects from the date of purchase. Additionally, LELO provides a **10-year quality guarantee**, ensuring the long-term durability and performance of your device.

For any questions, technical support, or warranty claims, please contact LELO customer service through their official website or the contact information provided on your warranty card. Please retain your proof of purchase for warranty validation.

© 2026 LELO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question