

Epson VS335W

Epson VS335W WXGA 3LCD Projector User Manual

Model: VS335W

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Epson VS335W WXGA 3LCD Projector. Please read this manual thoroughly before using the projector to ensure proper and safe operation.

The Epson VS335W is a widescreen HD projector designed for business and educational environments, offering bright and compelling presentations with its 3LCD technology.

PRODUCT OVERVIEW

The Epson VS335W projector features WXGA resolution (1280 x 800), 2700 lumens of color and white brightness, and HDMI digital connectivity. It is designed for fast and easy setup, suitable for both office and on-the-go presentations.



Figure 1: Front view of the Epson VS335W projector, showing the lens and ventilation.



Figure 2: Rear view of the Epson VS335W projector, highlighting the various input and output ports including HDMI, VGA, USB, and audio connections.



Figure 3: Top view of the Epson VS335W projector, displaying the control panel buttons for power, menu navigation, source selection, and keystone correction.

Key Features:

- **3 x Brighter Colors:** 2700 lumens White Brightness and 2700 lumens Color Brightness.
- **WXGA Resolution:** (1280 x 800) for crisp, clear images.
- **HDMI Digital Connectivity:** For high-quality video and audio transmission.
- **Epson Simple Setup Suite:** Facilitates quick and easy installation.
- **PC-free Slide Shows:** Project directly from a USB drive.
- **USB Plug 'n Play:** Simple connection to computers.
- **Lens and Zoom Control:** Manual adjustments for image size and focus.
- **3LCD, 3-chip Technology:** For vibrant and accurate colors.

SETUP

Unpacking and Placement:

1. Carefully remove the projector and all accessories from the packaging.
2. Place the projector on a stable, flat surface or mount it securely to a ceiling. Ensure adequate ventilation around the projector.
3. Position the projector at an appropriate distance from the screen to achieve the desired image size. Refer to the projection distance guide (not included in this manual, refer to full product documentation).

Connecting to Devices:

The VS335W offers various connectivity options:

- **HDMI:** Connect an HDMI cable from your computer or video source to the HDMI port on the projector. This port supports both video and audio.
- **VGA (Computer):** Connect a VGA cable from your computer's monitor output to the Computer port on the projector. For audio, use a separate 3.5mm audio cable to the Audio In port.
- **USB-A:** For PC-free presentations, insert a USB flash drive into the USB-A port.
- **USB-B:** Use the USB-B port for USB Plug 'n Play connectivity with a computer.
- **Video (RCA):** Connect composite video cables (yellow for video, red/white for audio) to the Video and Audio L/R ports.

Power Connection:

Connect the power cord to the projector's AC inlet and then to a grounded electrical outlet.

OPERATING INSTRUCTIONS

Turning On/Off:

- **To Turn On:** Press the power button on the projector's control panel or the remote control. The power light will turn blue.
- **To Turn Off:** Press the power button twice. The projector will display a shutdown message and the fan will continue to run briefly to cool down the lamp before turning off completely.

Adjusting the Image:

- **Focus:** Rotate the focus ring on the projector lens until the image is sharp.
- **Zoom:** Use the zoom lever on the projector lens to adjust the image size.
- **Keystone Correction:** If the image appears trapezoidal, use the horizontal and vertical keystone correction buttons on the control panel or remote control to square the image.
- **Color Mode:** Adjust the color mode settings (e.g., Dynamic, Presentation, Theater) via the projector menu to optimize image quality for different content and environments.

Source Selection:

Press the **Source Search** button on the control panel or remote control to cycle through available input sources (HDMI, Computer, USB-A, Video).

PC-Free Presentations (USB-A):

1. Insert a USB flash drive containing images (JPEG) or supported video files into the USB-A port.
2. Select the USB-A source. The projector will display the contents of the USB drive.
3. Navigate through files using the arrow keys on the remote or control panel and press **Enter** to open.



Figure 4: The Epson VS335W projector in use within an office environment, projecting a business presentation onto a wall, demonstrating its application in professional settings.

MAINTENANCE

Lamp Replacement:

The projector lamp has a limited lifespan. When the lamp indicator on the projector turns orange or flashes, or the image becomes dim, it may be time to replace the lamp. Refer to the full service manual for detailed lamp replacement instructions.

- Always allow the projector to cool down completely before attempting lamp replacement.
- Use only genuine Epson replacement lamps to ensure optimal performance and safety.

Air Filter Cleaning/Replacement:

The air filter prevents dust from entering the projector and affecting performance. Clean the air filter regularly (e.g., every 100 hours of use) or replace it if it becomes heavily clogged.

- Turn off the projector and unplug the power cord before cleaning.
- Locate the air filter cover, remove it, and gently clean the filter with a small vacuum cleaner or soft brush.
- Replace the filter and cover securely.

Cleaning the Projector:

- **Exterior:** Wipe the projector's exterior with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water and a mild detergent, then wipe dry.
- **Lens:** Gently wipe the projector lens with a lens cleaning cloth designed for optical surfaces. Do not use abrasive cleaners or excessive force.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No image displayed	Incorrect input source selected; Cable not connected properly; Projector in standby mode.	Press Source Search to select the correct input. Check all cable connections. Press the power button to wake the projector.
Image is blurry	Lens out of focus; Projector too close/far from screen.	Adjust the focus ring on the lens. Adjust the projector's distance or use the zoom lever.
Image is trapezoidal	Projector not perpendicular to the screen.	Use the keystone correction buttons to adjust the image shape.
No sound	Volume too low; Audio cable not connected; Incorrect audio source.	Increase volume. Ensure audio cables are securely connected. If using HDMI, ensure audio is routed through HDMI.

Problem	Possible Cause	Solution
Lamp indicator is orange/flashing	Lamp nearing end of life or lamp error.	Replace the lamp. If the issue persists after replacement, contact support.

SPECIFICATIONS

Feature	Specification
Brand	Epson
Model Number	VS335W
Display Technology	3LCD, 3-chip technology
Native Resolution	WXGA (1280 x 800)
Color Brightness	2700 Lumens
White Brightness	2700 Lumens
Connectivity	HDMI, VGA (Computer), USB-A, USB-B, Video (RCA)
Speaker Type	Built-in
Item Weight	5.1 pounds
Product Dimensions	13.3 x 14.4 x 6.1 inches
First Available Date	January 15, 2014

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Epson website or contact Epson customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

Online Resources: [Epson Support Website](#)

Note: Warranty terms may vary based on region and purchase conditions. Products advertised as "refurbished" or "used" may have different warranty coverages than new products.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00GMGDIJQ>

More documents and user manuals: <https://manuals.plus/>