

Ikea IKE-400.760.93

Ikea ANTILOP High Chair Tray Instruction Manual

Brand: Ikea | Model: IKE-400.760.93

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Ikea ANTILOP High Chair Tray. Please read these instructions carefully before assembly and use, and retain them for future reference. The tray is designed to attach to the Ikea ANTILOP high chair, providing a convenient surface for feeding and play.

2. SAFETY INFORMATION

- Always ensure the tray is securely attached to the high chair before placing a child in the chair.
- Never leave a child unattended in the high chair, even with the tray attached.
- Regularly inspect the tray for any signs of damage or wear. Discontinue use if damaged.
- Keep small objects that could pose a choking hazard out of reach of the child.
- The tray is designed for use with the Ikea ANTILOP high chair only. Do not attempt to attach it to other high chair models.

3. PACKAGE CONTENTS

Upon opening the package, verify that all components are present and undamaged.

- 1 x Ikea ANTILOP High Chair Tray
- Instruction Leaflet (typically included with the high chair or tray)



Image: The Ikea ANTILOP High Chair Tray as received in its packaging, alongside the included instruction leaflet.

4. SETUP AND ASSEMBLY

The ANTILOP high chair tray is designed for easy attachment to the ANTILOP high chair. No tools are required for assembly.

1. Ensure the ANTILOP high chair is assembled according to its own instructions and is stable.
2. Align the two attachment points on the underside of the tray with the corresponding slots on the front of the high chair.
3. Gently push the tray downwards until it clicks securely into place. You should hear and feel a distinct

click, indicating it is properly locked.

4. Before use, always pull upwards on the tray to confirm it is firmly attached and cannot be easily dislodged.



Image: A clear view of the Ikea ANTILOP High Chair Tray, showing its design and raised edges.

5. OPERATING INSTRUCTIONS (USAGE)

Once securely attached, the tray provides a stable surface for various activities:

- **Feeding:** Place food and drinks directly on the tray or use it to hold plates and bowls. The raised edge helps prevent spills from reaching the floor.
- **Play:** The tray can be used as a surface for toys and activities, keeping them within the child's reach.

To remove the tray, locate the release mechanisms (usually tabs or buttons) on the underside or sides of the tray where it connects to the high chair. Press or pull these mechanisms while lifting the tray upwards.

6. MAINTENANCE AND CLEANING

The Ikea ANTILOP High Chair Tray is made from polypropylene, a durable and easy-to-clean material.

- **Daily Cleaning:** Wipe the tray clean with a damp cloth and mild detergent after each use. Rinse thoroughly to remove any soap residue.
- **Deep Cleaning:** For stubborn stains, the tray can be washed by hand or in a dishwasher (top rack recommended) at temperatures up to 70°C (158°F).
- **Drying:** Allow the tray to air dry completely or wipe dry with a clean cloth before reattaching to the high chair.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface of the tray.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tray does not attach securely.	Incorrect alignment; debris in slots; damaged attachment points.	Ensure proper alignment. Clean slots. Inspect for damage; if damaged, replace the tray.
Tray is difficult to remove.	Release mechanisms not fully engaged; tray stuck due to food residue.	Ensure release mechanisms are fully pressed/pulled. Clean around attachment points.
Stains on the tray surface.	Food residue left for too long; certain foods (e.g., tomato sauce) can stain.	Clean immediately after use. For stubborn stains, use a mild abrasive (e.g., baking soda paste) with caution, or wash in dishwasher.

8. SPECIFICATIONS

Model Number: IKE-400.760.93

Product Dimensions: 42 x 42 x 4 cm (approximately 16.5 x 16.5 x 1.6 inches)

Item Weight: Approximately 590 g (1.3 lbs)

Material Type: Polypropylene

Target Gender: Unisex

Maximum Weight Recommendation: 1 Kilogram (for items placed on the tray)

Additional Features: Raised edge prevents spills from ending up on the floor. Fits ANTILOP high chair.

Portable: Yes

9. WARRANTY AND SUPPORT

For information regarding warranty, returns, or additional product support, please refer to the official Ikea website or contact Ikea customer service directly. Keep your proof of purchase for any warranty claims.

Ikea Official Website: www.ikea.com