

[Manuals.plus](#) /

› [HoseCoil](#) /

› HoseCoil Thumb Lever Adjustable Spray Hose Nozzle (Model WN810U) User Manual

HoseCoil WN810U

HoseCoil Thumb Lever Adjustable Spray Hose Nozzle (Model WN810U) User Manual

Your guide to proper use and care

1. INTRODUCTION

Thank you for choosing the HoseCoil Thumb Lever Adjustable Spray Hose Nozzle. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your new nozzle. Please read these instructions carefully before use and retain them for future reference.

This nozzle is designed for various watering tasks, offering adjustable spray patterns and convenient thumb lever flow control.

2. SAFETY INFORMATION

- Always ensure the hose connection is secure to prevent leaks and accidental disconnections.
- Do not aim the water spray at electrical outlets, wiring, or people.
- Turn off the water supply at the faucet when the nozzle is not in use to prevent pressure buildup and potential leaks.
- Do not use with hot water or harsh chemicals, as this may damage the nozzle components.
- Keep out of reach of children when not in use.

3. PRODUCT OVERVIEW

The HoseCoil Thumb Lever Adjustable Spray Hose Nozzle features a robust design for comfortable and efficient watering.



Figure 1: HoseCoil Thumb Lever Adjustable Spray Hose Nozzle. This image displays the nozzle's ergonomic design, including the soft rubber contoured grip, the thumb lever for flow control, and the adjustable spray tip.

- **Adjustable Spray Tip:** Rotates to change spray patterns from fine mist to powerful jet.
- **Thumb Lever:** Controls water flow (on/off and intensity) with a simple push or pull.
- **Ergonomic Grip:** Soft rubber contour for comfortable handling during extended use.
- **Hose Connector:** Standard threading for easy attachment to garden hoses.

4. SETUP

Follow these steps to attach the nozzle to your garden hose:

1. Ensure the water supply to your garden hose is turned off.
2. Take your garden hose and the HoseCoil nozzle.
3. Align the threaded end of the nozzle with the threaded end of your garden hose.
4. Twist the nozzle clockwise onto the hose connector until it is hand-tight. Do not overtighten, as this can damage the threads or washer.

5. Check for a secure fit. If a leak occurs after turning on the water, tighten slightly more or check the rubber washer inside the nozzle's connector for proper seating.

5. OPERATION

Operating your HoseCoil nozzle is straightforward:

5.1. Water Flow Control

- **To Turn On:** Push the thumb lever forward (away from you) to start the water flow.
- **To Adjust Flow:** Continue pushing the thumb lever forward to increase water pressure and flow. Pull the lever back (towards you) to decrease flow.
- **To Turn Off:** Pull the thumb lever all the way back (towards you) until the water flow stops completely.

5.2. Adjusting Spray Pattern

The nozzle offers multiple spray patterns:

1. While water is flowing, grasp the silver nozzle tip.
2. Rotate the tip clockwise or counter-clockwise to cycle through different spray patterns. These typically include mist, shower, flat, cone, and jet.
3. Select the pattern best suited for your watering task.



Figure 2: Side view of the nozzle, illustrating the thumb lever's position for flow control and the rotatable tip for spray pattern adjustment.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your nozzle:

- **Cleaning:** Periodically rinse the nozzle with clean water to remove dirt, debris, or mineral deposits. Use a soft brush if necessary.
- **Storage:** Store the nozzle in a cool, dry place away from direct sunlight and freezing temperatures when not in use.
- **Winterization:** Before freezing temperatures, disconnect the nozzle from the hose, drain all water, and store indoors to prevent damage from ice expansion.
- **Washer Inspection:** Regularly check the rubber washer inside the hose connector for wear or damage. Replace if necessary to prevent leaks.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Water leaks from hose connection.	Loose connection, worn or missing rubber washer.	Tighten the connection. Inspect and replace the rubber washer if damaged or missing.
Weak or inconsistent spray.	Low water pressure, debris in nozzle tip, partially closed thumb lever.	Check water supply pressure. Clean the nozzle tip. Ensure the thumb lever is fully open.
Thumb lever is stiff or difficult to move.	Mineral buildup or lack of lubrication.	Rinse thoroughly with warm water. Apply a small amount of silicone lubricant to the lever mechanism if needed.

8. SPECIFICATIONS

- **Model Number:** WN810U
- **Product Dimensions:** 9 x 6 x 2 inches
- **Item Weight:** 8 ounces
- **Material:** Rubber (exterior finish)
- **Manufacturer:** HoseCoil

9. WARRANTY AND SUPPORT

HoseCoil is committed to providing quality products. For specific warranty information or technical support, please refer to the official HoseCoil website or contact their customer service directly.

You can visit the official HoseCoil store for more information:[HoseCoil Store](#)

© 2025 HoseCoil. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question