

Wrenwane Wrenwane Digital Kitchen Timer

Wrenwane Digital Kitchen Timer Instruction Manual

Model: Wrenwane Digital Kitchen Timer

Brand: Wrenwane

INTRODUCTION

Thank you for choosing the Wrenwane Digital Kitchen Timer. This manual provides essential information for the proper setup, operation, and maintenance of your new timer. Designed for simplicity and reliability, this timer is an ideal tool for various timing needs in your kitchen and beyond.

PRODUCT FEATURES

- **Large, Clear Digits:** Easily readable display from a distance, beneficial for users with varying eyesight.
- **Counts Up and Down:** Functions as both a countdown timer (up to 99 minutes, 59 seconds) and a stopwatch.
- **Loud Sounding Alarm:** A clear and audible alarm ensures you won't miss the end of your timed activity, even from another room.
- **Versatile Placement Options:** Features a strong magnetic back for attachment to metal surfaces, a retractable stand for tabletop use, and a hook for hanging.
- **On/Off Button:** A convenient side switch allows you to power down the timer to conserve battery life when not in use.

SETUP

Battery Installation

The Wrenwane Digital Kitchen Timer requires one (1) AAA battery (not included) for operation.

1. Locate the battery compartment cover on the back of the timer.
2. Slide the cover downwards to open the compartment.
3. Insert one AAA battery, ensuring the polarity (+/-) matches the diagram inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.

wrenwane		 GENERIC MODEL 
HIGH QUALITY HTN SCREEN - Can see from all angles LARGER ON/OFF SWITCH - Easier to press SUPERIOR KICK STAND DESIGN - Secure and will NOT break NO FLASHING 'M' AND 'S' ON DISPLAY NO 'IRRITATING' LOUD BEEPS WHEN SETTING THE TIME	✓ ✓ ✓ ✓ ✓	✗ ✗ ✗ ✗ ✗

Figure 1: Back view of the timer with the battery compartment.

OPERATING INSTRUCTIONS

The timer features three main buttons on the front: **M** (Minutes), **S** (Seconds), and **ST/SP** (Start/Stop). A **CLEAR** label indicates how to reset the timer.



Figure 2: Front view of the timer with labeled buttons.

Power On/Off

Locate the small switch on the side of the timer. Slide it to the 'ON' position to power on the device, and to the 'OFF' position to power it off and conserve battery.

Setting the Countdown Timer

1. Press the **M** button to set the desired minutes. Hold to fast-forward.
2. Press the **S** button to set the desired seconds. Hold to fast-forward.
3. Press the **ST/SP** button to start the countdown.
4. To pause the countdown, press **ST/SP** again. Press it once more to resume.
5. When the timer reaches zero, an audible alarm will sound. Press any button to stop the alarm.

Using as a Stopwatch (Count-Up)

1. Ensure the timer display shows '00:00'. If not, press both **M** and **S** buttons simultaneously to clear it.
2. Press the **ST/SP** button to start counting up from zero.
3. To pause the count-up, press **ST/SP** again. Press it once more to resume.
4. To reset the stopwatch, press both **M** and **S** buttons simultaneously while the timer is paused.

Clearing the Timer

To clear any set time and return the display to '00:00', press the **M** and **S** buttons simultaneously.

Memory Function

After the alarm sounds and is stopped, the timer will revert to the last set time, allowing for quick reuse of frequently used intervals.

Product Operation Video

Your browser does not support the video tag.

Video 1: A demonstration of the Wrenwane Digital Kitchen Timer's features and operation.

PLACEMENT OPTIONS

The Wrenwane Digital Kitchen Timer offers multiple convenient placement options:

- **Magnetic Back:** Attach the timer securely to any metal surface, such as a refrigerator door or oven.
- **Retractable Stand:** Pull out the integrated stand on the back to place the timer upright on a countertop or table.
- **Hanging Hook:** Utilize the small hook at the top to hang the timer on a wall hook or lanyard for portability.



Figure 3: Timer magnetically attached to a refrigerator.



Figure 4: Timer utilizing its retractable stand on a kitchen counter.

MAINTENANCE

Cleaning

Wipe the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.

Battery Replacement

If the display becomes dim or the timer functions erratically, replace the AAA battery as described in the 'Battery Installation' section. Dispose of used batteries responsibly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer does not turn on or display is blank.	Battery is dead or incorrectly installed.	Check battery polarity or replace with a new AAA battery. Ensure the side switch is in the 'ON' position.
Alarm is not audible.	Timer is too far away or in a noisy environment.	Move the timer closer or to a quieter location. The alarm volume is fixed and cannot be adjusted.
Buttons are unresponsive.	Low battery or internal malfunction.	Replace the battery. If the issue persists, contact customer support.

SPECIFICATIONS

- **Brand:** Wrenwane
- **Model:** Wrenwane Digital Kitchen Timer
- **Material:** Plastic
- **Color:** White
- **Product Dimensions:** 0.79"D x 3.15"W x 2.95"H
- **Item Weight:** 0.64 ounces (18.14 g)
- **Power Source:** 1 x AAA Battery (not included)
- **Maximum Time:** 99 minutes, 59 seconds
- **Features:** Magnetic Back, Retractable Stand, Hanging Hook, On/Off Switch

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Wrenwane customer service directly. Keep your purchase receipt for warranty claims.