

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Tupperware](#) /
- › [Tupperware Smart Chopper \(251\) Instruction Manual](#)

Tupperware 251

Tupperware Smart Chopper (251) Instruction Manual

Model: 251

PRODUCT OVERVIEW

The Tupperware Smart Chopper (Model 251) is a compact, manual food preparation tool designed for quickly chopping herbs, vegetables, berries, cheeses, and more. Its easy-pull cord mechanism allows for efficient chopping without the need for electricity. The chopper features a 1¼-cup (300 mL) capacity base and is small enough for convenient storage.



Image: Tupperware Smart Chopper components, including the base, lid, and blade.

COMPONENTS

The Tupperware Smart Chopper consists of the following parts:

- **Chopping Blade:** Stainless steel blades for efficient cutting.
- **Container:** 1¼-cup (300 mL) capacity base to hold ingredients.
- **Lid:** Top cover with an integrated pull-cord mechanism and handle.



Image: All components of the Smart Chopper laid out.

SETUP

Before first use, wash all components with warm soapy water and dry thoroughly.

1. Place the chopping blade assembly onto the central pin inside the container. Ensure it sits securely.
2. Add your desired ingredients into the container. Do not overfill.
3. Place the lid onto the container, aligning the tabs on the lid with the grooves on the container. Twist the lid clockwise until it locks securely in place.

OPERATING INSTRUCTIONS

Follow these steps to operate your Tupperware Smart Chopper:

1. Ensure the chopper is assembled correctly with ingredients inside and the lid securely locked.
2. Place the chopper on a stable, flat surface.
3. Hold the chopper firmly with one hand.
4. With your other hand, pull the cord horizontally away from the chopper in short, quick bursts.
5. The more times you pull the cord, the finer your ingredients will be chopped. For coarse chops, pull a few times. For finer chops or purees, continue pulling until desired consistency is reached.
6. After chopping, carefully unlock and remove the lid. Remove the blade assembly before emptying the chopped ingredients.

Your browser does not support the video tag.

Video: Demonstration of the Tupperware Smart Chopper in use, showing how to load ingredients, secure the lid, and use the pull cord to chop onions. The video highlights the ease of use and the finely chopped results.

Your browser does not support the video tag.

Video: A quick guide on how to use the Tupperware Smart Chopper, demonstrating the simple pull-and-chop action for various ingredients.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your Smart Chopper. The manufacturer recommends hand washing.

1. Disassemble all parts: remove the lid, then carefully lift out the blade assembly.
2. Wash the container and blade assembly with warm water and mild dish soap. Use a brush if necessary to remove any food particles from the blades.
3. Wipe the lid with a damp cloth. Do not immerse the lid in water, as this may damage the pull-cord mechanism.
4. Rinse all washable parts thoroughly.
5. Allow all components to air dry completely before reassembling or storing.

Caution: The blades are very sharp. Handle with extreme care during cleaning to prevent injury.

TROUBLESHOOTING

- **Chopper not operating smoothly:** Ensure the lid is securely locked onto the container. Check that the blade assembly is correctly seated on the central pin. Avoid overfilling the container with ingredients.
- **Ingredients not chopping evenly:** Ensure ingredients are cut into manageable pieces before placing them in the chopper. Pull the cord in consistent, short bursts.
- **Cord not retracting:** Check for any obstructions around the cord mechanism on the lid. Ensure the cord is not tangled.

SPECIFICATIONS

Brand	Tupperware
Model Name	251
Special Feature	Manual
Product Dimensions	4"D x 4.7"W x 4.7"H
Color	Multicolor
Bowl Capacity	1.25 Cups (300 mL)
Recommended Uses	Chop
Product Care Instructions	Hand Wash
Included Components	Chopping Blade, Container, Lid
Blade Material	Stainless Steel
Power Source	Manual Winding
Item Weight	6.3 ounces
Date First Available	December 11, 2013



Image: The compact size of the Tupperware Smart Chopper, shown in hand with dimensions.

WARRANTY AND SUPPORT

Information regarding the product warranty and customer support is not available in the provided data. Please refer to the product packaging or the official Tupperware website for detailed warranty terms and support contact information.