

[manuals.plus](#) /

› [Casio](#) /

› [Casio Enticer Analog Black Dial Men's Watch - MTP-1374D-1AVDF \(A832\) Instruction Manual](#)

Casio MTP-1374D-1AVDF

Casio Enticer Analog Black Dial Men's Watch - MTP-1374D-1AVDF (A832) Instruction Manual

Model: MTP-1374D-1AVDF | Brand: Casio

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Casio Enticer Analog Black Dial Men's Watch, model MTP-1374D-1AVDF. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



Image 1.1: Casio Enticer Analog Watch on a wrist, showcasing its fit and appearance.

Your browser does not support the video tag.

Video 1.1: A 360-degree view of the Casio Enticer Analog Black Dial Men's Watch, highlighting its design and features.

2. SETUP

2.1 Initial Activation

Upon receiving your watch, ensure to remove any plastic protector from the crown. This plastic piece prevents the watch from running during shipping, preserving battery life. Once removed, the watch should begin to operate.

2.2 Setting the Time and Date

- 1. Pull out the crown:** Gently pull the crown (the knob on the side of the watch) out to the first or second click position. The number of clicks depends on whether you are setting the date or time.
- 2. Set the date/day:** If the crown is pulled to the first click, rotate it to adjust the date or day indicator. Refer to the specific dial

layout for your model.

3. **Set the time:** Pull the crown out to the second click. Rotate the crown to move the hour and minute hands. Ensure to set the correct AM/PM by observing when the date changes (it typically changes around midnight).
4. **Push the crown back:** Once the time and date are set, push the crown back into its normal position to start the watch and seal it against water and dust.



Image 2.1: Side view of the watch, highlighting the crown and function buttons for time and date adjustment.

3. OPERATING INSTRUCTIONS

3.1 Reading the Dials

Your Casio Enticer watch features a multi-dial display. The main hands indicate hours, minutes, and seconds. Additionally, there are three sub-dials:

- **24-Hour Indicator:** Located at the 9 o'clock position, this dial shows the current time in a 24-hour format, useful for distinguishing AM/PM.

- **Day of Week Indicator:** Positioned at the 3 o'clock position, this dial displays the current day of the week (e.g., SU, MO, TU).
- **Date Indicator:** Found at the 6 o'clock position, this dial shows the current date.



Image 3.1: Detailed view of the watch dial, illustrating the 24-hour, day of week, and date sub-dials.

4. MAINTENANCE

4.1 Water Resistance

This watch is water resistant up to 50 meters (5 BAR). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not** suitable for swimming, diving, or showering with hot water, as steam can penetrate the seals.



Image 4.1: The watch demonstrating its water resistance in a splash scenario.

4.2 Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For the stainless steel band, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners or abrasive materials.

4.3 Battery Replacement

The watch is powered by a quartz movement and requires a battery. When the battery runs low, the watch may stop or the second hand may move erratically. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and function.



5. TROUBLESHOOTING

- **Watch not running:**
 - Check if the plastic protector has been removed from the crown.
 - Ensure the crown is pushed fully in.
 - The battery may be depleted. Contact a service center for replacement.
- **Incorrect time/date:**
 - Refer to Section 2.2 for instructions on setting the time and date.
 - Ensure the crown is fully pushed in after setting.
- **Condensation inside the watch:**
 - This may indicate a breach in the water resistance. Avoid further contact with water and seek professional inspection immediately.

6. SPECIFICATIONS

Brand	Casio
Model Name	MTP-1374D-1AVDF
Dial Color	Black
Case Shape	Round
Dial Glass Material	Mineral
Band Color	Silver
Band Material	Stainless Steel
Movement Type	Quartz
Display Type	Analog
Water Resistance Depth	50 meters (5 BAR)
Product Dimensions	10 x 4 x 5 cm; 12.4 g
Case Diameter	47 mm (approx.)
Country of Origin	China

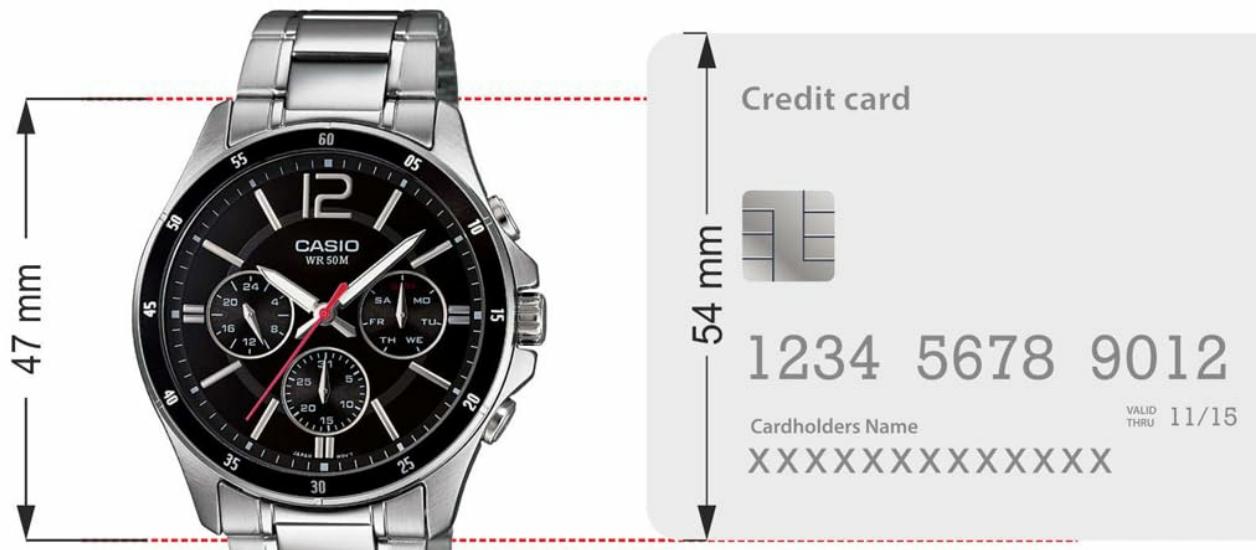


Image 6.1: Watch dimensions, indicating a case diameter of approximately 47mm.

Your browser does not support the video tag.

Video 6.2: A quick guide to understanding watch dial size relative to wrist measurements for optimal fit.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product comes with a **2 Years Domestic Warranty** provided by the manufacturer. Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects but typically excludes damage from misuse, accidents, or unauthorized repairs.

7.2 Customer Support

For further assistance, service, or inquiries, please visit the official Casio store or contact their customer support. You can find more information at the [Casio Store on Amazon](#).

© 2026 Casio. All rights reserved.