

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ontel](#) /
- › [Ontel Swivel Sweeper Max SWSMAX-MC4 Cordless Electric Floor and Carpet Sweeper Instruction Manual](#)

Ontel SWSMAX-MC4

Ontel Swivel Sweeper Max SWSMAX-MC4 Cordless Electric Floor and Carpet Sweeper Instruction Manual

Model: SWSMAX-MC4 | Brand: Ontel

INTRODUCTION

Thank you for choosing the Ontel Swivel Sweeper Max. This instruction manual provides important information on the safe operation, assembly, maintenance, and troubleshooting of your new cordless electric sweeper. Please read this manual thoroughly before first use and keep it for future reference.







The Ontel Swivel Sweeper Max, a lightweight cordless electric sweeper.

PRODUCT FEATURES

- **Efficient Cleaning:** Designed to pick up debris, dust, hair, and dirt from all floor types.
- **Lightweight and Portable:** Weighs approximately 2 pounds, easy to maneuver and store.
- **Quad Brush Technology:** Features four rotating brushes that pick up on all 4 sides.
- **Cordless & Rechargeable:** Operates on a 7.2V rechargeable battery.
- **Removable Bristles:** Brushes can be easily removed for cleaning or replacement.
- **360-Degree Swivel:** Allows for easy navigation around furniture and tight spaces.

SETUP AND ASSEMBLY

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure you have the sweeper head, handle sections, rechargeable battery, and battery charger.
2. **Assemble Handle:** Connect the handle sections by aligning the labeled parts (e.g., A to A, B to B) and twisting clockwise until secure. Insert the assembled handle into the sweeper head.
3. **Charge Battery:**
 - Locate the rechargeable battery.
 - Insert the battery into the provided charger.
 - Plug the charger into a standard electrical outlet.
 - Allow the battery to charge fully before first use. A full charge may take several hours.



The battery charger for the Swivel Sweeper Max.

4. **Insert Charged Battery:** Once charged, insert the battery into the designated slot on the sweeper handle until it clicks securely into place.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Locate the power switch on the handle. Slide the switch to the "ON" position to start the sweeper. Slide it to "OFF" to turn it off.





The power switch located on the handle of the Swivel Sweeper Max.

2. Sweeping:

- Gently push the sweeper across the floor surface. The Quad Brush Technology will automatically pick up debris.
- Utilize the 360-degree swivel action to easily maneuver around furniture legs, corners, and other obstacles.
- The sweeper is effective on various surfaces including hardwood, tile, laminate, and low-pile carpets.

3. **Storage:** When not in use, the sweeper can be stored upright. The handle may have a magnetic feature to hold it in a vertical position against a wall.




The Swivel Sweeper Max can be stored upright.

MAINTENANCE

1. Emptying the Dust Bin:

- Position the sweeper over a trash receptacle.
- Press the two release tabs on the bottom of the sweeper head to open the dust bin.
- Empty the collected debris. Close the dust bin securely until it clicks.

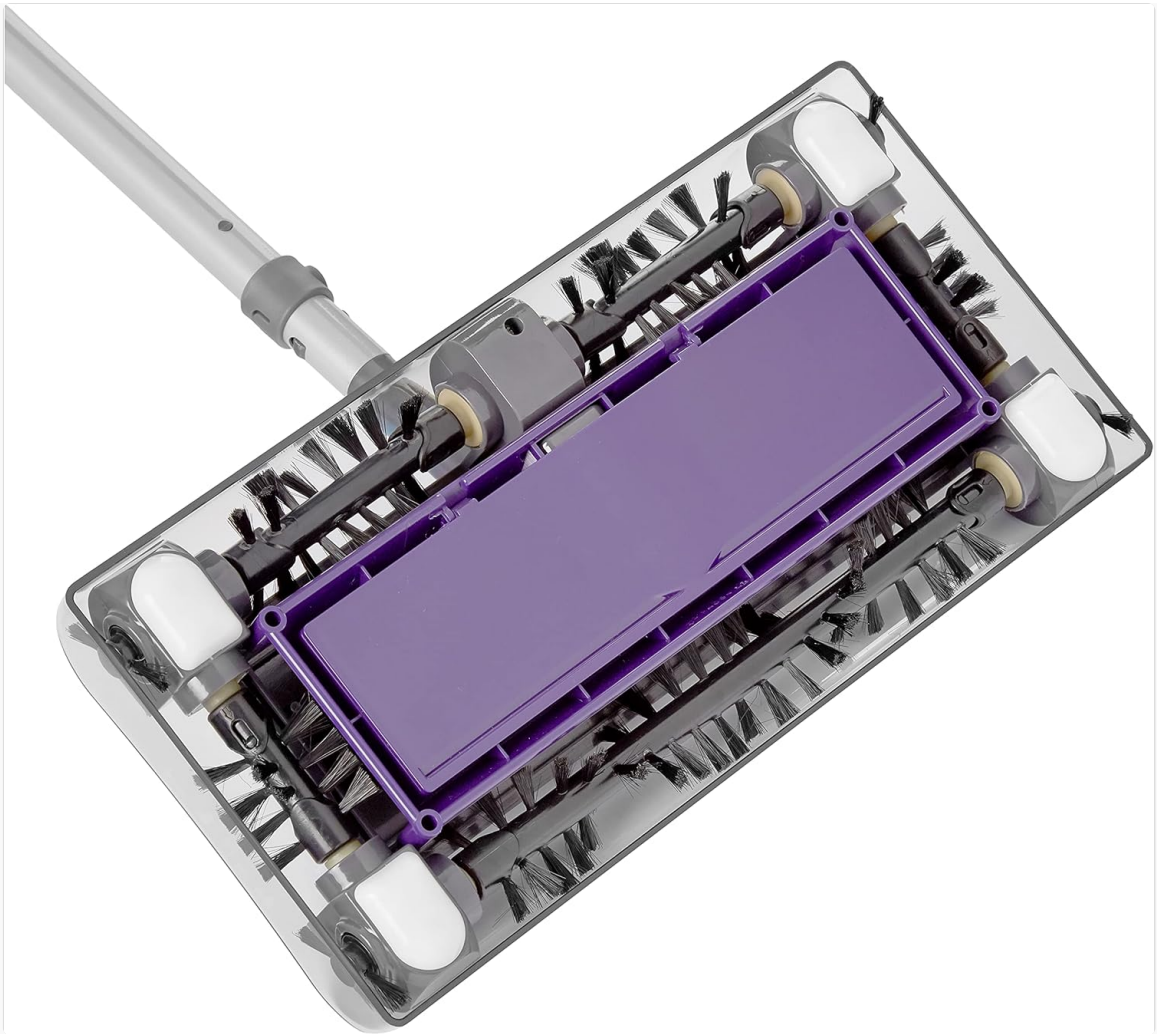

The underside of the Swivel Sweeper Max, showing the dust bin and brushes.

2. Cleaning the Brushes:

- The four rotating brushes are removable for thorough cleaning.
- Gently push the ends of the brush rollers to release them from their slots.
- Remove any tangled hair, string, or debris from the brushes. You may rinse them with water and mild soap if necessary, ensuring they are completely dry before reinserting.
- Reinsert the brushes by aligning them with the slots and pushing until they click into place.

3. **Cleaning the Unit:** Wipe the exterior of the sweeper with a damp cloth. Do not submerge the unit in water or allow water to enter the motor housing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Sweeper not turning on.	Battery not charged or not inserted correctly.	Ensure battery is fully charged and properly inserted. Check power switch position.
Poor cleaning performance.	Dust bin full, brushes tangled, or brushes worn.	Empty dust bin. Clean brushes of tangled debris. Replace brushes if worn.
Battery not holding charge.	Battery life cycle ending or charger issue.	Ensure charger is functioning. Consider replacing the rechargeable battery pack.

SPECIFICATIONS

Brand:	Ontel
Model Name:	SWSMAX-MC4
Item Weight:	2 pounds
Product Dimensions:	13"L x 7"W x 4"H
Power Source:	Battery Powered (7.2V rechargeable battery)
Battery Life:	Approximately 45 minutes
Filter Type:	Foam
Recommended Uses:	Hard Floor, Tile Floor, Hardwood, Rug, Bare Floor

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or contact Ontel customer service directly. Protection plans may also be available for extended coverage.