

**Premier CECOMINOD023107**

# Premier 7771 Aftermarket Replacement Stove Range Oven Drip Bowl Pan User Manual

Model: CECOMINOD023107

## INTRODUCTION

This manual provides essential information for the proper installation, use, and maintenance of your Premier 7771 Aftermarket Replacement Stove Range Oven Drip Bowl Pan. Please read these instructions carefully before installation and retain them for future reference. This product is designed to collect spills and drips from cooking, helping to keep your stove range clean.

## PRODUCT OVERVIEW



**Image 1:** The Premier 7771 Aftermarket Replacement Drip Bowl Pan. This image displays the circular metal pan with two

central openings, designed to fit around a stove burner and collect cooking spills.

The Premier 7771 Drip Bowl Pan is an aftermarket replacement part designed for compatibility with various stove and oven ranges. It features a durable construction intended to withstand high temperatures and facilitate easy cleaning.

## SETUP AND INSTALLATION

Before proceeding with installation, ensure your stove range is completely cool and disconnected from its power source to prevent electrical shock or burns.

- 1. Remove Existing Drip Pan:** Carefully lift the existing drip pan and burner element from the stove top. If the burner element is attached to the drip pan, gently detach it.
- 2. Clean Area:** Wipe down the area beneath where the drip pan sits to remove any debris or residue.
- 3. Position New Drip Pan:** Place the Premier 7771 replacement drip pan into the designated opening on your stove top. Ensure it sits flush and securely.
- 4. Reinstall Burner Element:** Carefully reinsert the burner element into the central opening of the new drip pan. Ensure the element is properly seated and connected.
- 5. Verify Fit:** Confirm that the drip pan and burner element are stable and correctly positioned before reconnecting power to the stove.

**Note:** Compatibility may vary. Always verify the dimensions and fit of the replacement part with your specific stove model before permanent installation. Refer to your stove's original manual for specific burner removal and installation procedures.

## OPERATING INSTRUCTIONS

The Premier 7771 Drip Bowl Pan operates passively by collecting spills and drips during cooking. No active operation is required from the user beyond proper installation.

- Ensure the drip pan is clean before each use to maximize its effectiveness and prevent baked-on residue.
- Place cookware directly on the burner element as usual. The drip pan will catch any overflow or splatters.

## MAINTENANCE AND CLEANING

Regular cleaning of the drip pan is crucial for hygiene, appearance, and preventing fire hazards from accumulated grease.

- 1. Cool Down:** Always allow the stove and drip pans to cool completely before attempting to clean them.
- 2. Removal:** Carefully remove the burner element and then lift out the drip pan.
- 3. Washing:** Wash the drip pan with warm, soapy water. For stubborn, baked-on food, you may need to soak the pan for a period or use a non-abrasive scrubber. Avoid harsh chemicals or abrasive pads that could damage the finish.
- 4. Rinsing and Drying:** Rinse thoroughly with clean water and dry completely before reinstalling. Moisture can lead to corrosion.
- 5. Reinstallation:** Place the clean, dry drip pan back into its position on the stove, followed by the burner element.

**Recommendation:** Clean drip pans after each significant spill or regularly, depending on usage, to maintain optimal condition.

## TROUBLESHOOTING

- **Drip Pan Does Not Fit:**

Ensure you have the correct size and model for your stove. Drip pans come in various diameters and center hole configurations. Double-check your stove's specifications against the product's dimensions. If it still does not fit, it may not be compatible with your specific stove model.

- **Drip Pan Appears Discolored or Stained:**

This is common with heat exposure and food spills. Regular cleaning as described in the Maintenance section can minimize staining. For severe discoloration, specialized stove top cleaners designed for drip pans may be used, following the product's instructions carefully.

- **Burner Element Not Seating Properly:**

Ensure the drip pan is correctly seated and flush with the stove top. The central opening of the drip pan must align perfectly with the burner's receptacle. Gently adjust the drip pan or burner element until it sits securely.

## SPECIFICATIONS

Feature	Detail
Model Number	CECOMINOD023107
Product Dimensions	Approximately 6 x 6 x 6 inches
Item Weight	Approximately 0.01 ounces
Manufacturer	Universal
ASIN	B00GS2NOV6

*Note: All specifications are approximate and subject to change without notice.*

## WARRANTY INFORMATION

As an aftermarket replacement part, specific warranty details may vary depending on the retailer or original purchase terms. Please refer to your purchase documentation for any applicable warranty coverage. Generally, aftermarket parts are covered against manufacturing defects for a limited period.

- Keep your proof of purchase.
- Damage due to improper installation, misuse, or normal wear and tear is typically not covered.

## CUSTOMER SUPPORT

For further assistance, questions regarding installation, or compatibility concerns, please contact the retailer from whom you purchased this product. Provide them with the product model number (CECOMINOD023107) and your purchase details for efficient support. You may also refer to the manufacturer's website (Universal) for general information, though specific

support for aftermarket parts may be handled by the seller.

---

© 2023 Premier. All rights reserved. This manual is for informational purposes only.