

[Manuals.plus](#) /

› [LEGO](#) /

› LEGO Creator 31017 Sunset Speeder Instruction Manual

LEGO 31017

LEGO Creator 31017 Sunset Speeder Instruction Manual

Model: 31017

PRODUCT OVERVIEW

The LEGO Creator 31017 Sunset Speeder set offers a 3-in-1 building experience, allowing construction of three different vehicle models from the same set of bricks. The primary model is a sleek sports car, which can be rebuilt into a robust truck cab or a fast racing car. This set is designed to encourage creative building and rebuilding.



Image: The LEGO Creator 31017 Sunset Speeder in its primary sports car configuration, featuring orange bodywork with black and white stripes.

Key Features:

- **3-in-1 Model:** Rebuilds into a truck cab or a racing car.
- **Sports Car Design:** Features orange bodywork with black and white stripe, working doors, racing wheels, and headlights.
- **Dimensions (Sunset Speeder):** Over 1 inch (3 cm) high, 4 inches (11 cm) long, and 2 inches (6 cm) wide.
- **Dimensions (Truck Cab):** Over 2 inches (7 cm) high, 4 inches (12 cm) long, and 1 inch (4 cm) wide.
- **Dimensions (Racing Car):** Over 1 inch (4 cm) high, 5 inches (13 cm) long, and 2 inches (7 cm) wide.

Your browser does not support the video tag.

Video: An official demonstration of the LEGO Creator 31017 set, showcasing the transformation between the three different models: the Sunset Speeder, the truck cab, and the racing car.

SETUP AND ASSEMBLY

This LEGO Creator set includes 119 pieces. Follow the step-by-step instructions provided in the physical manual included with your set to build the primary Sunset Speeder model. Ensure all pieces are accounted for before beginning assembly. For optimal assembly, sort pieces by color and size. Connect bricks firmly to ensure structural stability. If a piece is difficult to connect, ensure it is correctly oriented and aligned with the studs.



Image: The product box for LEGO Creator 31017, illustrating the three possible models that can be built from the set: the Sunset Speeder, a truck cab, and a racing car.

OPERATING AND REBUILDING

The LEGO Creator 31017 set is designed for versatile building. Once the Sunset Speeder is assembled, you can disassemble it and rebuild it into one of two alternative models: a truck cab or a racing car. Refer to the specific instruction booklets for each alternative build.

Rebuilding into a Truck Cab:

To build the truck cab, carefully disassemble the Sunset Speeder. Follow the dedicated instructions for the truck cab model. This model features a distinct cab design and chassis suitable for hauling.



Image: The LEGO Creator 31017 set reconfigured as a truck cab, demonstrating its alternative build capability.

Rebuilding into a Racing Car:

To build the racing car, disassemble the current model. Use the specific instructions for the racing car. This model is characterized by its aerodynamic design and rear spoiler, optimized for speed.



Image: The LEGO Creator 31017 set reconfigured as a racing car, showcasing its sporty design with a rear wing.

MAINTENANCE

To maintain the quality and longevity of your LEGO bricks, follow these guidelines:

- **Cleaning:** Clean LEGO bricks by hand using lukewarm water (not exceeding 40°C or 104°F) and a mild detergent. Rinse thoroughly with clear water. Do not use hot water, washing machines, or dishwashers, as high temperatures can damage the plastic.
- **Drying:** Air dry bricks at room temperature. Avoid direct sunlight or high heat.
- **Storage:** Store LEGO sets in a cool, dry place away from direct sunlight to prevent discoloration and material degradation. Keep small pieces in organized containers to prevent loss.

TROUBLESHOOTING

- **Missing Pieces:** If you find a piece missing from your new set, please contact LEGO Customer Service. They can assist with replacement parts.
- **Difficulty Assembling:** Double-check the instruction steps. Ensure you are using the correct pieces and that they are oriented as shown in the manual. Sometimes, a small error in an earlier step can affect later assembly.
- **Model Instability:** Ensure all bricks are firmly pressed together. Loose connections can lead to instability. Re-examine the connections in the affected area.

SPECIFICATIONS

Brand Name	LEGO
Model Name	Creator
Model Number	31017
Item Part Number	31017
UPC	885274365358, 673419209076, 885885076735, 885936417968
Manufacturer	Lego
Model Year	2014
Number of Pieces	119
Material Type	Plastic
Color	Multi-colored (predominantly orange)
Theme	Sports
Subject Character	Lego Creator
Minimum Age (Manufacturer)	72 months (6 years)
Maximum Age (Manufacturer)	1500 months (125 years)
Educational Objective	Team Building Skills
Item Dimensions (L x W x H)	7.52 x 5.55 x 1.81 inches
Item Weight	0.27 g

WARRANTY

The manufacturer states "No Warranty" for this product. However, LEGO Group is known for its commitment to quality. If you encounter issues with missing or defective parts, please refer to the support section for assistance.

SUPPORT

For further assistance, including inquiries about missing pieces, assembly challenges, or general product information, please visit the official LEGO Customer Service website:

[LEGO Customer Service](#)

You can also find digital building instructions for this set and its alternative models on the LEGO website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question