



---

[Manuals.plus](#) /

> [Q&Q](#) /

> Q&Q Fashion Mod. MF01J002Y User Manual

## Q&Q MF01J002Y

# Q&Q Fashion Mod. MF01J002Y

## USER MANUAL

### Introduction

---

Thank you for choosing the Q&Q Fashion Mod. MF01J002Y stopwatch. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly to ensure optimal performance and longevity of your stopwatch.

### Product Overview

---



This image displays the Q&Q Fashion Mod. MF01J002Y stopwatch. It features a black casing with a digital display showing time and lap memory. Key buttons are visible: 'STOP/RESET' on the top left, 'START/LAP' on the top right, 'Stop Watch' and 'MODE' buttons below the display. The bottom part includes a ring for attachment and a lanyard.

### Key Components:

- **Digital Display:** Shows time, lap memory, and other functions.
- **STOP/RESET Button:** Located on the top left. Used to stop the stopwatch and reset its values.
- **START/LAP Button:** Located on the top right. Used to start the stopwatch and record lap times.
- **MODE Button:** Used to switch between different operating modes (e.g., timekeeping, stopwatch).
- **Stop Watch Button:** Likely a dedicated button to access the stopwatch function directly.
- **Attachment Ring:** For securing the stopwatch to a lanyard or hook.

## Setup

---

### Initial Activation:

Your Q&Q Fashion Mod. MF01J002Y stopwatch comes with a pre-installed lithium-ion battery. It is typically ready for immediate use. If the display is blank, check for a small plastic tab protruding from the side or back of the device. Remove this tab to activate the battery.

### Setting the Time:

1. Press the **MODE** button repeatedly until the timekeeping mode is displayed.
2. While in timekeeping mode, press and hold the **MODE** button until the time digits begin to flash.
3. Use the **START/LAP** button to adjust the hours and the **STOP/RESET** button to adjust the minutes.
4. Press the **MODE** button again to confirm the setting and exit the time setting mode.

## Operating Instructions

---

### Using the Stopwatch (Chronograph) Function:

1. Press the **MODE** button until the stopwatch display appears (usually indicated by '00:00:00' or similar). You may also use the dedicated 'Stop Watch' button if available.
2. Press the **START/LAP** button to begin timing. The stopwatch will start counting.
3. To record a lap time while the stopwatch is running, press the **START/LAP** button again. The current lap time will be displayed briefly, and the stopwatch will continue running in the background.
4. To stop the stopwatch, press the **STOP/RESET** button. The final time will be displayed.
5. To reset the stopwatch to zero, press the **STOP/RESET** button again after it has been stopped.

### Accessing Lap Memory:

Your stopwatch features a 150-lap memory function. After stopping the stopwatch and recording lap times:

1. Ensure the stopwatch is stopped.
2. Press the **MODE** button to cycle through the stored lap times. Each press will display the next recorded lap.
3. To exit lap memory view, press the **MODE** button until you return to the main stopwatch display or timekeeping mode.

## Maintenance

---

### Cleaning:

Wipe the stopwatch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the plastic casing and display.

### Water Resistance:

This stopwatch is rated for **3 ATM (30 meters)** water resistance. This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is *not* suitable for swimming, diving, or showering with hot water, as steam and pressure changes can compromise the seals.

## Battery Replacement:

The stopwatch uses a lithium-ion battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified technician to ensure proper sealing and water resistance. Refer to the manufacturer's website or authorized service centers for assistance.

## Troubleshooting

- **Display is blank or dim:**  
Check if the battery activation tab has been removed. If it has, the battery may need replacement.
- **Buttons are unresponsive:**  
Ensure the stopwatch is not in a locked mode (if applicable, though not specified for this model). Try pressing the MODE button to cycle through functions. If unresponsive, the battery may be low.
- **Incorrect time displayed:**  
Follow the 'Setting the Time' instructions in the Setup section to re-adjust the time.
- **Stopwatch not starting/stopping:**  
Ensure you are in the correct stopwatch mode. Press the START/LAP button firmly to start and the STOP/RESET button to stop.

If you encounter issues not covered here, please contact Q&Q customer support.

## Specifications

<b>Model Number</b>	MF01J002Y
<b>Manufacturer</b>	Q&Q
<b>Movement</b>	Quartz
<b>Functions</b>	Chronograph, Timekeeping, Lap Memory (150 Laps)
<b>Water Resistance</b>	3 ATM (30 meters)
<b>Glass Material</b>	Plastic
<b>Case Material</b>	Plastic
<b>Battery Type</b>	1 Lithium-ion battery (included)
<b>Approx. Dimensions</b>	14.6 x 8 x 3.4 cm (Package)
<b>Approx. Weight</b>	110 grams (Package)

## Warranty and Support

Warranty information for your Q&Q Fashion Mod. MF01J002Y stopwatch is typically provided with your purchase documentation. Please refer to the warranty card or contact the retailer for details regarding coverage and terms.

For technical support, service, or inquiries not covered in this manual, please visit the official Q&Q website or contact their customer service department directly. Contact information can usually be found on the manufacturer's packaging or

website.

© 2023 Q&Q. All rights reserved.

Model: MF01J002Y