

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Remington](#) /

› [Remington Head to Toe Groomer Kit User Manual](#)

## Remington PG525D

# Remington Head to Toe Advanced Rechargeable Powered Body Groomer Kit

Model: PG525D | Brand: Remington

### INTRODUCTION

The Remington PG526 Advanced Rechargeable Power Series Head-To-Toe Grooming Kit is designed to meet all your grooming needs. It features a lithium battery-powered rechargeable base and self-sharpening, surgical steel blades for precise and comfortable trimming. A full charge provides up to 70 minutes of cordless operation.

This versatile kit includes the following attachments:

- Full-Size Trimmer
- Foil Shaver
- Nose, Ear, and Detail Trimmer
- Vertical Body Hair Trimmer
- Hair Clipper Comb (with 8 settings)
- 3 Beard and Stubble Combs

All attachments are washable under running water for easy cleaning.



Figure 1: The Remington Head to Toe Groomer Kit, showcasing the main unit, various attachments, and the charging stand.

## IMPORTANT SAFETY INFORMATION

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **READ ALL INSTRUCTIONS BEFORE USING.**
- Keep the appliance away from water. Do not place or store where it can fall or be pulled into a tub or sink.
- Do not use while bathing or in the shower.
- Unplug this appliance before cleaning.
- Do not reach for an appliance that has fallen into water; unplug it immediately.
- Do not use this appliance with a damaged or broken attachment, as injury may occur.
- This appliance is for household use only.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain

disabilities.

- Use this appliance only for its intended use as described in this manual.
- Never drop or insert any object into any opening of the appliance.
- Keep the cord away from heated surfaces.
- Do not operate with a damaged cord or plug, or if the appliance malfunctions, or has been dropped or damaged.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

## SETUP AND INITIAL USE

### Charging the Groomer

Before using your Remington Groomer for the first time, ensure it is fully charged. This typically takes several hours. For optimal battery life, allow the battery to fully drain before recharging if you notice a decrease in runtime.

1. Connect the charging adapter to the groomer's charging port.
2. Plug the adapter into a standard 120 VAC 60Hz electrical outlet.
3. The charging indicator light will illuminate (if present) to confirm charging.
4. Allow the unit to charge for the recommended time as specified in the full user guide.



Figure 2: The groomer's handle, highlighting its advanced rechargeable power capability.

### **Attaching and Detaching Heads**

To attach a grooming head, align the head with the main unit and gently push until it clicks securely into place. To detach, firmly grasp the head and pull it away from the main unit. Ensure heads click into place for best performance.

## **OPERATING INSTRUCTIONS**

Your Remington Groomer offers versatile grooming options with its various attachments. Always ensure the desired attachment is securely fastened before turning on the device.

### **Using the Full-Size Trimmer**

The full-size trimmer is ideal for maintaining beard lines, sideburns, and necklines. It provides precise trimming for facial hair.

---

## FULL SIZE TRIMMER

Trim and clean-up sideburns,  
neckline and facial hair



Figure 3: The full-size trimmer in use for beard and neckline grooming.

### Using the Body Hair Trimmer

The vertical body hair trimmer is designed for comfortable maintenance or removal of body hair. Use gentle, even strokes.

---

# NOSE, EAR AND EYEBROW TRIMMER


Comfortably remove unwanted hair



Figure 4: The body hair trimmer being used for comfortable body grooming.

## **Using the Detail Shaver**

The foil shaver attachment is perfect for cleaning up edges and achieving a smooth finish on the neckline and other areas.

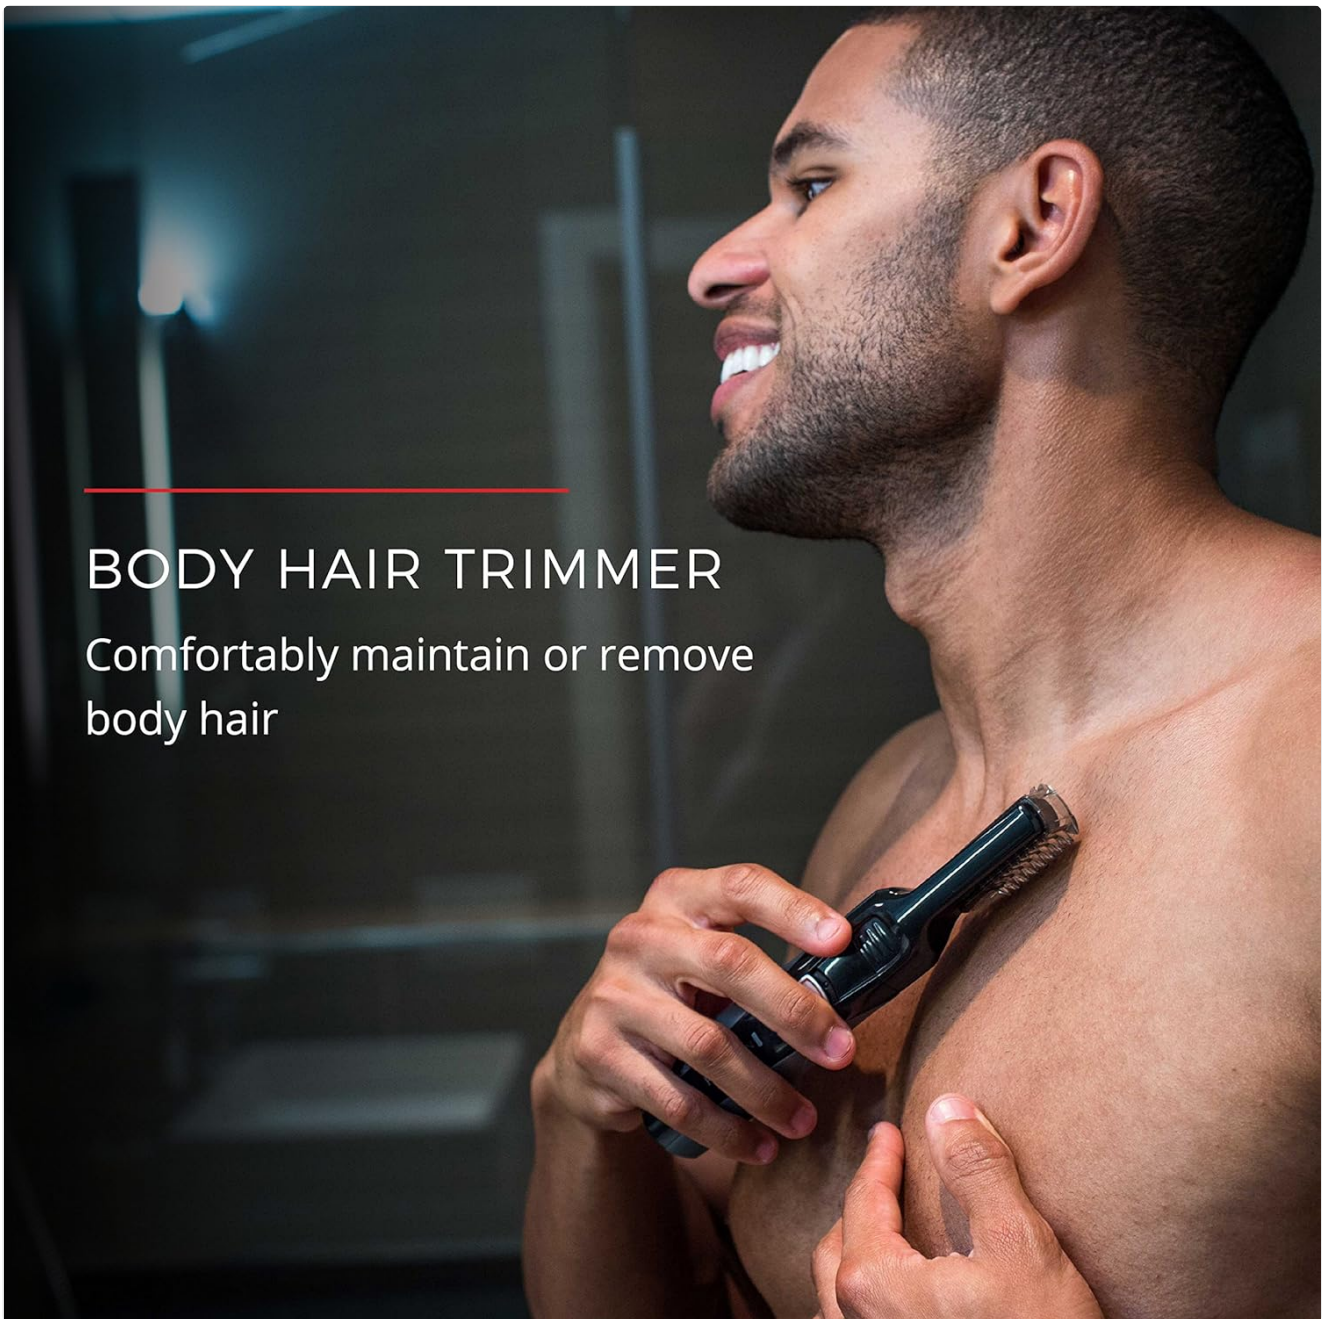

---

## BODY HAIR TRIMMER

Comfortably maintain or remove  
body hair

Figure 5: The detail shaver providing a clean finish on facial hair edges.

### **Using the Nose, Ear, and Eyebrow Trimmer**

This specialized trimmer comfortably removes unwanted hair from the nose, ears, and can be used for precise eyebrow shaping.

---

## DETAIL SHAVER

Clean up the edges and neckline



Figure 6: The nose, ear, and eyebrow trimmer attachment for delicate areas.

### **Using Combs for Length Control**

The kit includes a hair clipper comb with 8 settings and 3 beard and stubble combs, allowing you to maintain your desired hair length and style. Attach the appropriate comb to the full-size trimmer head before use.

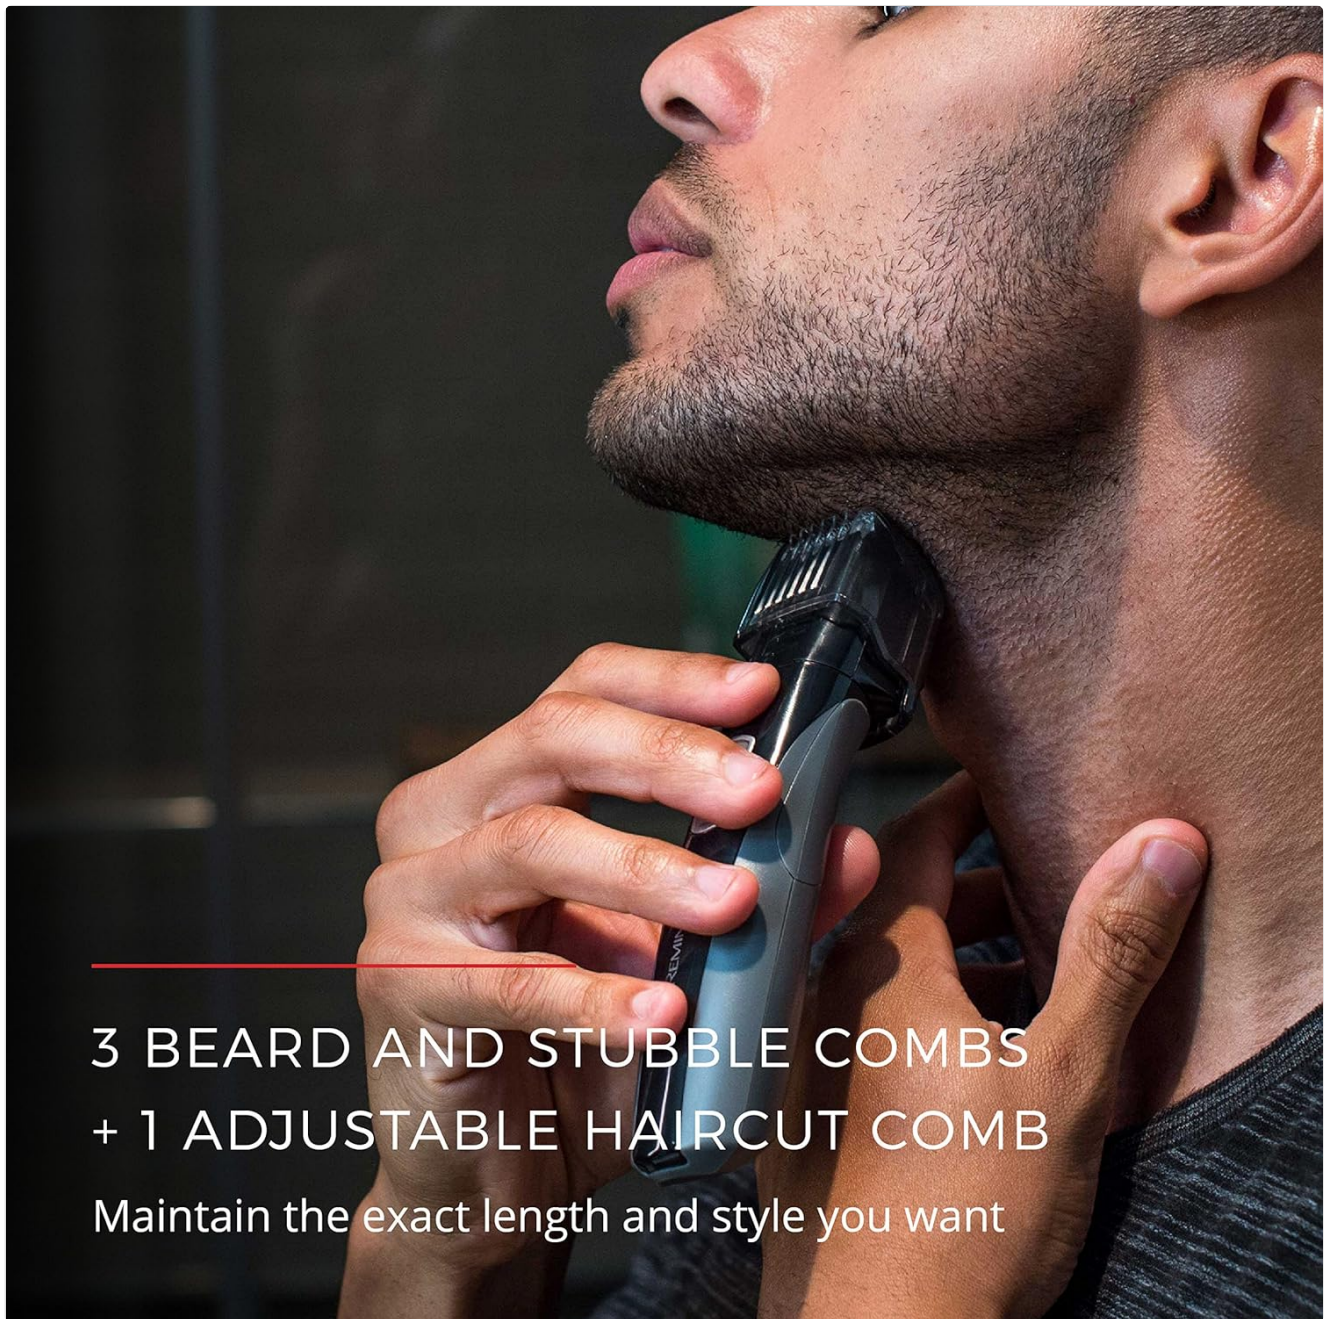


Figure 7: Using the trimmer with an adjustable comb to achieve desired beard length.

## CARE AND MAINTENANCE

### Cleaning the Attachments

The removable heads and combs are designed for easy cleaning. Regular cleaning helps maintain performance and prevents clogging.

1. Ensure the groomer is turned off and unplugged from the power source before cleaning.
2. Detach the grooming head from the main unit.
3. Rinse the detached head and any combs under running tap water.
4. Allow all parts to air dry completely before reattaching them to the main unit or storing.
5. Do not submerge the main groomer body in water.

---

## KIT INCLUDES

Body Hair Trimmer, Full-Size Trimmer, Foil Shaver, Detail Trimmer, 3 Beard & Stubble Combs, Adjustable Haircut Comb & Storage Stand



Figure 8: Washable attachments, designed for easy rinsing under a faucet.

### Storage

Store the groomer and its attachments in a dry place, away from direct sunlight and extreme temperatures. The kit includes a storage stand for convenient organization of the main unit and attachments.

### TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Unit does not power on or charge.	<p>Check the electrical outlet to ensure it is functioning.</p> <p>Verify the charging cable and adapter are securely connected and undamaged.</p> <p>Clean the contact points on both the groomer and the charging stand/cable.</p>
Reduced runtime or poor battery performance.	<p>Allow the battery to fully drain before recharging to optimize battery life.</p> <p>Ensure the unit is fully charged before each use.</p>
Poor trimming performance or pulling hair.	<p>Ensure the grooming heads are clean and free of hair buildup. Clean regularly to avoid clogging.</p> <p>Verify that the attachment heads are securely clicked into place.</p> <p>The blades may be dull. Consider replacement if performance does not improve after cleaning.</p>

If the issue persists after attempting these solutions, please refer to the Warranty & Support section for further assistance.

## PRODUCT SPECIFICATIONS

**Model Number:** PG525D

**Product Dimensions:** 1.5 x 1.1 x 6.3 inches

**Item Weight:** 8 ounces

**Power Source:** Battery Powered

**Battery Type:** 1 AA battery required (included)

**Voltage:** 120 VAC 60Hz

**Color:** Black

**Manufacturer:** Remington

**Country of Origin:** China

**UPC:** 074590532999, 074590556698



Figure 9: Product dimensions for the Remington groomer.

## WARRANTY AND SUPPORT

### Limited Warranty

This Remington Groomer is backed by a **2-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from accident, misuse, abuse, alteration, or commercial use.

For warranty service, please retain your sales receipt as proof of purchase. Do not return the product to the place of purchase.

### Customer Support

For technical assistance, troubleshooting, or to inquire about warranty service, please contact Remington Customer Service. You can also refer to the official user guide for more detailed information.

**Official User Guide (PDF):** [Download User Guide](#)

**Remington Website:** Visit the official Remington website for support resources and contact information.

## **PRODUCT DISPOSAL**

When your Remington Groomer reaches the end of its life, please dispose of it responsibly. This product contains a rechargeable battery and electronic components that should not be disposed of with general household waste.

Please take the product to an appropriate collection point for the recycling of electrical and electronic equipment. For more information about recycling and disposal, contact your local waste management authority or the retailer where you purchased the product.