

[manuals.plus](#) /› [Arregui](#) /› [Arregui Activa Electronic Surface-Mounted Safe 230x170x170 Instruction Manual](#)

Arregui 1832D80

Arregui Activa Electronic Surface-Mounted Safe

MODEL: 1832D80 - INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the Arregui Activa Electronic Surface-Mounted Safe. This manual provides essential information for the correct installation, operation, and maintenance of your safe. Please read these instructions carefully before using the product to ensure optimal performance and security.

The Arregui Activa safe is designed to provide secure storage for your valuables, featuring an electronic locking system and a robust construction for surface mounting.

2. Setup

2.1 Unpacking

- Carefully remove the safe from its packaging.
- Check that all components are present: safe unit, emergency keys, instruction manual, and mounting hardware.
- Retain the packaging for future transport or storage.

2.2 Battery Installation

1. Locate the battery compartment, typically on the inside of the safe door.
2. Open the battery cover.
3. Insert four (4) AA 1.5V alkaline batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely. The safe will emit a beep, indicating successful battery installation.

2.3 Mounting the Safe

The Arregui Activa safe is designed for surface mounting to a wall or floor. Choose a secure and discreet location.

1. Position the safe in the desired location and mark the drilling points through the pre-drilled holes in the back or bottom of the safe.
2. Drill holes in the wall or floor using an appropriate drill bit for the mounting surface.
3. Insert the provided wall anchors (if applicable) into the drilled holes.
4. Align the safe with the holes and secure it using the provided screws or bolts. Tighten all fasteners firmly.



Image 1: Arregui Activa Electronic Safe, illustrating its compact design suitable for surface mounting.

3. Operating Instructions

3.1 Initial Code Setting

Upon first use, you will need to set your personal access code.

1. With the safe door open, press the red reset button located on the inside of the door (usually near the hinge). The yellow indicator light on the keypad will illuminate.
2. Enter a new personal code (3-8 digits) on the keypad.
3. Confirm the code by pressing the 'A' or '#' button. The safe will beep, and the yellow light will turn off, indicating the code has been successfully set.
4. Test the new code with the door open before closing it.

3.2 Opening the Safe

1. Enter your personal code on the keypad.
2. Press the 'A' or '#' button. The green indicator light will illuminate, and you will hear a click.
3. Within 5 seconds, turn the knob or handle clockwise to open the door.

3.3 Closing the Safe

- Close the safe door firmly.
- Turn the knob or handle counter-clockwise to engage the locking bolts. The safe is now secured.

3.4 Changing the User Code

1. Open the safe using your current code.
2. Press the red reset button on the inside of the door. The yellow indicator light will illuminate.
3. Enter your new personal code (3-8 digits).
4. Confirm the new code by pressing the 'A' or '#' button. The safe will beep, and the yellow light will turn off.
5. Test the new code with the door open before closing it.

3.5 Emergency Opening (with Key)

In case of battery failure or forgotten code, you can use the emergency key.

1. Locate the emergency keyhole, usually hidden behind a small cover on the keypad panel.
2. Remove the cover.
3. Insert the emergency key and turn it clockwise while simultaneously turning the handle to open the safe.
4. Once open, replace the batteries if necessary and reset your code. Keep emergency keys in a secure location away from the safe.

4. Maintenance

4.1 Battery Replacement

When the batteries are low, the red indicator light will flash or the safe will emit a warning sound when you attempt to open it. Replace all four batteries promptly to ensure continued operation.

- Follow the steps in section 2.2 for battery installation.
- Always use new, high-quality alkaline batteries. Do not mix old and new batteries or different battery types.

4.2 Cleaning

- Clean the exterior of the safe with a soft, damp cloth.
- Do not use abrasive cleaners or solvents, as these can damage the finish or electronic components.

5. Troubleshooting

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered; Low batteries; Keypad malfunction.	Re-enter code carefully; Replace batteries (Section 4.1); Use emergency key (Section 3.5).
Keypad does not respond.	Dead batteries; Loose battery connection.	Replace batteries (Section 4.1); Ensure batteries are correctly inserted.
Red light flashes or beeps continuously.	Low battery warning.	Replace batteries immediately (Section 4.1).
Door does not close properly.	Obstruction; Misalignment.	Check for items blocking the door or bolts; Ensure safe is mounted level.

6. Specifications

Model Number:	1832D80
External Dimensions (HxWxD):	230 x 170 x 170 mm
Locking Mechanism:	Electronic keypad with emergency key override
Power Source:	4 x AA 1.5V batteries

Mounting Type:	Surface-mounted (wall or floor)
-----------------------	---------------------------------

7. Warranty Information

Arregui products are manufactured to high-quality standards and are guaranteed against manufacturing defects for a period specified by local consumer protection laws from the date of purchase. This warranty does not cover damage caused by improper installation, misuse, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

8. Support

For technical assistance, spare parts, or warranty inquiries, please contact your retailer or the Arregui customer service department. Refer to the contact information provided with your purchase documentation or visit the official Arregui website for support details.

Website: www.arregui.es

© 2024 Arregui. All rights reserved. Information subject to change without notice.