

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VTech](#) /

› [VTech Click and Count Remote Instruction Manual \(Model 80-150300\)](#)

VTech 80-150300

VTech Click and Count Remote Instruction Manual

Model: 80-150300

INTRODUCTION

The VTech Click and Count Remote is an interactive learning toy designed to engage young children in imitative play while introducing fundamental concepts. This toy mimics a real TV remote, allowing children to explore numbers, colors, shapes, and sounds through engaging activities.

Key Features:

- Plays over 45 sing-along songs, melodies, sound effects, and phrases.
- Allows pretend channel surfing through 9 different channels, including news and weather.
- Features 10 colorful buttons that introduce colors, numbers, and shapes.
- Includes an up and down volume button to teach the concept of opposites.
- Designed for children aged 6 months to 3 years.

SETUP

Battery Installation:

The VTech Click and Count Remote requires 2 AA batteries (included for demo purposes). For regular use, it is recommended to replace these with new batteries.

1. Locate the battery compartment on the back of the remote.
2. Using a small Phillips head screwdriver, loosen the screw on the battery compartment cover.
3. Remove the cover.
4. Insert 2 new AA batteries, ensuring correct polarity (+/-).
5. Replace the battery compartment cover and tighten the screw.

Power On/Off and Volume Control:

On the back of the remote, locate the power/volume switch. Slide the switch to turn the unit ON (low or high volume) or OFF. For optimal battery life, always turn the unit OFF when not in use.



Image: A baby happily playing with the VTech Click and Count Remote, demonstrating its size and appeal to young children.

OPERATING INSTRUCTIONS

Using the Buttons:

- **Number Buttons (0-9):** Press these colorful buttons to hear numbers, colors, and shapes. Each press may introduce a different concept or sound related to the button.
- **Channel Buttons:** Use the channel up/down buttons to pretend to surf through 9 different channels, featuring pretend news and weather for role-play fun.
- **Volume Buttons:** The dedicated volume up and down buttons teach the concept of opposites and allow for sound adjustment.
- **Music Button:** Press the music button to activate sing-along songs, fun melodies, and sound effects.
- **Roller Ball:** The interactive roller ball on the remote also triggers various sounds and melodies, capturing your child's attention.



Image: A baby intently pressing buttons on the VTech Click and Count Remote, highlighting the interactive nature of the toy.

MEDIA GALLERY

Product Overview Video:

Your browser does not support the video tag.

Video: An official product video showcasing the VTech Click and Count Remote's features and interactive elements.

Additional Product Video:

Your browser does not support the video tag.

Video: A second official product video demonstrating the VTech Click and Count Remote in action, highlighting its various sounds and lights.



Image: A baby curiously examining the VTech Click and Count Remote, showing its ergonomic design for small hands.

vttech®

TRY ME!
Slide the switch!

Press & Learn

Listen to 9 channels

Imitative Fun

4 learning buttons
imitate a real
remote control

45+

Songs, Melodies
& Phrases

Teaches



Numbers



Imitative Play



Colors



First Words

NEW!

**Click & Count
Remote™**

**6-36
Months**



Image: The VTech Click and Count Remote in its retail packaging, displaying key features and age range.

MAINTENANCE

- **Cleaning:** Wipe the toy with a damp cloth to clean. Do not immerse in water.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

No Sound or Intermittent Sound:

- Check if the power/volume switch is in the "ON" position (low or high volume).
- Replace the batteries with new AA batteries.
- Ensure batteries are inserted with correct polarity.

Lights Not Working:

- Verify that the unit is powered on.
- Replace batteries if they are low.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.95 x 6.69 x 1.38 inches
Item Weight	5.6 ounces
Model Number	80-150300
Manufacturer Recommended Age	6 months - 3 years
Batteries	2 AA batteries required (included for demo)
Manufacturer	VTech
Release Date	December 16, 2013

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official VTech website. Keep your purchase receipt as proof of purchase for any warranty claims.