

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Metro](#) /

› [Metro m909.com Audio CD User Manual](#)

Metro B00GYGFMSO

Metro m909.com Audio CD User Manual

Model: B00GYGFMSO

[Introduction](#) [Usage](#) [Care and Handling](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

This manual provides essential information for the Metro m909.com Audio CD (ASIN: B00GYGFMSO). This product is an audio compact disc featuring music by the artist Metro. It is designed for playback on standard CD players and compatible audio systems.



Image 1: Album cover for Metro m909.com Audio CD. This image displays the primary artwork associated with the music album.

2. USAGE (OPERATING INSTRUCTIONS)

To enjoy the Metro m909.com Audio CD, follow these general steps:

- 1. Insert the CD:** Gently place the Audio CD into the disc tray of your CD player or compatible audio system with the label side facing up.
- 2. Close the Tray:** Close the disc tray. Some players may close automatically.
- 3. Select Play:** Press the 'Play' button on your CD player or remote control. The music should begin to play.
- 4. Track Navigation:** Use the 'Next Track' or 'Previous Track' buttons to skip between songs.
- 5. Volume Control:** Adjust the volume using your audio system's controls.
- 6. Eject the CD:** When finished, press the 'Eject' button to safely remove the CD.

Note: Specific button names and procedures may vary depending on your CD player model. Refer to your CD player's manual for detailed operating instructions.

3. CARE AND HANDLING (MAINTENANCE)

Proper care ensures the longevity and optimal playback quality of your Audio CD:

- Handle by Edges:** Always hold the CD by its edges or by placing a finger through the center hole to avoid touching the playing surface.
- Keep Clean:** If the CD becomes dirty, gently wipe it with a soft, lint-free cloth. Wipe from the center outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- Storage:** Store the CD in its original jewel case or a protective sleeve when not in use to prevent scratches and dust accumulation.
- Avoid Extreme Conditions:** Do not expose the CD to direct sunlight, high temperatures, or high humidity, as these can cause warping or damage to the data layer.
- Do Not Bend:** Avoid bending the CD, as this can cause irreparable damage.

4. TROUBLESHOOTING

If you encounter issues during playback, consider the following common solutions:

Problem	Possible Cause	Solution
CD skips or stutters during playback.	Dust or smudges on the CD surface; scratches on the CD; dirty CD player lens.	Clean the CD carefully as described in the "Care and Handling" section. Try playing another CD to check if the issue is with the player.
CD does not play or is not recognized.	CD inserted incorrectly; CD is damaged; CD player malfunction.	Ensure the CD is inserted label-side up. Check the CD for visible damage. Try the CD in a different player.
No sound from the CD player.	Volume too low; audio cables disconnected; incorrect input selected on amplifier/receiver.	Increase volume. Check all audio cable connections. Select the correct input source on your audio system.

5. SPECIFICATIONS

Key specifications for the Metro m909.com Audio CD:

- Product Title:** m909.com

- **Artist:** Metro
- **Format:** Audio CD
- **ASIN:** B00GYGFMS0
- **Manufacturer:** AFM Productions
- **Label:** AFM Productions
- **Number of Discs:** 1
- **Date First Available:** November 27, 2013

6. SUPPORT INFORMATION

For further assistance regarding the Metro m909.com Audio CD, please refer to the following:

- **Product Information:** For details about the album content, tracklist, or artist, please visit official music databases or the artist's official website.
- **Purchase Support:** For inquiries related to your purchase, such as order status or returns, please contact the retailer from whom you purchased the CD.
- **CD Player Issues:** If you are experiencing problems with your CD player, consult its specific user manual or contact the player's manufacturer for technical support.

Note: This Audio CD does not typically come with a separate manufacturer's warranty beyond standard consumer rights for physical goods.