

Peg Perego B5P3A2PICC

Peg Perego Pliko P3 Compact Stroller

USER MANUAL

Introduction

Welcome to the user manual for your Peg Perego Pliko P3 Compact Stroller. This manual provides essential information on the proper assembly, operation, maintenance, and troubleshooting of your stroller. Please read this manual thoroughly before using the product to ensure safe and correct usage. Keep this manual for future reference.

Safety Information

Your child's safety is paramount. Always follow these safety guidelines:

- Always use the 5-point safety harness to secure your child in the stroller.
- Never leave your child unattended in the stroller.
- Ensure the parking brake is engaged when placing or removing your child from the stroller, or when the stroller is stationary.
- Do not overload the storage basket or hang bags on the handles, as this can cause the stroller to tip over.
- Keep fingers and limbs clear of moving parts when folding or unfolding the stroller.
- Do not use the stroller on stairs or escalators.
- Regularly check all parts for wear and tear, and replace damaged components immediately.
- This stroller is designed for one child only.

Product Overview

Familiarize yourself with the main components of your Peg Perego Pliko P3 Compact Stroller.



Figure 1: The Peg Perego Pliko P3 Compact Stroller. Key features include the adjustable canopy, comfortable seat with 5-point harness, ergonomic handles, and a spacious storage basket below.



Figure 2: Detail of the stroller's durable plastic wheels and integrated footrest. The wheels are designed for smooth maneuverability.



Figure 3: The stroller in its compact folded position, highlighting its space-saving design for easy storage and transport.

Setup

Follow these steps for the initial setup of your stroller:

1. **Unfolding the Stroller:** Hold the handle firmly and release the folding mechanism. The stroller is designed to be unfolded with one hand. Ensure all parts click into place securely.
2. **Attaching Wheels (if necessary):** If the wheels are not pre-attached, align each wheel with its axle and push firmly until it locks into position. Pull on the wheel to ensure it is securely fastened.
3. **Adjusting Handles:** The handles are adjustable for user comfort. Locate the adjustment buttons on the side of the handles and press them to extend or retract to your desired height.

Operating

Instructions for daily use of your stroller:

- Securing Your Child:** Place your child in the seat and fasten the 5-point safety harness. Adjust the straps to ensure a snug, secure fit without being too tight.
- Adjusting Seat Recline:** The seat offers 4 recline positions. Locate the recline lever or button on the back of the seat and adjust to the desired angle for your child's comfort.
- Using the Canopy:** Extend the sunshade (parasole) to protect your child from sun exposure. It can be adjusted or retracted as needed.
- Engaging the Brake:** To stop the stroller, push down on the brake lever located near the rear wheels until it locks. Ensure the stroller does not move before releasing your grip. To release, lift the lever.
- Folding the Stroller:** The stroller features a compact folding mechanism. Locate the folding release and follow the instructions to collapse the stroller into its compact form for storage or transport. This can typically be done with one hand.

Maintenance

Proper maintenance will extend the life of your stroller:

- Cleaning Fabric:** The fabric components should be hand washed only. Use mild soap and cold water. Do not bleach or tumble dry.
- Cleaning Frame:** Wipe the frame and plastic parts with a damp cloth. Avoid abrasive cleaners.
- Wheel Maintenance:** Periodically check the wheels for debris and clean them. Lubricate moving parts of the wheels and folding mechanism with a silicone-based lubricant if they become stiff.
- Storage:** Store the stroller in a dry place, away from direct sunlight and extreme temperatures.

Troubleshooting

Refer to this section for common issues and their solutions:

Problem	Possible Cause	Solution
Stroller does not unfold or fold smoothly.	Mechanism is stiff or obstructed.	Check for debris in the folding mechanism. Apply a silicone lubricant to moving parts.
Wheels squeak or are difficult to turn.	Dirt or lack of lubrication.	Clean wheels and axles. Apply a silicone lubricant to the wheel bearings.
Brake does not engage or disengage properly.	Brake mechanism is dirty or misaligned.	Clear any obstructions from the brake mechanism. If the issue persists, contact customer support.
Stroller feels unstable.	Not fully unfolded or damaged frame.	Ensure all locking mechanisms are engaged after unfolding. Do not use if the frame is damaged.

Specifications

Feature	Detail
Product Dimensions	86 x 54 x 102.5 cm

Feature	Detail
Model Number	B5P3A2PICC
Gender	Unisex
Material Type	Synthetic Leather
Care Instructions	Hand wash only
Additional Features	5-point safety belt, Sunshade, Compact foldable, One-hand folding
Batteries Required	No
Harness Type	Five-point
Seating Capacity	1
Seat Length	25/90 cm
Seat Width	33.00 cm
Wheel Material	Plastic Wheel
Wheel Diameter	17.00 cm
Folded Dimensions	49 x 34 x 98 cm
Number of Recline Positions	4
Item Weight	8.5 Kilograms
ASIN	B00SKNBMJC
First Available	October 21, 2014
Brand	Peg Perego
Color	Grey (Grau-weiß)
Fabric Type	Upholstery: 100% Polyester; Faux leather: 60% Polyurethane, 25% Polyester, 15% Cotton; Padding: 100% Polyester
Frame Material	Plastic
Stroller Type	Standard Stroller
Car Seat Compatible	No

Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Peg Perego website. Keep your proof of purchase for any warranty claims.

Note: No official product videos were provided in the product data for embedding.

