

## Toastermaster TM-103TR

# Toastermaster TM-103TR Toaster Oven User Manual

Model:TM-103TR | Brand:Toastermaster

## IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when

not in use.

- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials that may catch fire or melt.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

## PRODUCT OVERVIEW

---



Front view of the Toastmaster TM-103TR Toaster Oven, showcasing its stainless steel finish, glass door, and control dials.



The toaster oven with its door open, revealing the removable baking rack and multi-purpose baking tray. The interior is spacious enough for various items.

The Toastmaster TM-103TR Toaster Oven is a versatile kitchen appliance designed for toasting, baking, and broiling. Its compact size and 10-liter capacity make it suitable for small kitchens or for preparing quick meals.

### Key Features:

- **10 Liter Capacity:**Accommodates up to 4 slices of bread or a 9-inch pizza.
- **Adjustable Temperature Control:**Allows precise temperature settings for various cooking needs.
- **Multiple Functions:**Bake, Broil, and Toast settings for versatile cooking.
- **30-Minute Timer:**Features an audible signal and a "Stay On" setting for longer cooking times.
- **1000 Watts Power:**Efficient heating with two quartz heating elements.
- **Accessories:**Includes a multi-purpose baking tray and a rack with dual position slots.
- **Power Indicator Light:**Illuminates when the oven is in operation.
- **Stainless Steel Finish:**Durable and easy to clean exterior.

## SETUP AND FIRST USE

---

### Unpacking:

1. Carefully remove the toaster oven and all accessories from the packaging.
2. Remove any packing materials,stickers,or protective film from the appliance.
3. Wash the baking tray and rack in warm,soapy water. Rinse and dry thoroughly.

### Placement:

- Place the toaster oven on a flat,stable,heat-resistant surface.
- Ensure there is adequate ventilation around the appliance (at least 4 inches of space on all sides).
- Do not place the oven directly under a cabinet or near flammable materials like curtains.

### Before First Use:

It is recommended to run the oven empty for approximately 15 minutes on the "Bake" setting at 450°F (230°C) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate.

## OPERATING INSTRUCTIONS

---



The upper dial controls the temperature and cooking function (Bake,Broil,Toast).



The lower dial controls the cooking time (up to 30 minutes) and includes a "Stay On" setting.

### General Operation:

1. Place the baking rack in the desired position (upper for broiling/toasting,lower for baking).
2. Place food on the baking tray or directly on the rack,depending on the recipe.
3. Close the oven door.
4. Plug the power cord into a standard electrical outlet. The power indicator light will illuminate when the oven is operating.

### Toasting:

- Place items to be toasted directly on the wire rack.
- Turn the upper dial to the "TOAST" setting.
- Turn the lower dial (timer) to the desired toast shade (Light,Medium,Dark) or specific time. The oven will begin toasting.
- When the cycle is complete,the timer will chime,and the oven will turn off.



Croissants being baked on the baking tray inside the toaster oven,demonstrating its capacity for various food items.

### **Baking:**

- Place food on the baking tray and insert it into the oven.
- Turn the upper dial to the "BAKE" setting and select the desired temperature (e.g.,350°F,450°F).
- Turn the lower dial (timer) to the desired baking time. For times longer than 30 minutes,turn the dial to "STAY ON" and monitor cooking manually.
- When baking is complete,turn the timer dial to "OFF" and unplug the oven.

### **Broiling:**

- Place food on the baking tray and insert it into the oven,typically on the upper rack position for best results.
- Turn the upper dial to the "BROIL" setting.
- Turn the lower dial (timer) to the desired broiling time. Broiling often requires shorter times and close monitoring.
- When broiling is complete,turn the timer dial to "OFF" and unplug the oven.

## **MAINTENANCE AND CLEANING**

---

Regular cleaning will help maintain the performance and appearance of your toaster oven.

### **Cleaning the Interior:**

1. Always unplug the oven and allow it to cool completely before cleaning.
2. Remove the baking tray and wire rack. Wash them in warm,soapy water,rinse,and dry thoroughly.
3. Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains,a non-abrasive cleaner can be used.
4. Do not use abrasive cleaners or metal scouring pads on the interior,as they can damage the surfaces.

### Cleaning the Exterior:

- Wipe the exterior surfaces with a soft,damp cloth.
- For stainless steel surfaces,use a stainless steel cleaner for best results.
- Do not immerse the toaster oven in water or any other liquid.

### Crumb Tray:

The toaster oven is equipped with a removable crumb tray. Pull out the crumb tray from the bottom front of the oven to empty crumbs. Clean regularly to prevent grease buildup and potential fire hazards.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in;power outlet not working;timer not set.	Ensure the oven is securely plugged into a working outlet. Set the timer dial to a desired time or "STAY ON".
Food is not cooking evenly.	Incorrect rack position;uneven food placement;door not fully closed.	Adjust rack position for optimal cooking. Ensure food is centered. Close the oven door completely.
Excessive smoke or odor during operation.	First use burn-off;food residue on heating elements;crumb tray needs cleaning.	Initial smoke is normal. Clean the interior and crumb tray thoroughly. Avoid placing food directly on heating elements.
Timer does not advance or chime.	Timer mechanism malfunction.	If the timer is faulty,contact customer support.

If the problem persists after trying these solutions,please contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	TM-103TR
Capacity	10 Liters
Power Output	1000 Watts
Dimensions (L x W x H)	36.83 x 25.4 x 20.32 cm (14.5 x 10 x 8 inches)
Weight	2.63 kg (5.8 lbs)

Feature	Detail
Material	Stainless Steel
Color	Silver
Functions	Bake,Broil,Toast
Timer	30-minute with "Stay On" setting

## WARRANTY AND SUPPORT

---

### Limited Warranty:

This Toastmaster TM-103TR Toaster Oven is covered by a limited warranty against defects in material and workmanship for a period of one (1) year from the date of original purchase. This warranty applies only to the original retail purchaser and is not transferable. It does not cover damage resulting from accident,misuse,abuse,commercial use,or unauthorized modification of the product.

### Customer Support:

For technical assistance,warranty claims,or general inquiries,please contact Toastmaster customer support. Please have your model number (TM-103TR) and proof of purchase ready when contacting support.

*Contact information (e.g.,phone number,website) is typically found on the product packaging or the manufacturer's official website.*

---

©2024 Toastmaster. All rights reserved.

*This manual is for informational purposes only. Specifications are subject to change without notice.*