

Manuals.plus /

- › HP /
- › HP External USB DVDRW Drive User Manual

HP F2B56AA

HP External USB DVDRW Drive User Manual

Model: F2B56AA

1. INTRODUCTION

Welcome to the user manual for your HP External USB DVDRW Drive. This portable optical drive allows you to read and write CDs and DVDs, providing essential functionality for systems without an integrated optical drive. Its compact design and USB 2.0 interface ensure easy connectivity and portability, making it an ideal accessory for laptops and ultrabooks.



Figure 1: HP External USB DVDRW Drive. A sleek, black HP External USB DVDRW Drive, showcasing its compact and portable design. The HP logo is subtly visible on the top surface.

2. KEY FEATURES

The HP External USB DVDRW Drive offers a range of features designed for convenience and performance:

- **HP Optical Disc Drive:** Reliable performance from a trusted brand.

- **Compact Multimedia Accessory:** Slim and lightweight, perfect for on-the-go use.
- **Color: Black:** A classic and professional aesthetic.
- **Durable Material:** Constructed to withstand daily use.
- **USB 2.0 Interface:** Ensures broad compatibility and sufficient data transfer speeds for optical media.
- **DVD±RW Capabilities:** Supports reading and writing of various CD and DVD formats.

3. SETUP GUIDE

3.1. Package Contents

Before you begin, ensure all items are present in the package:

- HP External USB DVDRW Drive
- Integrated USB Cable
- User Manual (this document)

3.2. System Requirements

To ensure proper functionality, your computer must meet the following minimum requirements:

- **Operating System:** Windows 11, Windows 10, Windows 8.1, Windows 7, Windows Vista, Windows XP, Mac OS X 10.0 Cheetah, Mac OS X 10.4 Tiger, Mac OS X 10.5 Leopard, Mac OS X 10.6 Snow Leopard, Mac OS X 10.7 Lion, OS X 10.10 Yosemite, OS X 10.11 El Capitan, OS X 10.8 Mountain Lion, OS X 10.9 Mavericks, macOS 10.12 Sierra, macOS 10.13 High Sierra, macOS 10.14 Mojave, macOS 10.15 Catalina.
- **Available Port:** One (1) USB 2.0 port or higher.

3.3. Connecting the Drive

Follow these steps to connect your HP External USB DVDRW Drive to your computer:

1. Locate an available USB port on your computer.
2. Connect the integrated USB cable from the HP External USB DVDRW Drive to the USB port on your computer.
3. The operating system will automatically detect and install the necessary drivers. No additional software installation is typically required for basic functionality (plug and play).
4. Wait for the drive to appear in "This PC" (Windows) or "Finder" (macOS). This may take a few moments.



Figure 2: Example of a laptop, illustrating a common device the DVDRW drive connects to.

4. OPERATING INSTRUCTIONS

4.1. Inserting a Disc

1. Gently press the eject button on the front of the drive to open the disc tray.

2. Carefully place the CD or DVD onto the tray with the label side facing up, ensuring it sits securely on the center spindle.
3. Gently push the tray back into the drive until it clicks shut. Do not force the tray.

4.2. Playing/Reading Discs

Once a disc is inserted, your operating system may automatically prompt you to choose an action (e.g., play a movie, open files). If not, navigate to "This PC" (Windows) or "Finder" (macOS), locate the drive icon, and double-click it to access the disc's contents. Ensure you have appropriate software installed to play specific media types (e.g., DVD player software for movies).

4.3. Burning/Writing Discs

To write data to a blank CD-R/RW or DVD-R/RW, you will need compatible disc burning software (e.g., Windows Media Player, Nero, Roxio, or macOS Disk Utility). The drive supports a write speed of up to 8x for DVDs.

1. Insert a blank, writable disc into the drive.
2. Open your preferred disc burning software.
3. Follow the software's instructions to select files, configure burning settings (e.g., project type, write speed), and initiate the burning process.
4. Ensure the burning process completes without interruption. Do not disconnect the drive or open the tray during this time.

4.4. Ejecting a Disc

To eject a disc, you can either:

- Press the eject button on the front of the drive.
- Right-click the drive icon in "This PC" (Windows) or "Finder" (macOS) and select "Eject."

5. MAINTENANCE AND CARE

Proper care will extend the life of your HP External USB DVDRW Drive:

- **Keep the drive clean:** Use a soft, dry, lint-free cloth to wipe the exterior. Avoid using liquid cleaners, solvents, or abrasive materials.
- **Protect the lens:** Do not touch the optical lens inside the drive. Dust or debris on the lens can affect performance.
- **Handle discs carefully:** Always hold discs by their edges to prevent fingerprints, smudges, and scratches, which can lead to read/write errors.
- **Store properly:** When not in use, store the drive in a cool, dry place, away from direct sunlight, excessive heat, humidity, and strong magnetic fields.
- **Avoid physical shock:** The drive contains delicate internal components; avoid dropping it or subjecting it to strong impacts or vibrations.

6. TROUBLESHOOTING

If you encounter issues with your HP External USB DVDRW Drive, refer to the table below for common problems and their solutions:

Problem	Solution
Drive not recognized by computer.	<ul style="list-style-type: none"> • Ensure the USB cable is securely connected to both the drive and the computer. • Try connecting to a different USB port on your computer. • Restart your computer. • Check Device Manager (Windows) or System Information (macOS) to see if the drive is listed. If it has an error, try updating or reinstalling the driver.
Disc not reading or playing.	<ul style="list-style-type: none"> • Ensure the disc is clean and free of scratches, smudges, or cracks. • Try a different disc to rule out a faulty disc. • Ensure the disc is inserted correctly (label side up). • Check if your media player software supports the disc format (e.g., Blu-ray discs are not supported).
Disc burning fails.	<ul style="list-style-type: none"> • Ensure you are using a blank, writable disc (CD-R/RW or DVD-R/RW). • Verify that your burning software is configured correctly and is up-to-date. • Try a lower burning speed (e.g., 8x, as specified for this drive). • Ensure there is enough free space on the disc for the data you are trying to burn. • Close other applications that might be using system resources during the burning process.
Drive makes unusual noises.	<ul style="list-style-type: none"> • Some noise is normal during disc spinning, especially at high speeds. • If the noise is excessive or persistent, ensure the drive is on a stable, flat surface. • If the issue persists and affects functionality, contact customer support.

7. TECHNICAL SPECIFICATIONS

Detailed specifications for the HP External USB DVDRW Drive:

Feature	Detail
Model Number	F2B56AA
Brand	HP
Interface	USB 2.0
Optical Storage Write Speed	8x
Optical Storage Read Speed	24x or less
Dimensions (L x W x H)	16 x 1.52 x 14.22 cm (6.3 x 0.6 x 5.6 inches)
Weight	8.5 grams (0.3 ounces)
Color	Black
Special Features	Portable
Compatible Operating Systems	Windows 11, 10, 8.1, 7; Mac OS X 10.0 to macOS 10.15 Catalina
UPC	766907739626, 888182028476

8. WARRANTY AND SUPPORT

For detailed warranty information regarding your HP External USB DVDRW Drive, please refer to the warranty card or documentation included with your original purchase. You can also find the most up-to-date warranty terms and conditions on the official HP support website.

For technical support, product registration, driver downloads, and software updates, please visit the official HP support website:

support.hp.com

Note: Information regarding the availability of spare parts for this product is currently unavailable. Software updates are not guaranteed beyond the initial release.