

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sharper Image](#) /

› [Sharper Image Digital 6-Piece Electronic Drum Set \(Model Sha-1955\) User Manual](#)

## Sharper Image Sha-1955

# Sharper Image Digital 6-Piece Electronic Drum Set (Model Sha-1955) User Manual

## INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Sharper Image Digital 6-Piece Electronic Drum Set, Model Sha-1955. Please read this guide thoroughly before using the product to ensure proper function and longevity.

## PRODUCT OVERVIEW



Figure 1: Sharper Image Digital 6-Piece Electronic Drum Set. This image displays the Sharper Image Digital 6-Piece Electronic Drum Set within its retail packaging. The drum set features six circular drum pads with blue accents, a control panel with buttons, and includes a pair of drumsticks. The packaging highlights features such as built-in rhythms, rhythm and volume controls, tempo control, and included

drumsticks.

The Sharper Image Digital 6-Piece Electronic Drum Set is designed to provide an engaging musical experience. It includes multiple drum pads and a control panel for various functions.

## FEATURES

---

- Jam along to built-in rhythms.
- Rhythm and volume controls for customized sound.
- Tempo control to adjust the speed of rhythms.
- Includes a pair of drumsticks.

## SETUP

---

1. **Unboxing:** Carefully remove all components from the packaging. Ensure all parts, including the drum set and drumsticks, are present.
2. **Power Source:** Insert the required batteries (not included) into the battery compartment, typically located on the underside of the unit. Ensure correct polarity. Alternatively, if an AC adapter port is present, connect a compatible adapter (sold separately) to a power outlet.
3. **Placement:** Place the drum set on a stable, flat surface.
4. **Drumsticks:** Prepare the included drumsticks for use.

## OPERATING INSTRUCTIONS

---

1. **Power On/Off:** Locate the power switch (usually labeled "ON/OFF") on the control panel and slide it to the "ON" position to power on the device. Slide to "OFF" when not in use.
2. **Volume Control:** Use the volume control buttons or knob (labeled "VOL" or with '+' and '-' symbols) to adjust the sound output level.
3. **Rhythm Selection:** Press the "RHYTHM" button to cycle through the available built-in rhythms.
4. **Tempo Adjustment:** Use the "TEMPO" control buttons or knob to increase or decrease the speed of the selected rhythm.
5. **Playing the Drums:** Strike the drum pads with the included drumsticks to produce drum sounds. Each pad may correspond to a different drum sound (e.g., snare, bass, cymbal).
6. **Stop Rhythm:** Press the "STOP" button to halt any playing rhythm.

## MAINTENANCE

---

- **Cleaning:** Wipe the surface of the drum set with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the drum set in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove batteries to prevent leakage.
- **Handling:** Avoid dropping the unit or subjecting it to strong impacts.

## TROUBLESHOOTING

---

- **No Sound:**
  - Ensure the unit is powered on.

- Check battery installation or AC adapter connection.
- Increase the volume level.

- **Pads Unresponsive:**

- Ensure the unit is powered on.
- Check for any debris on the drum pads.

- **Rhythm Not Playing:**

- Ensure a rhythm has been selected using the "RHYTHM" button.
- Check if the "STOP" button is engaged.

## SPECIFICATIONS

---

Model Number:	Sha-1955
Product Weight:	2.86 Kilograms
Package Dimensions:	54.86 x 44.96 x 13.97 cm
Recommended Age:	Ages 4+

## WARRANTY INFORMATION

---

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official Sharper Image website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

---

For technical assistance, replacement parts, or any questions regarding your Sharper Image Digital 6-Piece Electronic Drum Set, please contact Sharper Image customer support. Refer to the product packaging or the official Sharper Image website for current contact information.

