

[manuals.plus](#) /

- › [Superior Electronics](#) /
- › [Superior Hotel TV Universal Programmable Remote Control User Manual](#)

Superior Electronics 8054242080070

Superior Hotel TV Universal Programmable Remote Control User Manual

Model: 8054242080070

INTRODUCTION

This manual provides comprehensive instructions for the Superior Hotel TV Universal Programmable Remote Control, Model 8054242080070. This remote is specifically designed for hotel environments, featuring large buttons for ease of use and a disabled menu access button to prevent unauthorized changes to TV settings. It is programmable via PC for simple setup.



Image: Superior Hotel TV Universal Programmable Remote Control, showing its compact design and large buttons.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA (LR03) batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment. **Note:** Batteries are not included.
4. Replace the battery compartment cover until it clicks securely into place.

2. PC Programming

The remote control requires programming via a personal computer to function with your specific TV model. Follow these steps:

1. Visit the official programming software website: www.telecontrol.tv.
2. Download and install the programming software onto your PC.
3. Connect the remote control to your PC using a compatible USB cable (not included).
4. Follow the on-screen instructions within the software to select your TV brand and model, and program the remote control.
5. Once programming is complete, disconnect the remote control from your PC.

OPERATING INSTRUCTIONS

After successful programming, the remote control is ready for use. Its design focuses on essential functions for hotel guests.

- **Power Button:** Press to turn the TV on or off.
- **Channel Up/Down:** Use these buttons to change TV channels sequentially.
- **Volume Up/Down:** Adjust the TV's audio volume.
- **Mute Button:** Temporarily silence the TV audio.
- **Number Buttons (0-9):** Directly select TV channels.

Important Note: The menu access button is intentionally inactive on this remote control. This design prevents guests from altering TV settings, ensuring consistent operation within a hotel environment.

MAINTENANCE

Battery Replacement

When the remote control's performance degrades or it stops responding, replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always use new AAA (LR03) alkaline batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or submerging the remote in liquid.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly inserted and have sufficient charge. Replace if necessary.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Verify that the remote was programmed correctly for your TV model using the PC software.
- **Buttons not working:**
 - Some buttons, like the menu button, are intentionally disabled for hotel use.
 - If essential buttons are not working, re-program the remote control via PC.
 - Clean the remote control to ensure no debris is interfering with button presses.
- **Programming issues:**
 - Ensure your PC meets the minimum requirements for the programming software.

- Use a reliable USB cable for connection.
- Refer to the software's help section or [thetelecontrol.tv](#) website for specific programming guidance.

SPECIFICATIONS

Brand	Superior Electronics
Model Number	8054242080070
Compatible Devices	Television
Connectivity Technology	Radio Frequency (RF)
Special Feature	Pre-programmed (via PC)
Max Supported Devices	1
Number of Buttons	1 (referring to the main function set, not individual keys)
Maximum Range	10 Meters
Battery Description	AAA (LR03)
UPC / EAN	08054242080070

WARRANTY AND SUPPORT

Warranty Information

Specific warranty details for the Superior Hotel TV Universal Programmable Remote Control are not provided in this manual. Please refer to your purchase documentation or contact your vendor for warranty terms and conditions.

Technical Support

For technical assistance, programming software, and additional information, please visit the official website:

[www.telecontrol.tv](#)