



[Manuals.plus](#) /

› [Westinghouse](#) /

› Westinghouse WTO1010B 4-Slice Toaster Oven User Manual

Westinghouse WTO1010B

Westinghouse WTO1010B 4-Slice Toaster Oven User Manual

Model: WTO1010B

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Westinghouse WTO1010B 4-Slice Toaster Oven. Please read this manual thoroughly before first use and retain it for future reference.



Image: The Westinghouse WTO1010B 4-Slice Toaster Oven, featuring its compact design and included accessories.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or similar items.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Exercise extreme caution when removing tray or disposing of hot grease.
- This appliance is for household use only.

PRODUCT COMPONENTS

Your Westinghouse WTO1010B Toaster Oven includes the following components:

- **Toaster Oven Unit:** The main appliance body with heating elements and controls.
- **Baking Pan/Drip Tray:** Used for baking and collecting drips.
- **Oven Rack:** For holding food items or the baking pan.
- **Crumb Tray:** Removable tray located at the bottom to collect crumbs for easy cleaning.
- **Full View Glass Door:** Allows monitoring of cooking progress.
- **Control Knobs:** For selecting temperature, function, and timer settings.



Image: Detail of the control knobs on the Westinghouse WTO1010B, showing temperature, function, and timer settings.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the toaster oven and all accessories from the packaging. Remove any packing materials, stickers, or protective film.
2. **Placement:** Place the toaster oven on a stable, heat-resistant surface. Ensure there is adequate clearance (at least 4 inches) on all sides and above the oven for proper ventilation. Do not place it near flammable materials.
3. **Initial Cleaning:** Wipe the exterior of the oven with a damp cloth. Wash the baking pan, oven rack, and crumb tray in warm, soapy water. Rinse and dry thoroughly.
4. **First Use Burn-Off:** Before cooking food, operate the oven empty for approximately 15 minutes at the highest temperature setting (450°F) on the "Bake" function. This will burn off any manufacturing residues and odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.
5. **Insert Crumb Tray:** Slide the crumb tray into the bottom slot of the oven.
6. **Plug In:** Plug the power cord into a standard 120V AC electrical outlet.

OPERATING INSTRUCTIONS

The Westinghouse WTO1010B Toaster Oven features three control knobs:

- **Top Knob:** Temperature Control (150°F - 450°F)
- **Middle Knob:** Function Selector (Broil, Bake, Toast, Warm)
- **Bottom Knob:** Timer Control (Up to 15 minutes with Stay-On option)

General Operation:

1. Place food on the oven rack or baking pan. Ensure the crumb tray is in place.
2. Close the glass door securely.
3. Set the **Temperature Control** knob to the desired temperature.
4. Set the **Function Selector** knob to the desired cooking mode (Broil, Bake, Toast, Warm).
5. Set the **Timer Control** knob to the desired cooking time. The oven will begin heating.
 - For continuous cooking, turn the timer past the 15-minute mark to the "Stay-On" position.
 - When the timer reaches zero, a signal will sound, and the oven will automatically shut off.
6. Monitor food through the glass door. Use oven mitts when opening the door or removing food.

Specific Functions:

- **Toast:** Ideal for bread, bagels, and frozen waffles. Place items directly on the oven rack. Adjust the timer for desired browning.
- **Bake:** Use for casseroles, cookies, and reheating leftovers. Place food on the baking pan or an oven-safe dish on the rack. Set temperature and time as required.
- **Broil:** Suitable for browning the top of dishes, melting cheese, or cooking thin cuts of meat. Place food on the baking pan on the top rack position. Keep a close watch to prevent burning.
- **Warm:** Keeps food warm after cooking. Use a low temperature setting and the "Warm" function.



Image: The Westinghouse WTO1010B in operation, showing food being cooked inside the oven.

MAINTENANCE AND CLEANING

Regular cleaning will ensure optimal performance and extend the life of your toaster oven.

1. **Always Unplug:** Before cleaning, always unplug the toaster oven from the electrical outlet and allow it to cool completely.
2. **Crumb Tray:** Pull out the crumb tray from the bottom of the oven. Discard crumbs. Wash the tray in warm, soapy water, rinse, and dry thoroughly. Reinsert the tray.
3. **Oven Rack and Baking Pan:** Wash these accessories in warm, soapy water. For stubborn food residue, soak them before scrubbing. Rinse and dry completely.
4. **Interior:** Wipe the interior walls with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads, as they can damage the non-stick coating (if present) or surfaces.
5. **Exterior:** Wipe the exterior surfaces with a damp cloth. Dry thoroughly. Do not immerse the oven in water or any other liquid.
6. **Glass Door:** Clean the glass door with a soft cloth and a glass cleaner or mild soapy water. Avoid harsh chemicals.
7. **Heating Elements:** Do not attempt to clean the heating elements. If food splatters on them, it will usually burn off during operation.

TROUBLESHOOTING

Review the following common issues and solutions before contacting customer support.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the oven is securely plugged into a working outlet. Check household circuit breaker. Turn the timer knob to the desired cooking time or "Stay-On" position.
Food not cooking evenly.	Incorrect rack position; food too close to heating elements; uneven food placement.	Adjust rack position for optimal cooking. Ensure food is centered and not touching heating elements. Rotate food halfway through cooking if necessary.

Problem	Possible Cause	Solution
Smoke or burning smell during operation.	Food residue on heating elements or interior; crumb tray full; first use burn-off.	For first use, this is normal. For subsequent uses, unplug and allow to cool. Clean the crumb tray and interior thoroughly. Ensure no food is directly on heating elements.
Exterior gets very hot.	Normal operation for toaster ovens.	This is normal. Always use oven mitts and ensure adequate clearance around the oven. Do not touch hot surfaces.

SPECIFICATIONS

Feature	Detail
Model Name	WTO1010B
Brand	Westinghouse
Color	Black
Capacity	10 Liters (holds up to 4 slices of bread)
Product Dimensions (D x W x H)	7.95"D x 14.57"W x 7.95"H
Inner Dimensions (L x W x H)	10.24" x 9.06" x 6.55"
Wattage	1000 watts
Temperature Range	150°F - 450°F
Timer	15 minutes with Stay-On option and shut-off signal
Control Type	Knob
Special Features	Full View Glass Door, Broil, Bake, Toast, Warm functions
Included Components	Baking Pan/Drip Tray, Oven Rack, Crumb Tray
Power Source	Electric
Item Weight	6.16 Pounds
Material	Alloy Steel, Tempered Glass

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Westinghouse website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact Westinghouse customer service directly through their official channels.

Online Resources: [Westinghouse Store on Amazon](#)

