

[Manuals.plus](#) /

› [EasyAcc](#) /

› EasyAcc MC-3W Portable Speaker User Manual

EasyAcc MC-3W

EasyAcc MC-3W Portable Speaker User Manual

Model: MC-3W (P0463)

INTRODUCTION

Thank you for choosing the EasyAcc MC-3W Portable Speaker. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your speaker to ensure optimal performance and longevity. Please read this manual carefully before use and retain it for future reference.



Image: The EasyAcc MC-3W portable speaker, showcasing its compact design.

PRODUCT OVERVIEW

Key Features

- **Compact and Powerful:** Delivers rich sound with strong bass and clear treble from a 5W speaker and bass amplifier.
- **Multiple Playback Modes:** Supports Bluetooth, Micro SD card, AUX input, and FM Radio.
- **Extended Playtime:** Up to 10 hours of playback on a single charge with its built-in 1500 mAh rechargeable battery.
- **Hands-Free Calling:** Integrated microphone for convenient phone conversations.
- **Durable Design:** Features a metal casing for enhanced durability and a premium feel.

Package Contents

- 1 x EasyAcc MC-3W Portable Bluetooth Speaker

- 1 x Micro USB Charging Cable
- 1 x 3.5mm Audio Cable
- 1 x User Manual



Image: Contents of the EasyAcc MC-3W speaker package, including the speaker, charging cable, audio cable, and user manual.

COMPONENT IDENTIFICATION

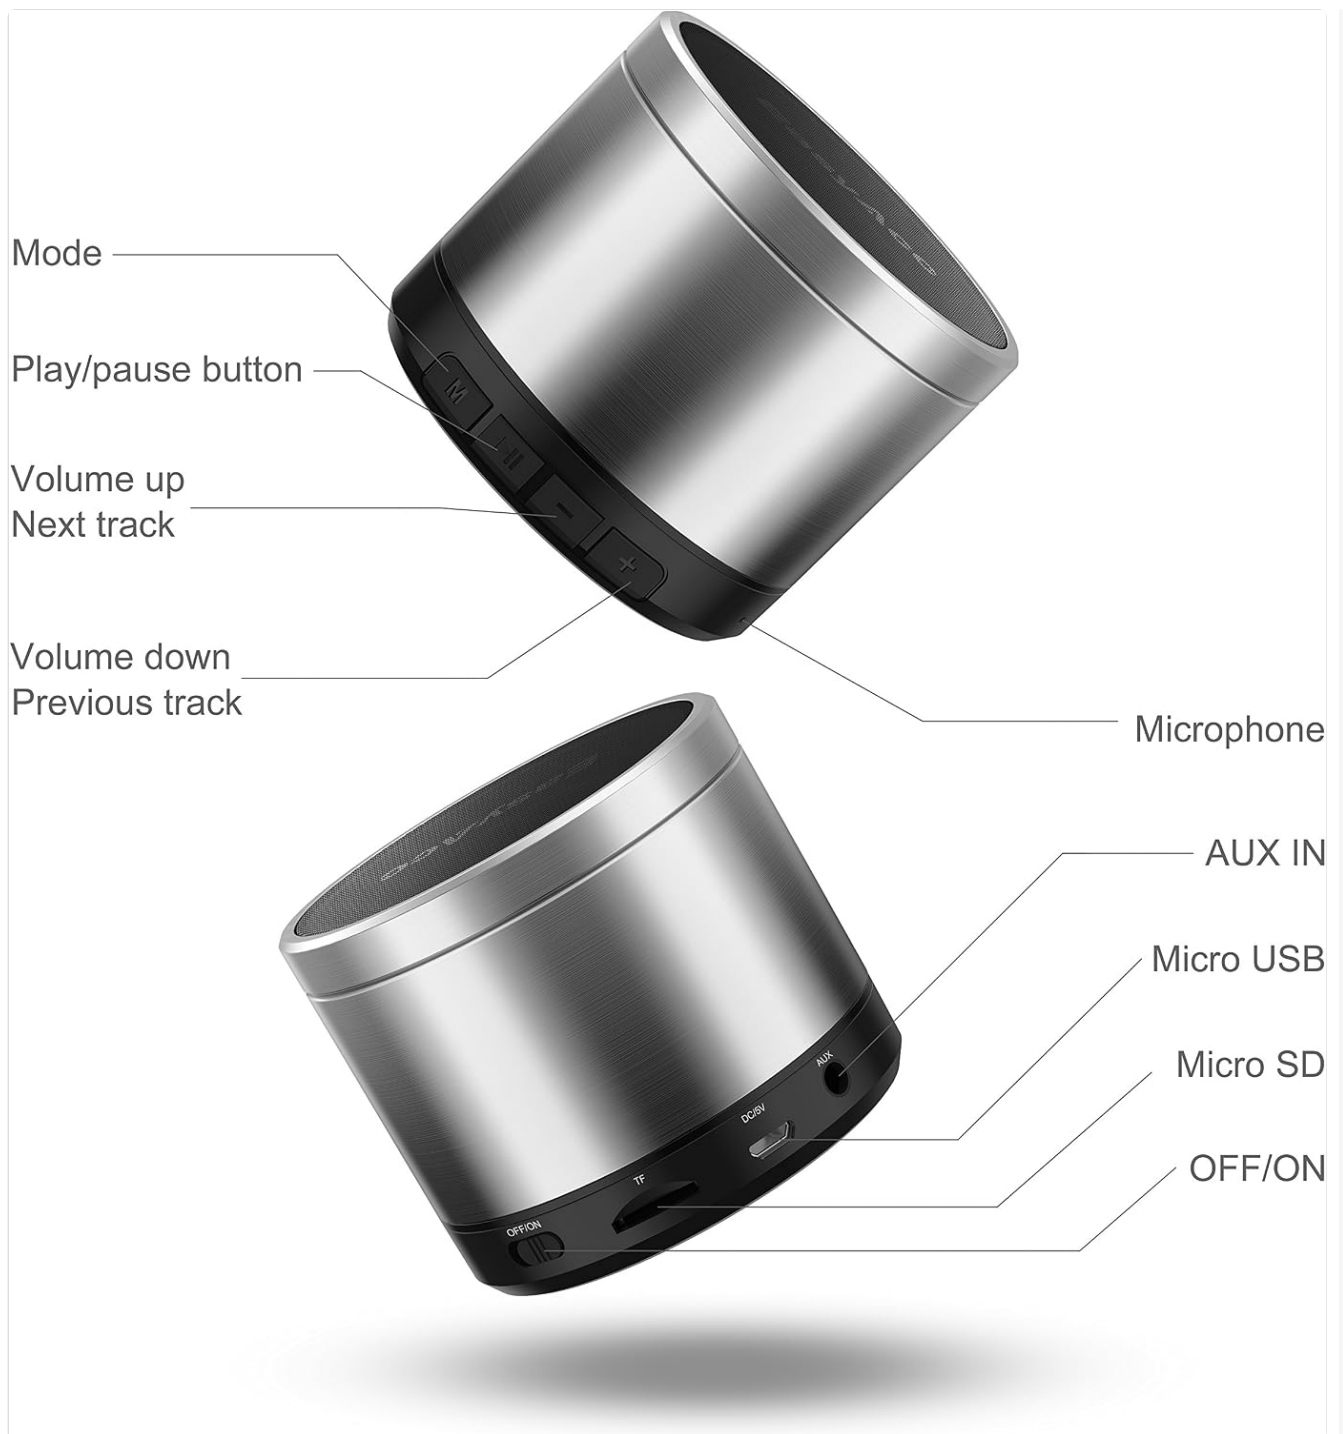 


Image: Detailed diagram of the EasyAcc MC-3W speaker, highlighting the Mode button, Play/Pause button, Volume Up/Next Track, Volume Down/Previous Track, Microphone, AUX IN port, Micro USB charging port, Micro SD card slot, and ON/OFF switch.

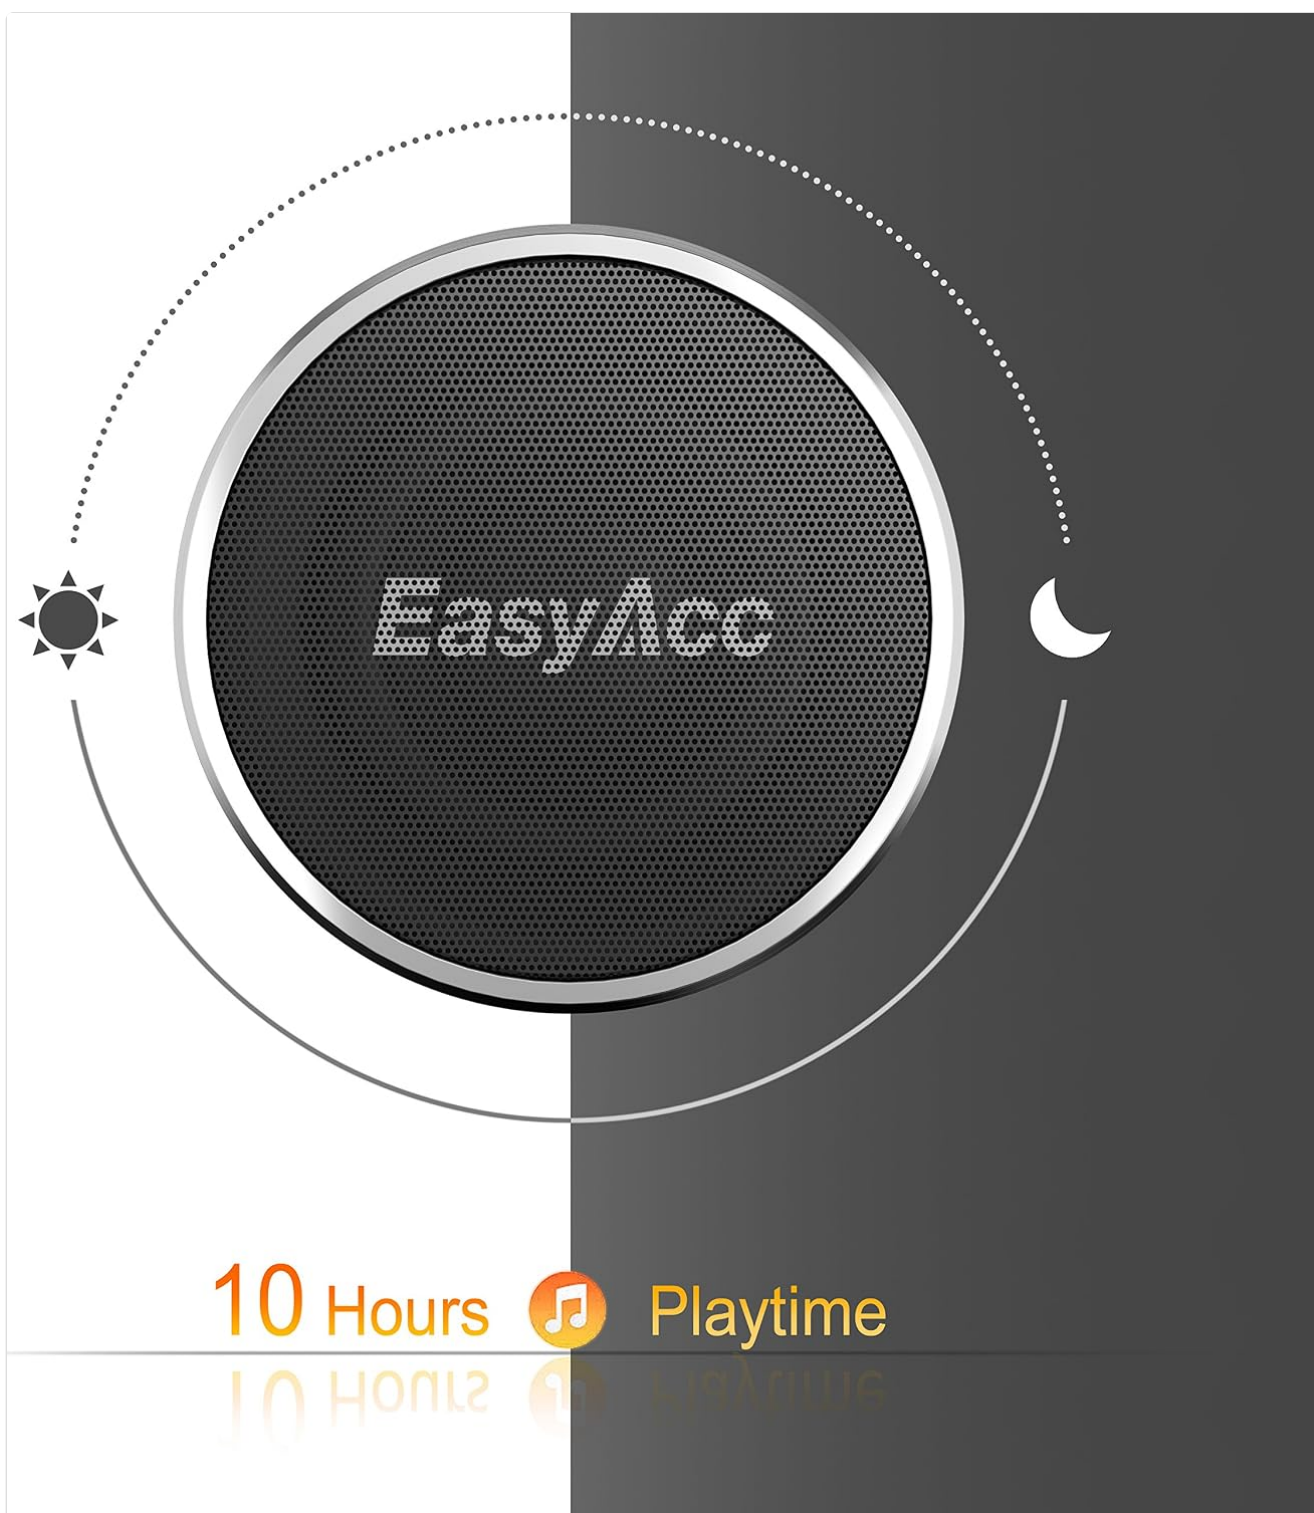 


Image: Exploded view illustrating the internal components of the EasyAcc MC-3W speaker, including the metal cover, 1500mAh battery, and 5W speaker driver.

SETUP

1. Charging the Speaker

1. Connect the Micro USB charging cable to the speaker's Micro USB port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged (approximately 2 hours), the light will change or turn off.
4. A full charge provides up to 10 hours of playback at normal volume.

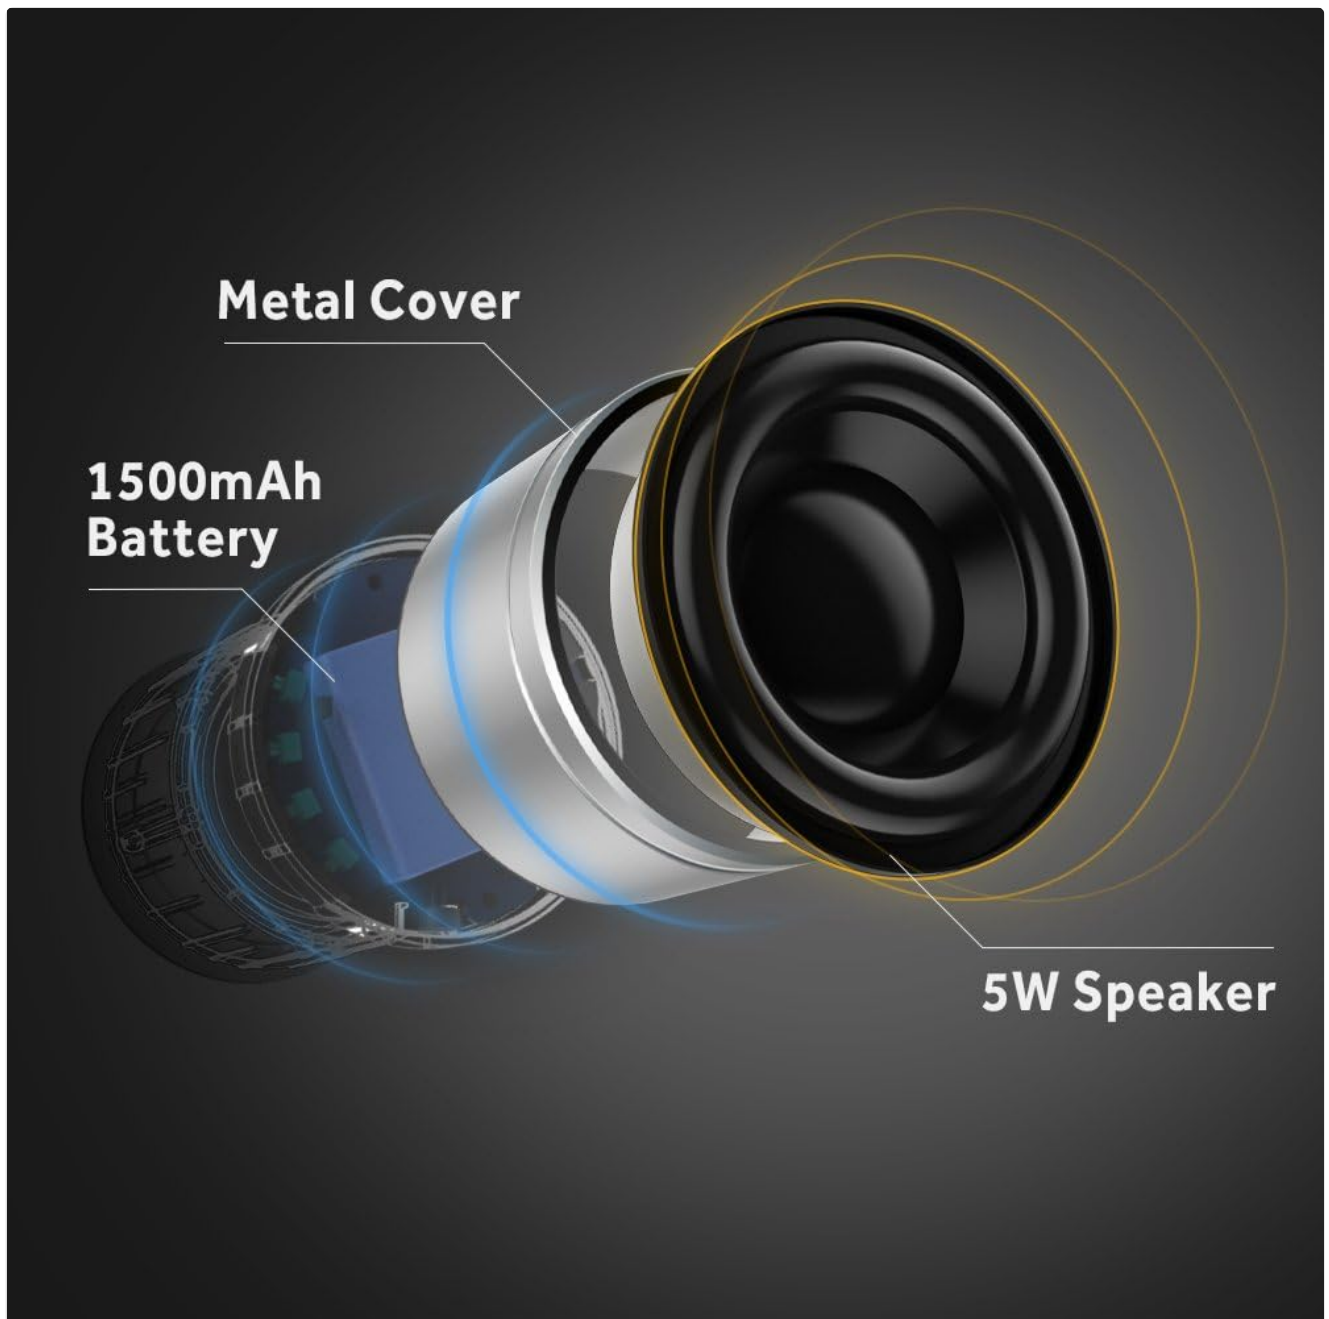 


Image: Graphic indicating the EasyAcc MC-3W speaker provides up to 10 hours of playtime on a single charge.

2. Powering On/Off

- To power on, slide the ON/OFF switch to the "ON" position. You will hear an audible prompt.
- To power off, slide the ON/OFF switch to the "OFF" position.

OPERATING INSTRUCTIONS



Image: Visual representation of the four playback modes available on the EasyAcc MC-3W speaker: Micro SD card, AUX input, FM Radio, and Bluetooth connectivity.

1. Bluetooth Mode

1. Ensure the speaker is powered on. It will automatically enter Bluetooth pairing mode if no other mode is active. The indicator light will flash.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "EasyAcc MC-3W" from the list. Once paired, you will hear a confirmation sound, and the indicator light will stop flashing.
4. You can now play audio from your device through the speaker.

2. Micro SD Card Mode

1. Insert a Micro SD card (with MP3 audio files) into the Micro SD card slot.
2. The speaker will automatically switch to Micro SD mode and begin playing music. If not, press the "Mode" button to cycle through modes until Micro SD mode is active.
3. Use the Volume Up/Next Track and Volume Down/Previous Track buttons to navigate through songs.

3. AUX Input Mode

1. Connect one end of the 3.5mm audio cable to the speaker's AUX IN port.
2. Connect the other end to the headphone jack of your audio device.
3. The speaker will automatically switch to AUX mode. If not, press the "Mode" button to cycle through modes until AUX mode is active.
4. Control playback and volume from your connected audio device.

4. FM Radio Mode

1. Connect the Micro USB charging cable to the speaker's Micro USB port. This cable acts as an antenna for better reception.
2. Press the "Mode" button repeatedly until FM Radio mode is activated.
3. To auto-scan and save stations, press and hold the "Play/Pause" button. The speaker will scan and store available FM stations.
4. Use the Volume Up/Next Track and Volume Down/Previous Track buttons to switch between saved stations.
5. *Note:* FM radio reception can vary based on location and environment.

5. Hands-Free Calling

- When connected via Bluetooth to a smartphone, the speaker can be used for hands-free calls.
- To answer an incoming call, press the "Play/Pause" button.
- To end a call, press the "Play/Pause" button again.
- To reject an incoming call, press and hold the "Play/Pause" button.

6. General Controls

- **Play/Pause:** Press the "Play/Pause" button to play or pause audio.
- **Volume Up:** Press and hold the "+" button to increase volume.
- **Volume Down:** Press and hold the "-" button to decrease volume.
- **Next Track/Station:** Short press the "+" button to skip to the next track (Bluetooth/SD mode) or next station (FM mode).
- **Previous Track/Station:** Short press the "-" button to go to the previous track (Bluetooth/SD mode) or previous station (FM mode).
- **Mode:** Press the "Mode" button to cycle between Bluetooth, Micro SD, AUX, and FM Radio modes.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the speaker before first use and at least once every three months if not used regularly. Avoid fully discharging the battery frequently.
- **Water Resistance:** This speaker is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the Micro USB cable.
No sound.	Volume is too low or muted. Incorrect mode selected. Device not properly connected.	Increase volume on both speaker and connected device. Press "Mode" button to select correct input. Re-pair Bluetooth or re-connect AUX cable.
Cannot pair via Bluetooth.	Speaker is not in pairing mode. Device Bluetooth is off. Speaker is already connected to another device.	Ensure speaker is in Bluetooth mode (flashing indicator). Turn on Bluetooth on your device. Disconnect from other devices or restart the speaker.
Poor FM radio reception.	No antenna connected. Weak signal in current location.	Ensure the Micro USB charging cable is connected to act as an antenna. Try moving to a different location for better signal. Perform auto-scan again.
Volume is too low at maximum.	Volume on the connected device is not at maximum.	Ensure the volume on your connected smartphone, tablet, or other audio source is set to its maximum level.

SPECIFICATIONS

Feature	Specification
Model Number	P0463
Wireless Communication Technology	Radiofrequency (Bluetooth)
Power Source	Battery
Product Dimensions	7.11 x 7.11 x 6.1 cm
Product Weight	308.44 g
Speaker Output Power	5 Watts
Speaker Connectivity	Auxiliary, Bluetooth
Average Battery Life	10 Hours
Charging Time	2 Hours
Battery Composition	Lithium Ion
Compatible Devices	Smartphone, Tablet

WARRANTY AND SUPPORT

The EasyAcc MC-3W Portable Speaker comes with an **18-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable performance under normal use.

For technical support, warranty claims, or any inquiries regarding your EasyAcc product, please contact EasyAcc customer service. Refer to the contact information provided with your purchase or visit the official EasyAcc website

for support details.

EasyAcc is committed to providing friendly and helpful customer service.

© 2023 EasyAcc. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question