#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Graco /
- Graco DuetSoothe Swing and Rocker Instruction Manual

#### Graco 1893776

### Graco DuetSoothe Swing and Rocker Instruction Manual

Model: 1893776

#### Introduction

This manual provides comprehensive instructions for the safe and proper use of your Graco DuetSoothe Swing and Rocker. Please read all instructions carefully before assembly and use, and keep this manual for future reference. The Graco DuetSoothe offers a versatile solution for soothing your child, functioning as both a multi-speed swing and a portable rocker.

#### IMPORTANT SAFETY INFORMATION

#### WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always use the restraint system. Adjust to fit snugly.
- · Never leave child unattended.
- Do not use this product if your child can sit up unassisted or attempts to climb out.
- · Do not use this product as a carrier.
- Always place the product on a flat, level surface.
- Discontinue use of the swing when child reaches 30 lbs (13.6 kg) or can sit up unassisted.
- Ensure all components are securely fastened before each use.
- Keep children away from the product during assembly and disassembly.

#### PRODUCT OVERVIEW AND COMPONENTS

The Graco DuetSoothe Swing and Rocker is designed for comfort and versatility. Familiarize yourself with the main components:



Image: The Graco DuetSoothe Swing and Rocker with key features labeled, including the mobile with soft toys, 5-point harness, plush body support, carry handles, multi-direction swing seat, and portable rocker base.

- Swing Frame: Provides stability and supports the swing mechanism.
- **Removable Rocker Seat:** Can be used independently or attached to the swing frame. Features a 5-point harness and plush body support.
- **Control Unit:** Located at the top of the swing frame, manages swing speeds, vibration, melodies, and sounds.
- Mobile: Overhead attachment with soft toys for engagement.
- Carry Handles: Integrated into the rocker seat for easy portability.

#### **SETUP**

The Graco DuetSoothe Swing and Rocker is designed for minimal assembly. Follow these steps for initial setup:

- 1. **Unpacking:** Carefully remove all components from the packaging. Verify all parts are present according to the packing list.
- 2. **Frame Setup:** Unfold the swing frame and ensure all locking mechanisms are engaged. Place the frame on a flat, level surface.

- 3. **Rocker Seat Attachment:** Align the rocker seat with the swing frame's attachment points and securely click it into place. Ensure it is firmly seated.
- 4. Power Connection: The unit can be powered by an AC adapter (if included) or 5 D batteries (not included). Connect the AC adapter to the control unit and a wall outlet, or install 5 D batteries into the battery compartment located on the rocker seat for vibration and in the control unit for swing functions.
- 5. **Mobile Attachment:** Attach the mobile to the designated slot on the control unit.



Image: A fully assembled Graco DuetSoothe Swing and Rocker, ready for use.

#### **OPERATING INSTRUCTIONS**

The Graco DuetSoothe offers multiple settings to comfort your child.

#### **Using as a Baby Swing**

- 1. **Placing Child:** Gently place your child in the seat and secure the 5-point harness. Adjust straps for a snug fit.
- 2. **Swinging Directions:** The seat can swing in 3 directions: side-to-side or front-to-back. Adjust the seat's orientation on the frame to select the desired motion.

- 3. **Swinging Speeds:** Use the control unit to select one of 6 available swinging speeds. Start with a lower speed and adjust as needed.
- 4. Vibration: Activate the 2-speed vibration feature via the control unit for additional soothing.
- 5. **Melodies and Sounds:** Select from 10 classical melodies or 5 soothing sounds using the control unit. Adjust volume as desired.

# 3 swinging directions so baby can sway side to side or front to back



Image: A parent gently interacting with a baby in the Graco DuetSoothe swing, illustrating the side-to-side and front-to-back swinging motions.

### **Soothing Settings**

6 SWINGING SPEEDS

10 CLASSICAL MELODIES

2 VIBRATION SETTINGS

5 SOOTHING SOUNDS



Image: A close-up of the Graco DuetSoothe control panel, highlighting the options for 6 swinging speeds, 10 classical melodies, 2 vibration settings, and 5 soothing sounds.

#### **Using as a Portable Rocker**

- 1. **Detaching Seat:** Press the release buttons on the side of the rocker seat to detach it from the swing frame
- 2. **Portability:** Use the integrated carry handles to move the rocker seat to another location.
- 3. **Rocker Function:** Place the rocker on a flat, level surface. The curved base allows for manual rocking.
- 4. **Vibration:** The 2-speed vibration feature can still be used when the seat is detached as a rocker, powered by the D batteries in the rocker base.









Portable Rocker

Image: A visual comparison showing the Graco DuetSoothe configured as a full baby swing and as a standalone portable rocker.

# Carry handles make it easy to move around the home



Image: A parent easily moving the portable rocker seat with a baby inside, demonstrating the utility of the carry handles.

#### MAINTENANCE AND CARE

Regular maintenance ensures the longevity and safety of your Graco DuetSoothe.

- Cleaning the Seat Pad: The seat pad is machine washable. Refer to the care tag for specific washing instructions. Use cold water on a delicate cycle. Do not bleach. Tumble dry low.
- Cleaning the Frame: Wipe the metal and plastic parts of the frame with a damp cloth and mild soap. Do not use abrasive cleaners.
- Toy Mobile: Spot clean the soft toys with a damp cloth.
- **Battery Replacement:** Replace D batteries when the swing or vibration functions weaken or stop. Ensure correct polarity.
- Storage: When not in use, store the product in a clean, dry place away from direct sunlight.

#### **TROUBLESHOOTING**

If you encounter issues with your Graco DuetSoothe, refer to the following common solutions:

Problem	Possible Cause	Solution
Swing does not operate	No power, low batteries, or incorrect battery installation.	Ensure AC adapter is securely plugged in or replace D batteries. Check battery polarity.
Vibration does not work	Low batteries in the rocker seat.	Replace D batteries in the rocker seat.
Swing motion is weak or inconsistent	Low batteries or child's weight exceeds limit.	Replace D batteries. Ensure child's weight is within the 5-30 lbs range.
Squeaking noise during operation	Friction between moving parts.	Apply a small amount of silicone-based lubricant to moving joints if necessary. Avoid oil-based lubricants.
Rocker seat not securely attached to swing frame	Improper alignment or obstruction.	Re-align the seat and press firmly until it clicks into place. Check for any obstructions.

#### **S**PECIFICATIONS

• Model Number: 1893776

Product Dimensions: 33"D x 43"W x 34"H
Item Weight: Approximately 21 pounds

Minimum Weight Recommendation: 5 pounds
 Maximum Weight Recommendation: 30 pounds

• Frame Material: Metal

Material Type: Metal, PlasticMaterial Composition: Polyester

• Power Source: AC Adapter (included) or 5 D Batteries (not included)

 
• Assembly Required: No (minimal setup required)

• Care Instructions: Machine wash seat pad, spot or wipe clean frame.

#### WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Graco website. For additional support, frequently asked questions, or to download a PDF version of this manual, please visit the Graco customer support portal.

You can also refer to the official user manual PDF.Graco DuetSoothe User Manual (PDF)



#### Graco EveryWay Soother with Removable Rocker Owner's Manual

Owner's manual for the Graco EveryWay Soother with Removable Rocker, providing essential safety warnings, assembly instructions, usage guidelines, and care information for this infant product.



#### Graco DuetSoothe Swing & Rocker Owner's Manual

Comprehensive owner's manual for the Graco DuetSoothe Swing & Rocker, providing essential safety warnings, assembly instructions, and usage guidelines for parents and caregivers.



#### Graco Soothe My Way™ Swing with Removable Rocker Owner's Manual

Comprehensive owner's manual for the Graco Soothe My Way™ Swing with Removable Rocker. Includes detailed instructions for assembly, safe usage, care, and maintenance. Learn about features, modes, and troubleshooting for this baby swing and rocker combination.



#### Graco Duet Glide Gliding Swing with Portable Rocker Owner's Manual

Comprehensive owner's manual for the Graco Duet Glide Gliding Swing with Portable Rocker, providing assembly instructions, safety warnings, usage guidelines, and care information.



#### Graco 4Ever DLX SnugLock 4-in-1 Car Seat Manual

Comprehensive user manual for the Graco 4Ever DLX SnugLock 4-in-1 car seat, covering installation, usage, safety features, and maintenance. Includes instructions for rear-facing, forward-facing, and booster seat modes.



#### Graco Recline N' Ride 3-in-1 Car Seat: Installation and Safety Manual

User manual for the Graco Recline N' Ride 3-in-1 Car Seat. Covers rear-facing, forward-facing, and booster modes, installation guides, safety warnings, and care instructions. Essential reading for ensuring child safety in vehicles.