

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Beetel](#) /
- › [Beetel M56 Corded Landline Phone User Manual](#)

Beetel M56

Beetel M56 Corded Landline Phone User Manual

Model: M56

INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, and maintenance of your Beetel M56 Corded Landline Phone. Please read this manual carefully before using the phone to ensure proper functionality and to maximize your user experience.



Image: Front view of the Beetel M56 Corded Landline Phone in black, showing the handset, keypad, and LCD display.

PACKAGE CONTENTS

Upon opening the package, verify that all components are present:

- Beetel M56 Landline Phone Unit
- Handset
- Coiled Handset Cord
- Line Cord
- User Manual

SETUP

1. Connecting the Phone

1. Connect one end of the coiled handset cord to the handset and the other end to the port labeled **"HANDSET"** on the phone base.
2. Connect one end of the line cord to the port labeled **"LINE"** on the phone base and the other end to your telephone wall jack.
3. (Optional) Insert 2 x 9V batteries into the battery compartment if you wish to retain time and date settings during power outages. Note that the phone functions without batteries for basic operation.

2. Initial Power On and Display

Once connected, the phone will power on automatically. The 16-digit LCD display will illuminate, showing the current time and date (if batteries are installed and set) or default information.



Image: Close-up view of the Beetel M56 phone's 16-digit LCD display, showing call information.

OPERATING INSTRUCTIONS

Making a Call

1. Lift the handset or press the **SPEAKER** button to get a dial tone.
2. Dial the desired phone number using the numeric keypad.
3. To end the call, replace the handset or press the **SPEAKER** button again.

Receiving a Call

When the phone rings, lift the handset or press the **SPEAKER** button to answer the call. The Caller ID feature will display the incoming number (if available from your service provider).

Caller ID Functionality

The Beitel M56 supports DTMF/FSK compatible Caller ID. The display shows incoming numbers, new calls, total calls, and repeat calls. You can check, erase, and call back for incoming/outgoing calls.



Image: The Beitel M56 phone displaying information related to incoming calls, highlighting its 30 incoming calls memory feature.



NEW/REPEAT/INCOMING/TOTAL CALLS DISPLAY



M56

Image: The Beetel M56 phone's display showing various call indicators such as new, repeat, incoming, and total calls.

Speaker Phone Operation

The phone features a two-way speakerphone with adjustable volume. Press the **SPEAKER** button to activate or deactivate the speakerphone function.



2-WAY SPEAKER

PHONE WITH VOLUME ADJUSTMENT



M56

Image: The Beetel M56 phone with a focus on the speakerphone button and its two-way audio capability.

Ringer Volume Control

Adjust the ringer volume using the dedicated switch located on the side or bottom of the phone base.



RINGER VOLUME CONTROL SWITCH



M56

Image: A view of the Beetel M56 phone highlighting the ringer volume control switch.

Redial Function

Press the **REDIAL** button to redial the last dialed number. The phone stores up to 31 digits for redial memory.

Mute Function

During a call, press the **MUTE** button to temporarily mute your microphone. The other party will not hear you. Press it again to unmute.

MAINTENANCE

- Keep the phone clean by wiping it with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- Do not expose the phone to excessive moisture, direct sunlight, or extreme temperatures.
- Ensure the cords are not tangled or pinched to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Line cord not connected properly; Service outage.	Check line cord connection; Contact your telephone service provider.
Caller ID not displaying	Caller ID service not subscribed; Incorrect phone settings.	Contact your service provider to activate Caller ID; Refer to phone settings for display options.
Low speaker volume	Speaker volume set too low.	Adjust speaker volume using the volume control.
Time/Date resets	Batteries not installed or low.	Install or replace 9V batteries.

SPECIFICATIONS

- **Model:** Beetel M56
- **Display:** 16 Digit LCD Display
- **Caller ID:** DTMF/FSK Compatible
- **Speaker Phone:** Two-way with adjustable volume
- **Memory:** 30 Incoming Calls, 5 Outgoing Calls, 31 Digit Redial
- **Ringer:** Adjustable volume control
- **Dimensions:** 20 x 16.2 x 8.5 cm
- **Weight:** 990 g
- **Power:** Line powered, optional 2 x 9V batteries for display retention
- **Color:** Black

WARRANTY AND SUPPORT

Warranty Information

This Beetel M56 Corded Landline Phone comes with a **12-month Beetel Warranty** from the date of purchase. Please retain your purchase receipt as proof of warranty.

Customer Support

For any technical assistance, troubleshooting, or warranty claims, please contact Beetel customer support. Refer to the official Beetel website or product packaging for the most current contact information.

You can also visit the official Beetel store on Amazon for more information: [Beetel Store](#)