

Oranier 9962 08

Oranier KFI 9962 TC Electric Cooktop User Manual

Model: 9962 08

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before installation and use. Keep this manual for future reference.

- Ensure the appliance is installed by a qualified technician.
- Do not operate the cooktop with wet hands.
- Keep children away from the appliance during operation.
- Do not place metallic objects on the induction zones.
- Disconnect the appliance from the power supply before cleaning or maintenance.
- The appliance is equipped with a **Child Lock**, **Overflow Protection**, **Overheat Protection** (for empty pots), **Small Object Detection**, **Residual Heat Indicator**, and **Operating Time Limit** for your safety.

2. PRODUCT OVERVIEW



Figure 2.1: Top view of the Oranier KFI 9962 TC Electric Cooktop. It features four induction cooking zones and a central touch control panel with digital displays for power levels and timers. The brand name "ORANIER" is visible at the bottom center.

The Oranier KFI 9962 TC is a built-in electric induction cooktop designed for modern kitchens. It features a sleek black glass ceramic surface and intuitive touch controls.

- **Cooking Zones:** 4 induction cooking zones.
- **Control Type:** Electronic Touch-Control.
- **Surface Material:** High-quality Glass Ceramic.
- **Color:** Black.

3. INSTALLATION AND SETUP

This appliance must be installed by a qualified electrician or authorized service technician in accordance with local regulations and standards.

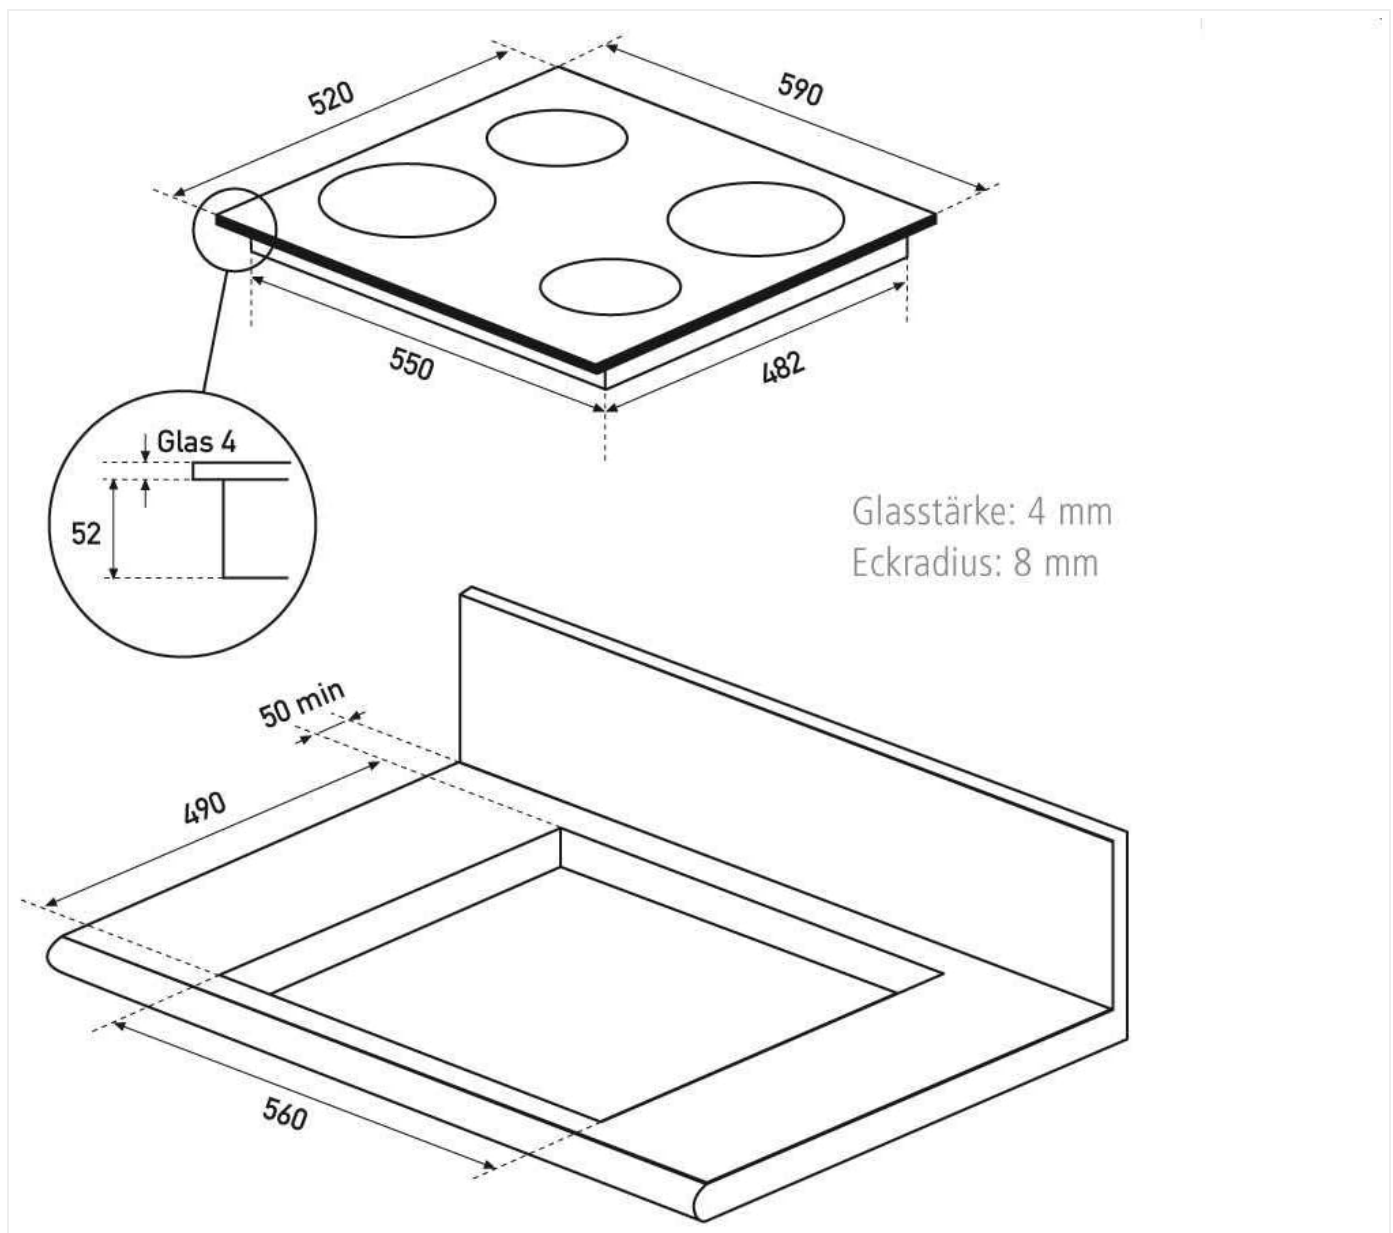


Figure 3.1: Dimensional drawing of the cooktop. The top view shows overall dimensions of 590mm width and 520mm depth. The side view illustrates the required niche dimensions: a minimum height of 52mm, a width of 560mm, and a depth of 490mm. The glass thickness is 4mm and corner radius is 8mm.

3.1 Niche Dimensions

- **Minimum Niche Height:** 52 mm
- **Maximum Niche Height:** 52 mm
- **Minimum Niche Width:** 560 mm
- **Maximum Niche Width:** 560 mm
- **Niche Depth:** 490 mm

3.2 Electrical Connection

The appliance is designed for a 400V, 50Hz electrical supply. It requires a 16A fuse. The connection cable length is 120 cm and comes without a plug. Direct wiring to a suitable electrical outlet is required.

4. OPERATING INSTRUCTIONS

4.1 Touch-Control Operation

The cooktop is operated via sensitive touch controls located on the glass ceramic surface. Ensure the control panel is clean and dry before use.

4.2 Power Levels and Booster Function

- Each cooking zone offers **9 power levels** for precise heat control.
- The **2x Booster function** provides a temporary increase in power for rapid heating, ideal for boiling water quickly.

4.3 Timer Functions

- The cooktop features a **4x Timer**, allowing you to set a cooking duration for up to 99 minutes for each zone independently.
- A separate **Minute Minder** function can be used as a general kitchen timer.

4.4 Pot Detection and Pot Size Recognition

The induction zones automatically detect the presence of a pot and its size, ensuring efficient energy transfer. Use only induction-compatible cookware.

4.5 Roasting Zone Function

The overlapping cooking zones can be combined to form a larger **roasting zone**, suitable for larger pots or griddle pans.

5. MAINTENANCE AND CLEANING

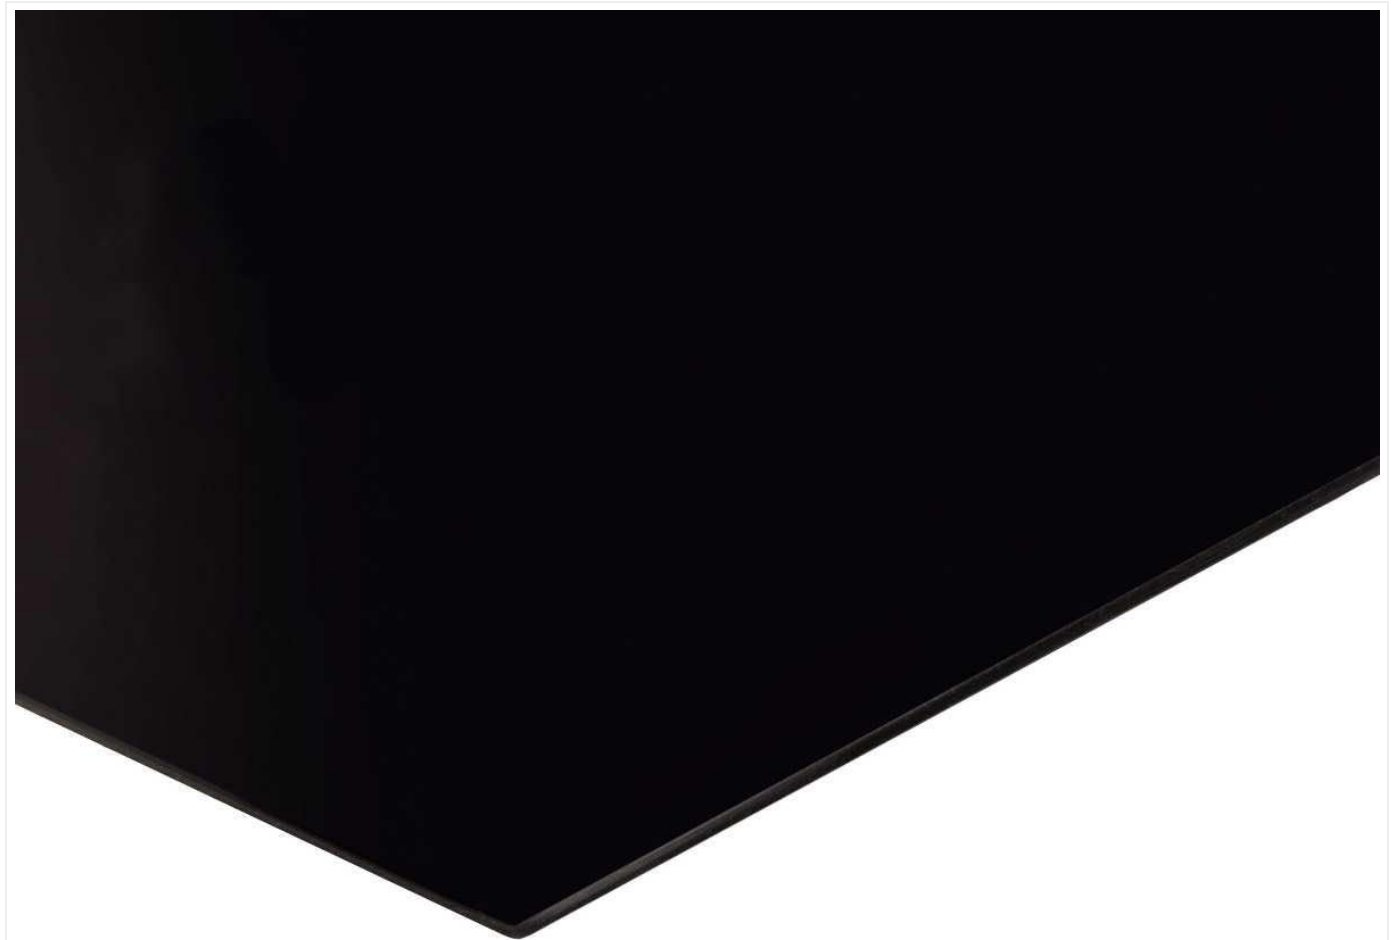


Abbildung: Kochfeld in rahmenloser Form

Zur schnellen Wärmeerzeugung verbunden mit der komfortablen Anwendung des Glaskeramik-Kochfeldes.

Figure 5.1: Close-up of the cooktop's frameless glass ceramic surface. This image emphasizes the smooth, easy-to-clean black finish of the cooktop.

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooktop.

- Always ensure the cooktop is cool and disconnected from the power supply before cleaning.
- Clean the glass ceramic surface with a soft cloth and a specialized ceramic hob cleaner.
- For stubborn stains, use a ceramic hob scraper, holding it at a shallow angle.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals.
- Wipe spills immediately to prevent them from burning onto the surface.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Child lock activated.	Check circuit breaker; Deactivate child lock as per operating instructions.
Induction zone not heating.	Non-induction compatible cookware; Pot not centered; Pot detection error.	Use induction-compatible pots; Center the pot on the zone; Remove and re-place the pot.
Error code displayed.	Specific internal error.	Refer to the full error code list in the comprehensive manual (if available) or contact service.
Cooktop switches off unexpectedly.	Overheat protection activated; Operating time limit reached.	Allow cooktop to cool down; Reset the cooktop.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	9962 08
Type	Built-in Electric Induction Cooktop
Control Type	Touch-Control
Number of Cooking Zones	4 Induction Zones
Surface Material	Glass Ceramic
Color	Black
Power Levels per Zone	9
Booster Function	Yes (2x)
Timer Function	Yes (4x, max. 99 minutes)
Minute Minder	Yes
Pot Detection	Yes
Pot Size Recognition	Yes
Roasting Zone	Yes (via overlapping zones)

Feature	Specification
Electrical Connection	400 V, 50 Hz
Fuse Protection	16 A
Connection Cable Length	120 cm (without plug)
Appliance Dimensions (W x D x H)	590 mm x 520 mm x 56 mm
Niche Dimensions (W x D x H)	560 mm x 490 mm x 52 mm
Gross Weight	9 kg
1st Cooking Zone (Front Left)	Induction, Ø 180 mm, 2.00 kW
2nd Cooking Zone (Rear Left)	Induction, Ø 180 mm, 1.40 kW
3rd Cooking Zone (Rear Right)	Induction, (dimensions not fully specified in input), (power not fully specified in input)

Note: Specifications are subject to change without notice. For precise details, refer to the product label or contact Oranier customer support.

8. WARRANTY AND SUPPORT

For warranty information, service requests, or technical support, please contact Oranier customer service or visit their official website. Keep your purchase receipt and model number (9962 08) handy when contacting support.

Oranier Official Website: www.oranier.com



© 2024 Oranier. All rights reserved.
This manual is for informational purposes only. Oranier is not responsible for any errors or omissions.

Related Documents - 9962 08

	ORANIER EBH130, EBH230, EBH380 Built-In Oven User and Installation Manual This manual provides comprehensive instructions for the installation, operation, and maintenance of ORANIER EBH130, EBH230, and EBH380 built-in ovens. It covers safety guidelines, appliance features, troubleshooting, and technical specifications.
	ORANIER Induktionskochfeld KF1900/KF1800 Bedienungs- und Installationsanleitung Umfassende Bedienungs- und Installationsanleitung für das ORANIER Induktionskochfeld Modell KF1900 und KF1800. Enthält Sicherheitshinweise, Bedienung, Reinigung, technische Daten und Einbauinformationen.



[ORANIER Einbau-Backofen Bedienungs- und Installationsanleitung](#)

Umfassende Bedienungs- und Installationsanleitung für ORANIER Einbau-Backöfen der Modelle EBS220, EBS320, EBS420, EBS900 und EBS920. Enthält Sicherheitshinweise, Installationsschritte, Bedienung, Wartung und technische Daten.



[Technische Dokumentation gemäß Verordnung \(EU\) 2015/1185](#)

Technische Dokumentation für das Einzelraumheizgerät ORANIER Arkona W+ 2.0 gemäß Verordnung (EU) 2015/1185, einschließlich technischer Spezifikationen, Emissionsdaten und Hinweise zur Installation und Entsorgung.



[ORANIER EKG900 Kühl-Gefrierkombination: Bedienungs- und Installationsanleitung](#)

Umfassende Bedienungs- und Installationsanleitung für die ORANIER EKG900 Kühl-Gefrierkombination, inklusive Sicherheitshinweisen, Betriebsanleitungen, Lagerung, Reinigung, Fehlerbehebung und technischen Daten.



[Oranier DHK660 Canopy Hood: Installation and User Manual](#)

Comprehensive installation and user manual for the Oranier DHK660 canopy kitchen hood, covering operation, maintenance, safety, and technical specifications.