

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Vivitar](#) /

› [Vivitar Women's Shaver PG-V007 Instruction Manual](#)

Vivitar PG-V007

Vivitar Women's Shaver

INSTRUCTION MANUAL

[Safety Information](#) [Package](#)

[Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. Safety Information

Please read all instructions carefully before using the Vivitar Women's Shaver. Keep this manual for future reference.

- Always use with caution to avoid cuts.
- Do not use near water while charging.
- Clean after each use to prevent bacterial growth.
- Avoid use in shower to prevent slipping.
- Keep out of reach of children.
- Do not disassemble or attempt to repair the shaver yourself. Contact customer support for assistance.
- Ensure the battery compartment is securely closed before use.

2. Package Contents

Verify that all items are present in the package:

- Vivitar Women's Shaver (Model PG-V007)
- 1 Lithium Ion Battery (pre-installed or separate)
- Instruction Manual



PG-V007R
DRY BATTERY

DC3V



MID#1451010

MADE IN CHINA



Image 1: Vivitar Women's Shaver PG-V007. This image displays the complete shaver unit, highlighting its ergonomic design and overall appearance.

3. Setup

3.1 Battery Installation

1. Locate the battery compartment cover, usually at the bottom of the shaver handle.
2. Twist or slide the cover to open it.
3. Insert the Lithium Ion battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover and secure it firmly.

3.2 Initial Charge (if applicable)

Although the product uses a Lithium Ion battery, it is recommended to fully charge the shaver before its first use to ensure optimal performance. Connect the charging cable (if included) to the shaver and a suitable power source. Refer to the charging indicator for status.

4. Operation

4.1 Turning On/Off

To turn on the shaver, slide the power switch located on the body of the unit to the "ON" position. To turn off, slide the switch to the "OFF" position.

4.2 Shaving Technique

- Ensure your skin is clean and dry for best results, though the shaver supports wet/dry application.
- Hold the shaver at a 90-degree angle to the skin.
- Gently glide the shaver against the direction of hair growth.
- Do not press too hard; the hypoallergenic stainless steel blades are designed to remove hair effectively with light pressure.
- For sensitive areas, stretch the skin taut to achieve a closer shave and prevent irritation.

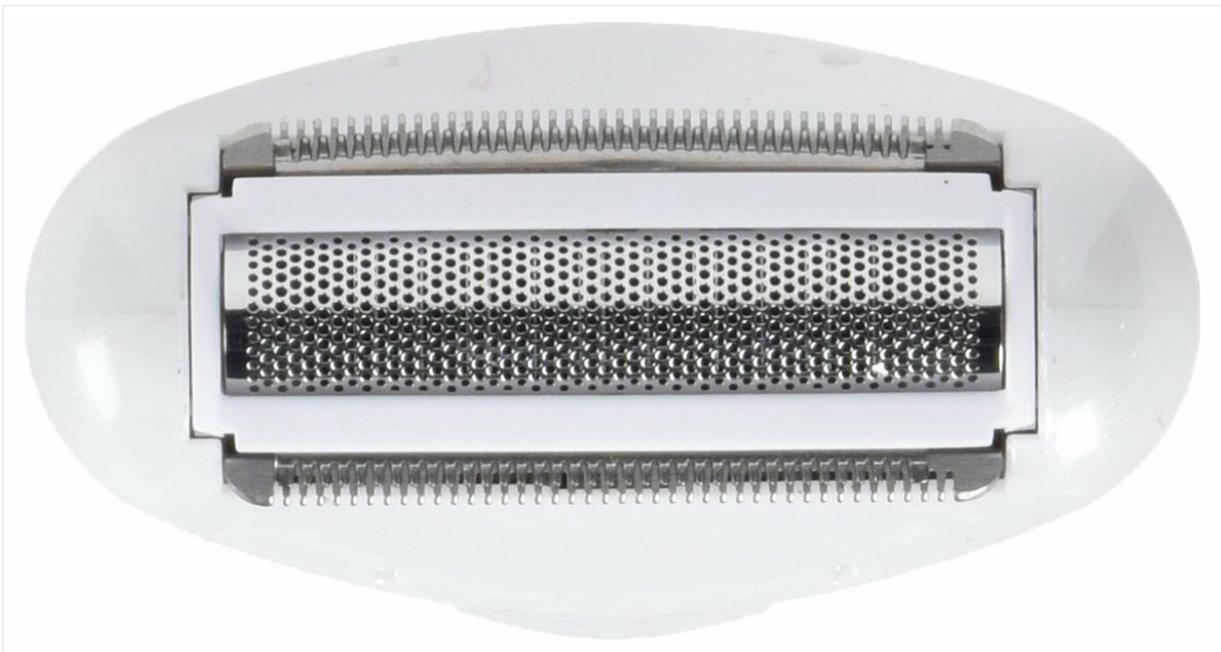


Image 2: Close-up of the Vivitar Women's Shaver foil head. This image shows the precision foil and trimmer blades, designed for a smooth shave.

4.3 Wet/Dry Use

The Vivitar Women's Shaver is designed for both wet and dry use, offering versatility. For wet shaving, you may use shaving cream or gel. Always ensure the shaver is completely dry before charging.

5. Maintenance

5.1 Cleaning the Shaver Head

Regular cleaning ensures optimal performance and hygiene. It is recommended to clean the shaver after each use.

1. Turn off the shaver and disconnect it from any power source.
2. Carefully remove the foil head assembly. This usually involves pressing release buttons on the sides or gently pulling it upwards.
3. Tap out any accumulated hair from the foil and cutter blades.
4. Use the small cleaning brush (if included) to brush away fine hairs from the blades and inside the shaver body.
5. Rinse the foil head and cutter blades under running water. Ensure all hair residue is removed.
6. Allow all parts to air dry completely before reassembling the shaver.
7. Once dry, reattach the foil head assembly securely.

Important: Do not use harsh chemicals or abrasive cleaners on the shaver. Do not immerse the entire shaver body in water unless explicitly stated as fully waterproof.

6. Troubleshooting

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is dead or incorrectly installed.	Check battery installation. Replace battery if necessary. Ensure battery compartment is closed securely.

Problem	Possible Cause	Solution
Shaver pulls hair or does not shave effectively.	Blades are dull or clogged with hair. Incorrect shaving technique.	Clean the shaver head thoroughly. Ensure you are shaving against the direction of hair growth with light pressure. Consider replacing the foil/cutter if blades are dull (replacement parts sold separately).
Shaver stops working unexpectedly.	Low battery. Overheating.	Replace or recharge the battery. Allow the shaver to cool down if it feels warm.
Irritation after shaving.	Skin sensitivity. Improper technique. Dirty shaver head.	Ensure skin is clean before shaving. Use light pressure. Clean shaver head regularly. Consider using a pre-shave lotion or post-shave balm.

7. Specifications

Feature	Detail
Model Number	PG-V007
Product Dimensions	4.25 x 2.1 x 7.75 inches
Item Weight	5.6 ounces
Power Source	Battery Powered
Battery Type	1 Lithium Ion battery (included)
Head Type	Foil
Blade Material	Stainless Steel
Additional Features	Cordless, Wet/Dry Application

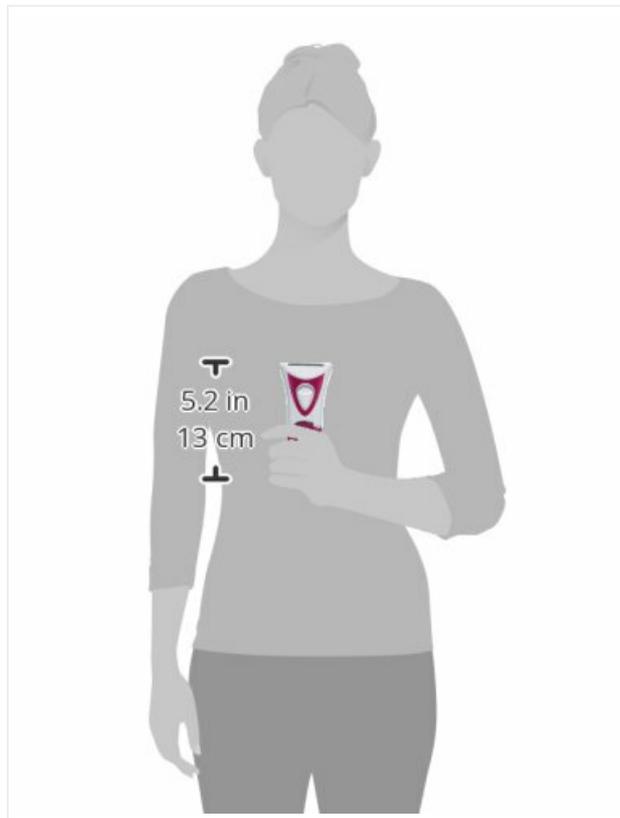


Image 3: Vivitar Women's Shaver demonstrating its compact size. This image provides a visual reference for the product's dimensions, showing it held in hand.

8. Warranty and Support

Vivitar products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Vivitar website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Vivitar Customer Service. Contact details can typically be found on the product packaging or the official Vivitar website.

Manufacturer: Sakar International/GNC