

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm XP70 Digital Camera User Manual

Fujifilm 16409856

Fujifilm XP70 Digital Camera User Manual

Model: 16409856

1. INTRODUCTION

Welcome to the user manual for your new Fujifilm XP70 Digital Camera. This compact and rugged camera is designed for adventure, offering exceptional durability and image quality in challenging environments. With its 16.4 megapixel sensor, 5x optical zoom, and wireless connectivity, the XP70 allows you to capture and share your experiences effortlessly.

The Fujifilm XP70 is built to withstand the elements, being waterproof up to 33 feet (10m), shockproof up to 5 feet (1.5m), freezeproof down to 14°F (-10°C), and dustproof. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your camera to ensure optimal performance and longevity.



Figure 1: Front view of the Fujifilm XP70 Digital Camera.

2. SETUP

2.1. Installing the Battery and Memory Card

Before using your camera, ensure the battery is properly installed and charged, and a memory card is inserted.

1. **Open the Battery/Memory Card Compartment:** Locate the compartment door on the side or bottom of the camera. Ensure the camera is powered off.
2. **Insert the Battery:** Insert the supplied NP-45S lithium-ion battery into the battery slot, aligning it correctly according to the polarity indicators. Ensure it clicks into place. *Note: If the camera does not power on, verify the battery is inserted with the correct orientation.*
3. **Insert the Memory Card:** Insert a compatible SD/SDHC/SDXC memory card into the memory card slot until it clicks. Ensure the card is facing the correct direction.
4. **Close the Compartment:** Securely close the compartment door until it latches. For waterproof integrity, ensure the seal is completely closed. The camera will alert you if the compartment is not properly sealed.

2.2. Charging the Battery

The supplied NP-45S lithium-ion battery can be charged using the included USB charger.

1. Connect the USB charger to a power source.
2. Connect the camera to the USB charger using the supplied USB cable.
3. The charging indicator light will illuminate. Charging is complete when the light turns off.

2.3. Initial Settings (Date/Time)

Upon first power-on or after the battery has been removed for an extended period, you may need to set the date and time.

1. Turn on the camera.
2. Follow the on-screen prompts to set the date, time, and time zone.
3. Use the directional buttons to navigate and the "MENU/OK" button to confirm selections.

3. OPERATING THE CAMERA



Figure 2: Back view of the Fujifilm XP70 Digital Camera with LCD and controls.

3.1. Basic Photography

- **Power On/Off:** Press the power button to turn the camera on or off.
- **Taking Photos:**
 1. Frame your shot using the LCD monitor.
 2. Press the shutter button halfway down to focus.
 3. Press the shutter button all the way down to take the picture.

- **Zoom:** Use the W (Wide) and T (Telephoto) buttons located near the LCD to adjust the 5x optical zoom.
- **Burst Mode:** The dedicated "Burst mode button" allows for continuous shooting at up to 10 frames/sec (max. 10 frames) or ultra-high-speed bursts at a maximum of 60 frames/sec (max. 70 frames).

3.2. Video Recording

The FinePix XP70 supports Full HD (1920 x 1080-pixel) video recording.

- **Start/Stop Recording:** Press the dedicated movie recording button to start and stop video capture.
- **High Speed Movie:** Capture fast-paced action at up to 380 frames per second for slow-motion playback.
- **Action Camera Mode:** This mode is ideal for recording footage during outdoor sports. When activated, the LCD monitor automatically turns off to conserve battery during recording.
- **Movie Editing:** The camera includes features like "movie trimming" to cut unwanted footage and "movie join" to combine multiple clips.
- **Audio Features:** Noise cancellation reduces zoom lens sounds, and a wind filter minimizes wind noise during recording.

3.3. Wireless Connectivity

Transfer images and videos wirelessly to your smartphone, tablet, or PC.

- **Smartphone/Tablet Transfer:**
 1. Install the free "FUJIFILM Camera Application" app on your mobile device.
 2. Press the Wi-Fi button on the back of the camera.
 3. Follow the app's instructions to connect and transfer images.
- **PC Transfer:** Use the camera's built-in Wi-Fi to save photos directly to your computer. Refer to the camera's on-screen instructions for PC connection.

3.4. Advanced Features

- **Advanced Filters:** Apply various creative filters to both movies and photos, such as Pop Color, Low Key, and Partial Color.
- **Scene Recognition:** The camera can automatically detect the scene type and optimize settings for the best possible shot. This feature is also available during movie recording.

4. MAINTENANCE

Proper maintenance ensures the longevity and performance of your Fujifilm XP70 camera, especially given its rugged design.

- **Cleaning the Camera Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water. Do not use organic solvents or strong chemicals.
- **Cleaning the Lens and LCD:** Use a lens brush or a blower to remove dust. For smudges, use a soft, clean lens cloth specifically designed for optical surfaces. Avoid touching the lens or LCD with your fingers.
- **Waterproof Seal Care:**
 - After use in water, rinse the camera thoroughly with fresh water to remove salt, sand, or chlorine.
 - Wipe the camera dry with a soft cloth.
 - Inspect the rubber seals around the battery/memory card compartment for any dirt, sand, or damage before and after each use in water. Clean any debris gently with a soft brush.
 - Do not apply oil or grease to the seals.
- **Battery Care:**
 - Store the battery in a cool, dry place when not in use.
 - Avoid fully discharging the battery frequently.

- If storing for an extended period, charge the battery to about 50% capacity.
- **Storage:** Store the camera in a cool, dry, and well-ventilated area, away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you encounter issues with your Fujifilm XP70, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Camera does not power on.	Battery is dead or incorrectly inserted.	Charge the battery. Ensure the battery is inserted with the correct orientation and fully seated.
Water inside the camera.	Battery/memory card compartment not properly sealed.	Immediately power off the camera, remove the battery and memory card. Allow the camera to dry completely in a well-ventilated area. Ensure the compartment is securely closed before future use. If water ingress persists, contact customer support.
Images are blurry.	Lens is dirty, camera shake, or incorrect focus.	Clean the lens. Hold the camera steady. Ensure the camera has focused before pressing the shutter button fully.
Cannot transfer photos wirelessly.	Incorrect Wi-Fi settings or app issues.	Ensure Wi-Fi is enabled on both camera and device. Reinstall the FUJIFILM Camera Application. Check network settings on your PC.

6. SPECIFICATIONS

Key technical specifications for the Fujifilm XP70 Digital Camera.

- **Model Name:** Fujifilm XP70
- **Model Number:** 16409856
- **Sensor:** 16.4 Megapixel CMOS sensor
- **Optical Zoom:** 5x (28-140mm equivalent)
- **Digital Zoom:** 2x
- **Display:** 2.7-inch LCD
- **Image Stabilization:** Sensor-shift
- **Water Resistance:** Waterproof to 33ft (10m)
- **Shock Resistance:** Shockproof to 5ft (1.5m)
- **Freeze Resistance:** Freezeproof to 14°F (-10°C)
- **Dust Resistance:** Dustproof
- **Video Resolution:** Full HD 1080p
- **Connectivity:** Wi-Fi, USB 2.0
- **Battery Type:** NP-45S Lithium-ion battery
- **Battery Life (approx.):** 210 photos
- **Dimensions (Item Height):** 2.64 inches
- **Weight:** 0.39 Pounds
- **Supported File Format:** JPEG (Exif Ver 2.3)
- **Memory:** SD/SDHC/SDXC card compatible (99 MB internal memory)

7. WARRANTY AND SUPPORT

7.1. Warranty Information

The Fujifilm XP70 Digital Camera comes with a **90-Day Fujifilm Warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or failure to follow the instructions in this manual.

7.2. Customer Support

For further assistance, technical support, or service inquiries, please visit the official Fujifilm support website or contact their customer service department.

Online Support: www.fujifilm.com/us/en/consumer/support (Example link, actual link may vary)

© 2024 Fujifilm. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00HGE3D2K>

More documents and user manuals: <https://manuals.plus/>