

Fujifilm XP70

Fujifilm XP70 Digital Camera User Manual

Model: XP70

INTRODUCTION

The Fujifilm FinePix XP70 is a rugged digital camera designed for active use in various environments. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your camera to ensure optimal performance and longevity.

Key features of the XP70 include:

- **Four-Way Protection:** Waterproof to 33ft (10m), Shockproof to 5ft (1.5m), Freezeproof to 14°F (-10°C), and Sand/dustproof.
- **High-Resolution Sensor:** 16.4 megapixel CMOS sensor for clear images.
- **Optical Zoom:** 5x optical zoom (28-140mm equivalent) for versatile shooting.
- **Wireless Connectivity:** For instant image and movie sharing.
- **Full HD Movie Capture:** Record videos in 1080p resolution.

SETUP

1. Installing the Battery

The Fujifilm XP70 uses a rechargeable battery. Ensure the battery is fully charged before first use.

1. Locate the battery/memory card compartment cover on the side of the camera.
2. Slide the lock switch to the open position and open the cover.
3. Insert the battery with the correct orientation, ensuring it clicks into place.
4. Close the cover securely and slide the lock switch to the closed position. Ensure the seal is tight to maintain waterproofing.

2. Inserting a Memory Card

The camera supports SD, SDHC, and SDXC memory cards. A memory card is required to store photos and videos.

1. Open the battery/memory card compartment cover as described above.
2. Insert the memory card into the slot with the contacts facing the correct direction until it clicks.
3. Close the compartment cover securely.

3. Initial Power On

Press and hold the power button until the LCD screen turns on. Follow any on-screen prompts for initial setup, such as setting the date and time.



Image: Front and top view of the Fujifilm XP70 Digital Camera, showing the lens, LCD screen, and main controls. This view helps in identifying the camera's primary components for setup.

OPERATING THE CAMERA

1. Taking Photos

To capture still images:

1. Turn on the camera.
2. Select your desired shooting mode using the mode button or menu. The camera offers various modes including Scene Recognition (SR Auto) for automatic settings, and fun modes like Pop Color or Partial Color.
3. Frame your shot using the 2.7-inch LCD screen.
4. Press the shutter button halfway to focus, then press it fully to take the picture.
5. For continuous shooting, hold down the shutter button. The camera can capture up to 10 frames per second.

2. Recording Videos

To record Full HD (1080p) videos:

1. Turn on the camera.
2. Press the dedicated movie recording button to start recording.
3. Press the movie recording button again to stop.
4. You can capture still images while recording video.

3. Wireless Connectivity

The XP70 features Wi-Fi connectivity for sharing images and videos with a smartphone or tablet.

1. Install the Fujifilm Camera Remote app on your smartphone or tablet.
2. On the camera, navigate to the Wi-Fi settings in the menu.
3. Follow the on-screen instructions on both the camera and your smart device to establish a connection.
4. Once connected, you can transfer photos and videos or use your smart device as a remote control.

MAINTENANCE

1. Cleaning the Camera

Regular cleaning helps maintain the camera's performance and appearance.

- **Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly.
- **Lens:** Use a lens brush or a blower to remove dust. For smudges, use a lens cleaning cloth and lens cleaning solution. Avoid touching the lens directly with your fingers.
- **LCD Screen:** Gently wipe with a soft, dry cloth.

2. Waterproofing Seals

To ensure the camera remains waterproof, regularly inspect the seals on the battery/memory card compartment and any other covers.

- Ensure no sand, dirt, or debris is present on the seals before closing compartments.
- After using the camera in water, rinse it with fresh water and dry it thoroughly before opening any compartments.
- Avoid exposing the seals to extreme temperatures or sharp objects.

TROUBLESHOOTING

If you encounter issues with your Fujifilm XP70, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery fully. Reinsert the battery correctly.

Problem	Possible Cause	Solution
Cannot take pictures.	Memory card is full, locked, or not inserted.	Delete unnecessary files, unlock the memory card, or insert a new card.
Images are blurry.	Camera shake, incorrect focus, or dirty lens.	Hold the camera steady. Ensure proper focus. Clean the lens.
Water inside the camera.	Compartment cover not properly sealed.	Immediately power off the camera, remove the battery and memory card, and allow it to dry completely. Contact customer support if the issue persists. Always ensure seals are clean and covers are securely locked before water exposure.
Wi-Fi connection fails.	Incorrect app settings or camera Wi-Fi mode.	Ensure the Fujifilm Camera Remote app is updated. Re-establish the connection from both the camera and the smart device.

SPECIFICATIONS

Detailed technical specifications for the Fujifilm XP70 Digital Camera:

- **Sensor:** 16.4 MP 1/2.3-inch CMOS
- **Lens:** 5x Optical Zoom (28-140mm equivalent)
- **Display:** 2.7-inch LCD (460,000 dots)
- **Image Stabilization:** Sensor-shift
- **Waterproof:** Up to 33 ft (10 m)
- **Shockproof:** Up to 5 ft (1.5 m)
- **Freezeproof:** Up to 14°F (-10°C)
- **Dustproof:** Yes
- **Video Resolution:** Full HD 1080p
- **Connectivity:** Wi-Fi, USB, Micro HDMI (Type D)
- **Memory Card:** SD/SDHC/SDXC
- **Continuous Shooting:** 10 fps
- **ISO Sensitivity:** 100-6400 (Expanded)
- **Shutter Speed:** 4 seconds to 1/2000 seconds
- **Dimensions (Approx.):** 0.39 Pounds (Item Weight)

WARRANTY AND SUPPORT

Warranty Information

The Fujifilm XP70 Digital Camera comes with a **90-Day Fujifilm Warranty**. Please retain your proof of

purchase for warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or failure to follow the instructions in this manual.

Customer Support

For technical assistance, service, or warranty inquiries, please contact Fujifilm customer support through their official website or the contact information provided with your product packaging. You may need your camera's model number (XP70) and serial number when contacting support.