

Peg Egg Pedi Spin

Peg Egg Pedi Spin Callus Remover Instruction Manual

Model: Pedi Spin

INTRODUCTION

Thank you for choosing the Peg Egg Pedi Spin Callus Remover. This device is designed to gently and effectively remove calluses and dry skin from your feet, providing a smoother and more comfortable feel. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

This package includes two Pedi Spin units, allowing for convenient use or as a spare.

PRODUCT OVERVIEW

Key Features:

- Two adjustable speeds for customized treatment.
- Ergonomic design for comfortable handling.
- Gentle on sensitive skin while effectively removing calluses.
- Includes one Filling Plate and one Finishing Head.
- Comes with 12 replacement Finishing Pads for extended use.

Components:

The Pedi Spin unit consists of a main body, a Filling Plate, and a Finishing Head. The Filling Plate is used for initial, more aggressive callus removal, while the Finishing Head, with its pads, provides a smoother finish.



Image: Two Pedi Spin devices in their retail packaging, highlighting the product's features and design. Each package contains one Pedi Spin unit, a filling plate, and a finishing head.

SETUP

1. **Battery Installation:** Locate the battery compartment on the Pedi Spin unit. Insert the required batteries (not included) according to the polarity indicators (+/-). Securely close the battery compartment.
2. **Attaching the Head:** Choose between the Filling Plate or the Finishing Head. Align the chosen head with the spindle on the Pedi Spin unit and gently press until it clicks into place. Ensure it is securely attached before use.
3. **Preparing for Use:** Ensure your feet are clean and dry before using the Pedi Spin.

OPERATING INSTRUCTIONS

1. **Power On:** Locate the power switch on the Pedi Spin unit. Slide it to the "ON" position. The device will start operating at its default speed.
2. **Adjusting Speed:** If your model features two speeds, use the speed selector switch (if present) to toggle between the lower and higher speed settings as desired for comfort and effectiveness.
3. **Application:** Gently apply the rotating head to the areas of your feet with calluses or dry skin. Move the device in small, circular motions, applying light pressure. Do not press too hard, as this can cause discomfort or irritation.
4. **Target Areas:** Focus on heels, soles, and toes where calluses typically form.
5. **Duration:** Use for short periods, checking your skin frequently. Stop immediately if you experience any pain or discomfort.
6. **Post-Treatment:** After use, turn off the device. Wipe your feet clean to remove any skin debris. For best results, apply a moisturizing cream to your feet.

MAINTENANCE AND CLEANING

1. **Cleaning the Device:** After each use, ensure the Pedi Spin is turned off. Detach the Filling Plate or Finishing Head. Use a small brush (often included) or a dry cloth to remove any accumulated skin debris from the head and the device's main body. Do not submerge the main unit in water.
2. **Replacing Finishing Pads:** The Finishing Head uses disposable pads. When a pad becomes worn

or less effective, peel it off and replace it with a new one from the included 12 replacement pads.

3. **Storage:** Store the Pedi Spin in a cool, dry place, away from direct sunlight and moisture.
4. **Battery Care:** If the device will not be used for an extended period, remove the batteries to prevent leakage and damage.

TROUBLESHOOTING

- **Device Not Turning On:**

- Check if batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure the power switch is fully in the "ON" position.

- **Reduced Performance:**

- The Filling Plate or Finishing Head may be worn. Replace the Finishing Pad or the entire head if necessary.
- Batteries may be low. Replace them.
- Ensure the head is clean and free of debris.

- **Skin Irritation:**

- Reduce pressure during use.
- Do not use on broken, irritated, or sensitive skin.
- Limit usage time.

SPECIFICATIONS

Feature	Detail
Brand	Peg Egg
Model	Pedi Spin
ASIN	B00HHIUG84
UPC / GTIN	754502022922
Power Source	Battery Operated (Not Electric/Corded)
Color	White
Item Form	Roller
Package Dimensions	11 x 10.5 x 3.2 inches
Item Weight	15.2 ounces
Unit Count	1.00 Count (per Pedi Spin unit)

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Peg Egg

For further assistance, you may visit the product's page on Amazon:[Amazon Product Page](#)

© 2023 Peg Egg. All rights reserved.